


## TWEETER INSPECTION

id092000808100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the side speaker grille. (See SPEAKER GRILLE REMOVAL/INSTALLATION.)
3. Remove the tweeter. (See TWEETER REMOVAL/INSTALLATION.)
4. Verify that the resistance between the tweeter terminals is as indicated in the table.
  - If not as indicated in the table, replace the tweeter.

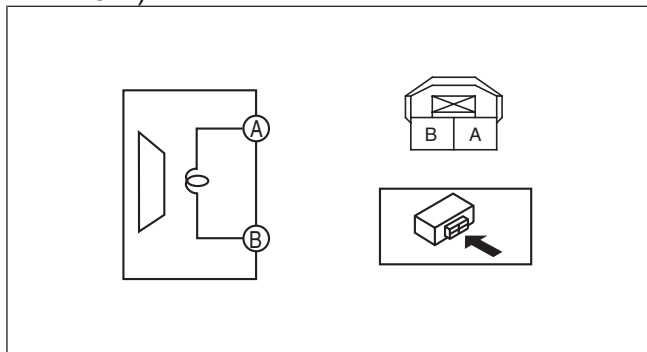

ac5wzw00005605

### Without Bose®

○○ : Resistance

Test condition	Terminal		Resistance (ohm)
	A	B	
Under any condition	○○		3.4—4.6

am5ezw00006717

### With Bose®

○○ : Resistance

Test condition	Terminal		Resistance (ohm)
	A	B	
Under any condition	○○		3.24—3.96

ac5uuw00002876