

FRONT DOOR LATCH SWITCH INSPECTION


id091400511400

1. Perform the front door glass preparation. (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Remove the following parts:
 - (1) Inner garnish (See INNER GARNISH REMOVAL/INSTALLATION.)
 - (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
 - (3) Front door glass (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
 - (4) Front door module panel (See FRONT DOOR MODULE PANEL REMOVAL/INSTALLATION.)
 - (5) Front door key cylinder (See FRONT DOOR KEY CYLINDER REMOVAL/INSTALLATION.)
 - (6) Front door latch and lock actuator (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)
4. Verify that the continuity is as indicated in the table.

○—○ : CONTINUITY

DOOR LATCH SWITCH	TERMINAL	
	LH:L RH:B	LH:J RH:D
LATCH		
UNLATCH	○—○	○—○

ac5jjw00000021

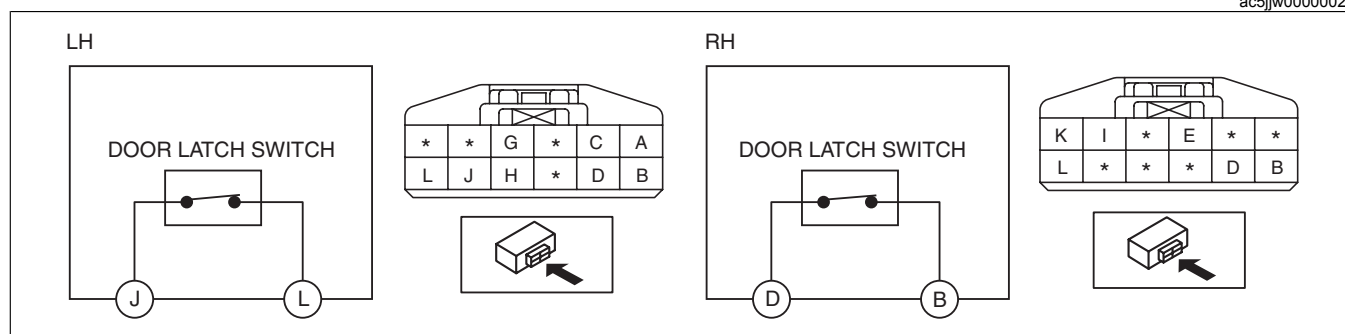


ac5jjw00000019

- If not as indicated in the table, replace the front door latch and lock actuator.

Note

- When inspecting the latch side of the front door latch switch, press in the latch lever using a flathead screwdriver and set it to the latched position.

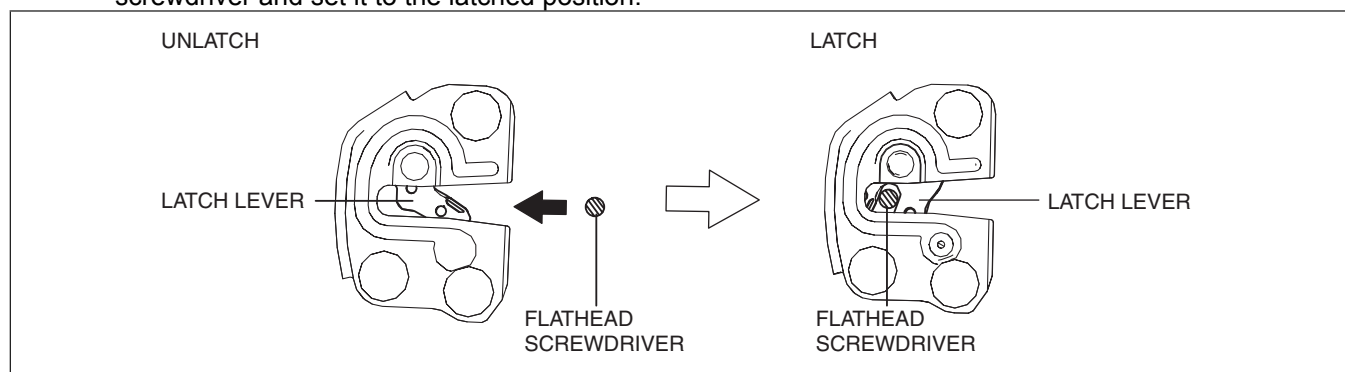

ac5jjw00000020