

LF CONTROL UNIT

id091400111400

Purpose


- The keyless beeper and keyless antenna are controlled by the input/output signals from the start stop unit.

Function

- The LF control unit controls the keyless beeper sound based on the signal from the start stop unit.
- The LF control unit sends the request signal from the keyless antenna based on the signal from the start stop unit.

Construction

- Installed inside the front side trim.

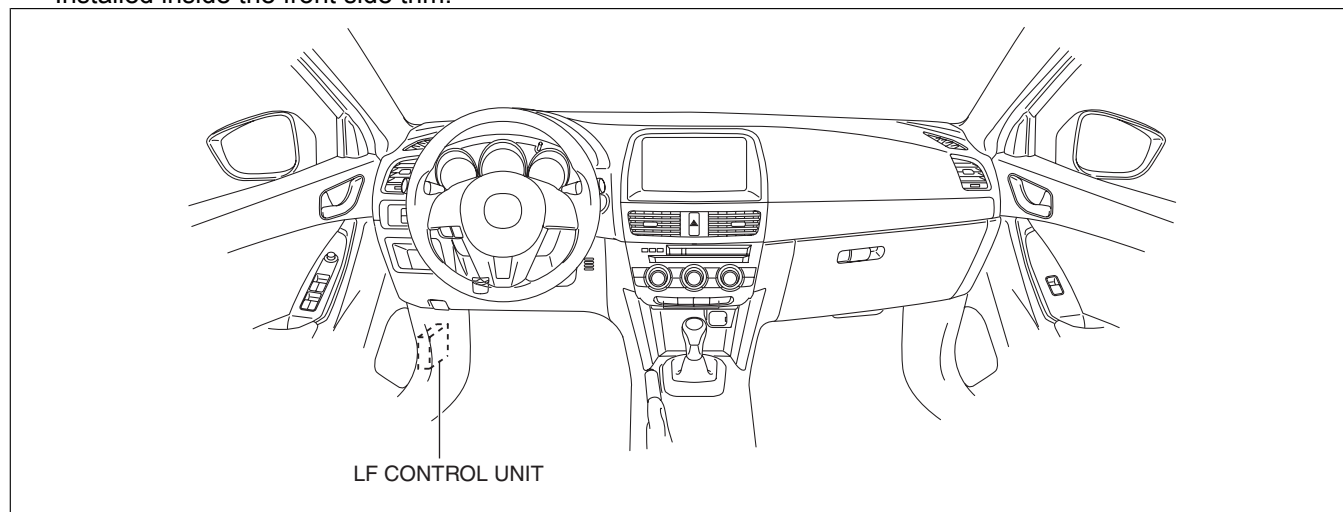


ac5wzn00001413

Operation

Keyless beeper control


- The LF control unit sends the beeper sound request signal from the start stop unit.
- The LF control unit sounds the keyless beeper when it receives the beeper sound request signal.

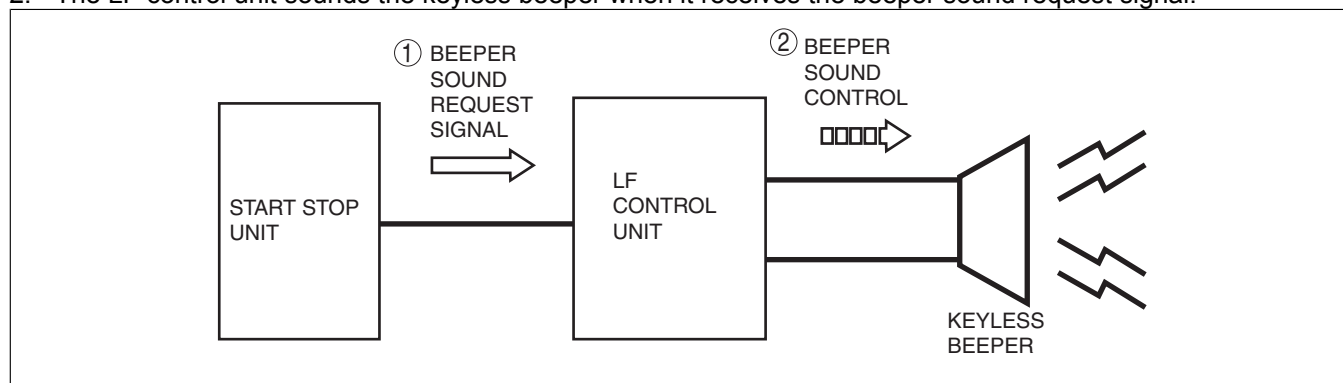

ac5wzn00001411

Keyless antenna control

- The LF control unit sends the request send signal from the start stop unit.
- The LF control unit sends the request signal from the keyless antenna when it receives the request send signal.

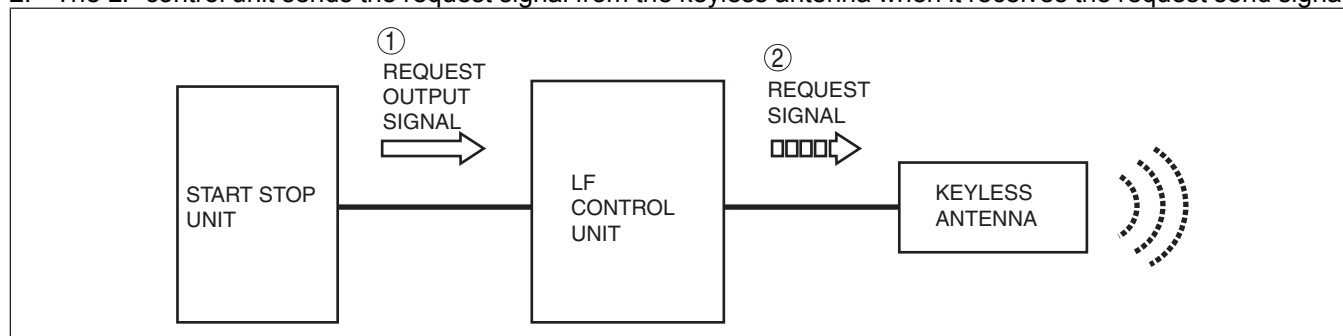

ac5wzn00001414

Fail-safe

- Function not equipped.