


SUNROOF SWITCH INSPECTION

id091500800300

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the map light. (See MAP LIGHT REMOVAL/INSTALLATION.)
3. Verify that the continuity between the sunroof switch terminals is as indicated in the table.

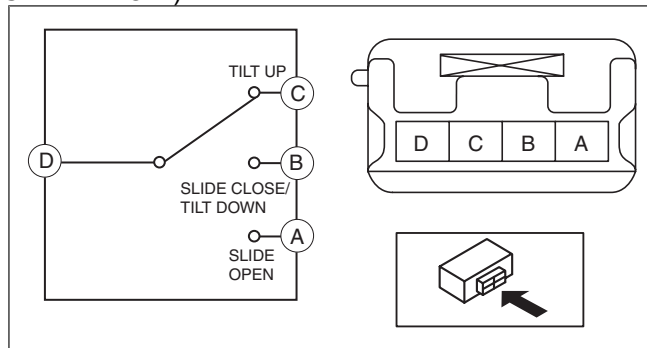

ac5wzw00002996

- If not as indicated in the table, replace the sunroof switch.

○—○:continuity

Switch position	Terminal			
	A	B	C	D
SLIDE OPEN	○			○
SLIDE CLOSE / TILT DOWN		○		○
TILT UP			○	○

ac5wzw00001725