


TRANSAXLE CASE AND CLUTCH HOUSING DISASSEMBLY

id051500168200

1. Disassemble the transaxle case component and clutch housing component in the order shown in the figure.

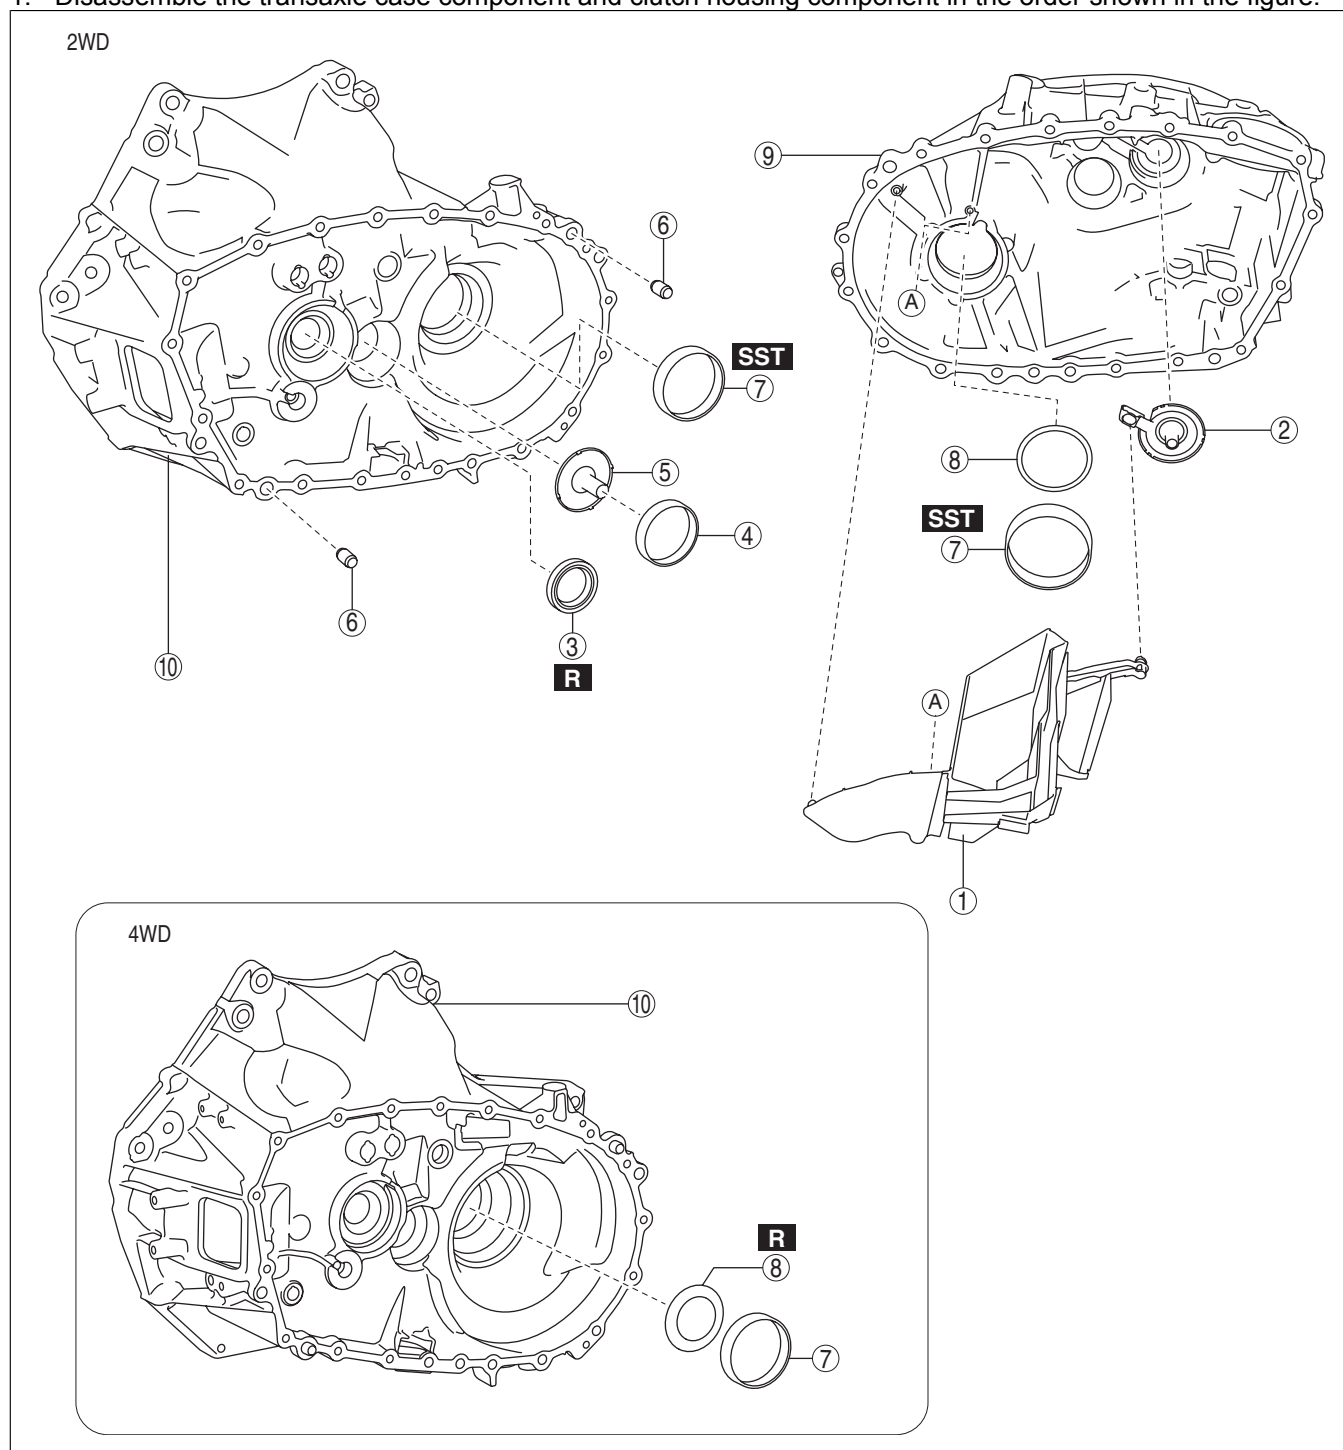

bc62zm00000025


1	Oil path (See Oil Path Removal Note.)
2	Funnel
3	Oil seal (See Oil Seal Removal Note.)
4	Bearing outer race
5	Funnel
6	Dowel pin

7	Bearing outer race (differential) (See Bearing Outer Race (Differential) Removal Note.)
8	Shim
9	Transaxle case
10	Clutch housing

Oil Path Removal Note


1. Remove the oil path.

2. As shown in the figure, verify that the oil path connection area is not broken.
 - If the oil path connection area is broken, replace the oil path.

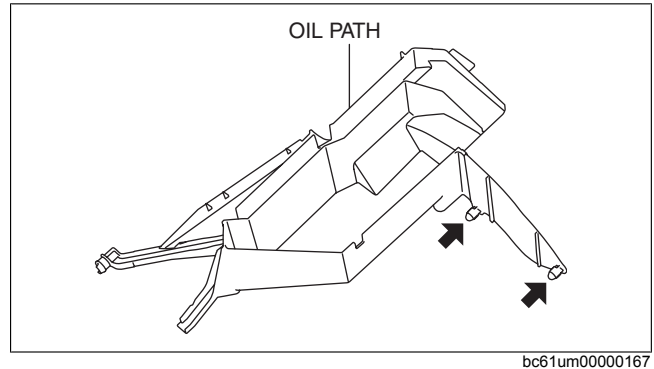


Oil Seal Removal Note

1. Remove the oil seal using a flathead screwdriver.

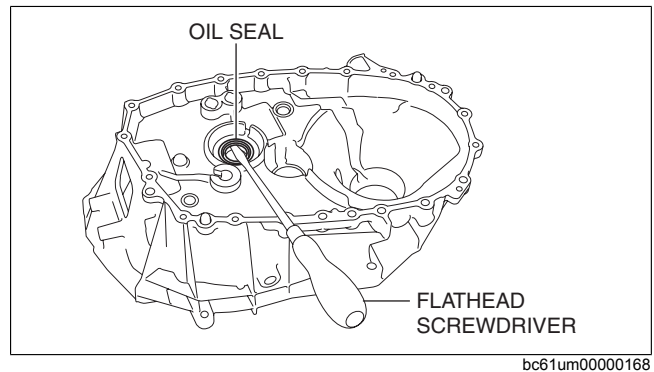


Bearing Outer Race (Differential) Removal Note


1. Remove the bearing outer race from the transaxle case using the **SST**.

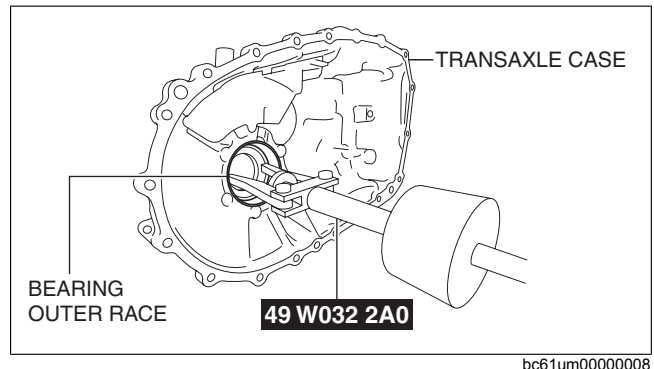

2. Remove the bearing outer race from the clutch housing using the **SST**. (2WD)

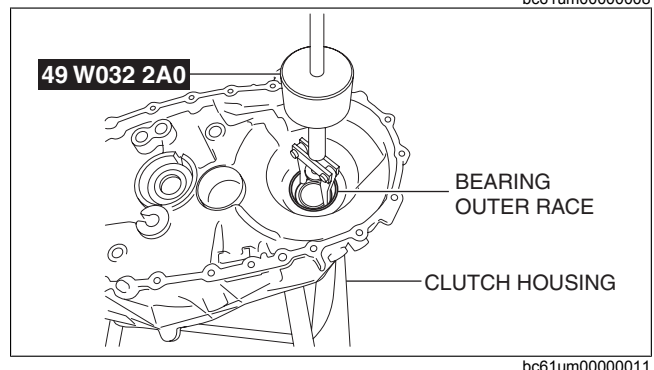

3. Remove the bearing outer race and shim from the clutch housing using a punch. (4WD)

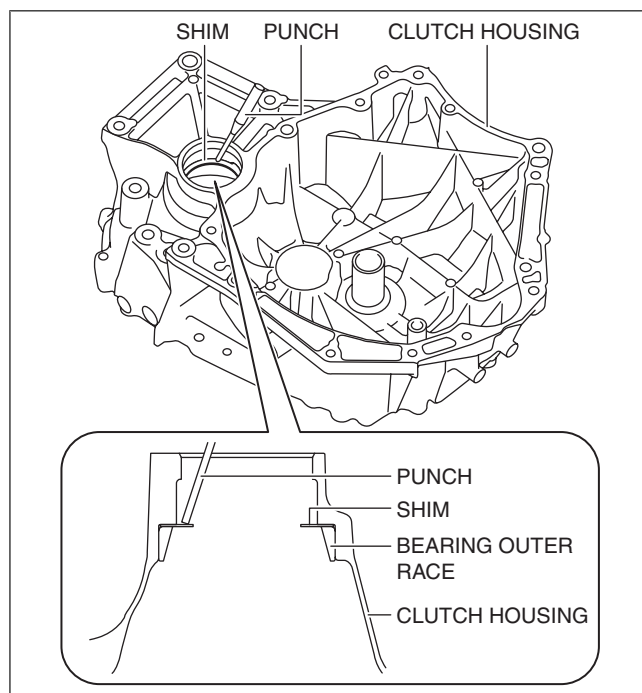

bc62zm00000026