


MANUAL TRANSAXLE REMOVAL/INSTALLATION [C66MX-R]

id0515ma1600m9


Removal

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)
2. Remove the plug hole plate. (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
3. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
4. Remove the front under cover No.1. (See FRONT UNDER COVER No.1 REMOVAL/INSTALLATION.)
5. Remove the splash shield. (See SPLASH SHIELD REMOVAL/INSTALLATION.)
6. Drain the manual transaxle oil. (See MANUAL TRANSAXLE OIL REPLACEMENT [C66M-R].)
7. Disconnect and/or remove the following parts in the engine compartment.
 - (1) Remove the air cleaner component (air cleaner, air hose). (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
 - (2) Remove the battery component (battery, battery tray and PCM component). (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
 - (3) Disconnect the control cable from manual transaxle. (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].)
 - (4) Remove the control cable bracket from manual transaxle.

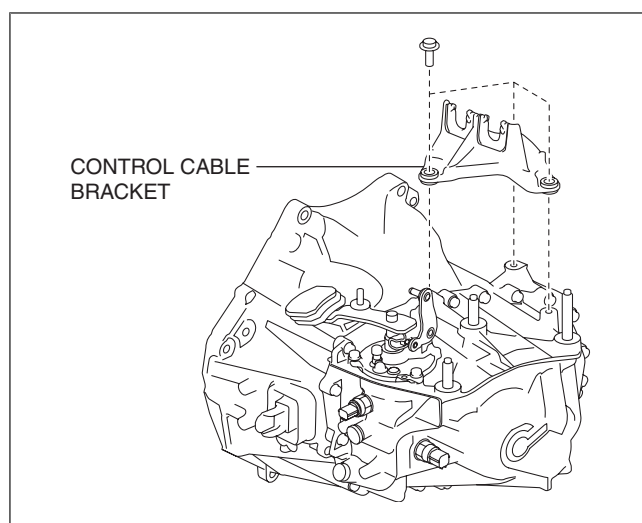


ac5wzw00002848

- (5) Remove the bolt shown in the figure, and set the ground cable aside.
- (6) Remove the insulator. (See EXHAUST SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
- (7) Disconnect the neutral switch connector from manual transaxle. (See NEUTRAL SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R].)
- (8) Disconnect the back-up light switch connector from manual transaxle. (See BACK-UP LIGHT SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R].)

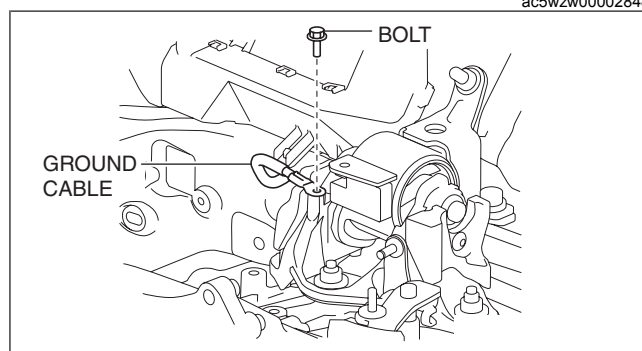


ac5uuw00000732

- (9) Disconnect the lower radiator hose clip and the brackets from the manual transaxle, and set the wiring harness aside.
8. Disconnect and/or remove the following parts related to the suspension and axle.
- (1) Remove the front tires. (See GENERAL PROCEDURES (FRONT AND REAR AXLES).)
 - (2) Disconnect the clip securing the brake hose from the shock absorber. (See BRAKE HOSE (FRONT) REMOVAL/INSTALLATION.)
 - (3) Disconnect the ABS wheel-speed sensors from the steering knuckles. (See FRONT ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION.)
 - (4) Disconnect the tie-rod end ball joints from the steering knuckles. (See FRONT CROSSMEMBER REMOVAL/INSTALLATION.)
 - (5) Disconnect the stabilizer control links from the stabilizer. (See FRONT STABILIZER REMOVAL/INSTALLATION.)
 - (6) Disconnect the front lower arms from the steering knuckles. (See FRONT CROSSMEMBER REMOVAL/INSTALLATION.)
 - (7) Disconnect the drive shaft (LH) from the manual transaxle. (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)
 - (8) Remove the drive shaft (RH). (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)
9. Disconnect and/or remove the following parts from the underside of the vehicle.
- (1) Remove the clutch release cylinder with the clutch pipe still connected and set it out of the way. (See CLUTCH RELEASE CYLINDER REMOVAL/INSTALLATION [C66M-R, C66MX-R].)
 - (2) Remove the starter. (See STARTER REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
 - (3) Remove the brace bar. (See EXHAUST SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
 - (4) Remove the tunnel member. (See EXHAUST SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
 - (5) Remove the propeller shaft. (See PROPELLER SHAFT REMOVAL/INSTALLATION.)
 - (6) Remove the front crossmember component and No.1 engine mount rubber as a single unit. (See FRONT CROSSMEMBER REMOVAL/INSTALLATION.)
 - (7) Remove the exhaust manifold. (See EXHAUST SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
 - (8) Remove the bracket from the manual transaxle.
 - (9) Remove the transfer. (See TRANSFER REMOVAL/INSTALLATION [C66MX-R].)

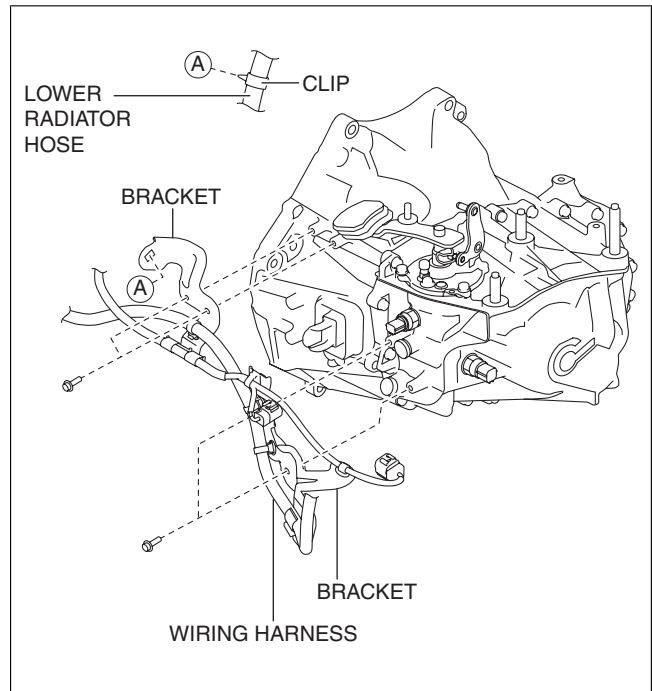


ac5wzw00002849

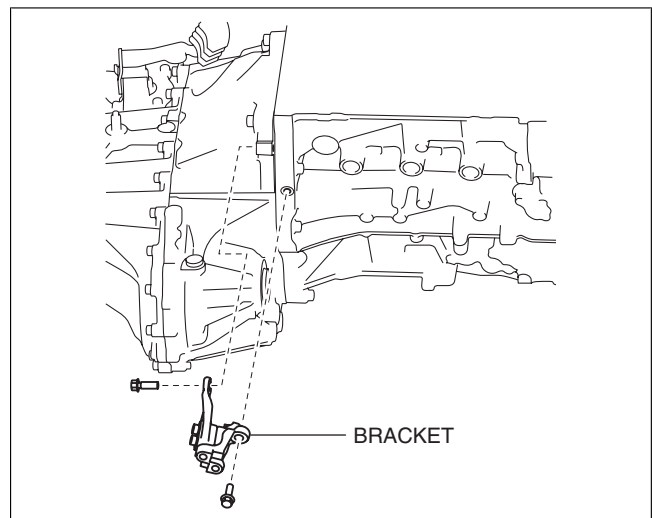

ac5wzw00001549

- (10) Remove the No.1 engine mount bracket from the manual transaxle.

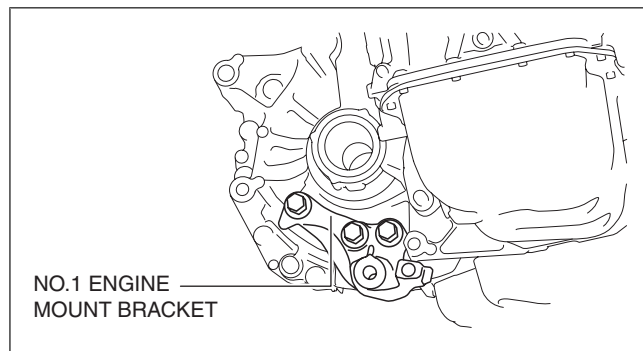


ac5wzw00001304

10. Install the **SST** using the following procedure:


Caution

- Refer to the **SST** instruction manual for the basic handling procedure.

- (1) Install one front foot No.2 to each of the left and right front shafts of the **SST**.
- (2) Remove the windshield wiper arm and blade. (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
- (3) Remove the cowl grille. (See COWL GRILLE REMOVAL/INSTALLATION.)
- (4) Remove the cowl panel. (See COWL PANEL REMOVAL/INSTALLATION.)
- (5) Protect the positions shown in the figure using tape.

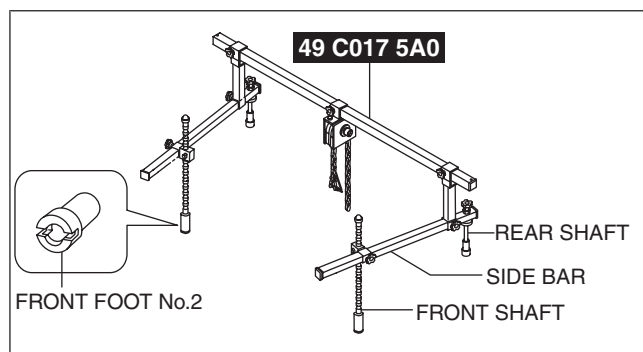


am3uuw00008845

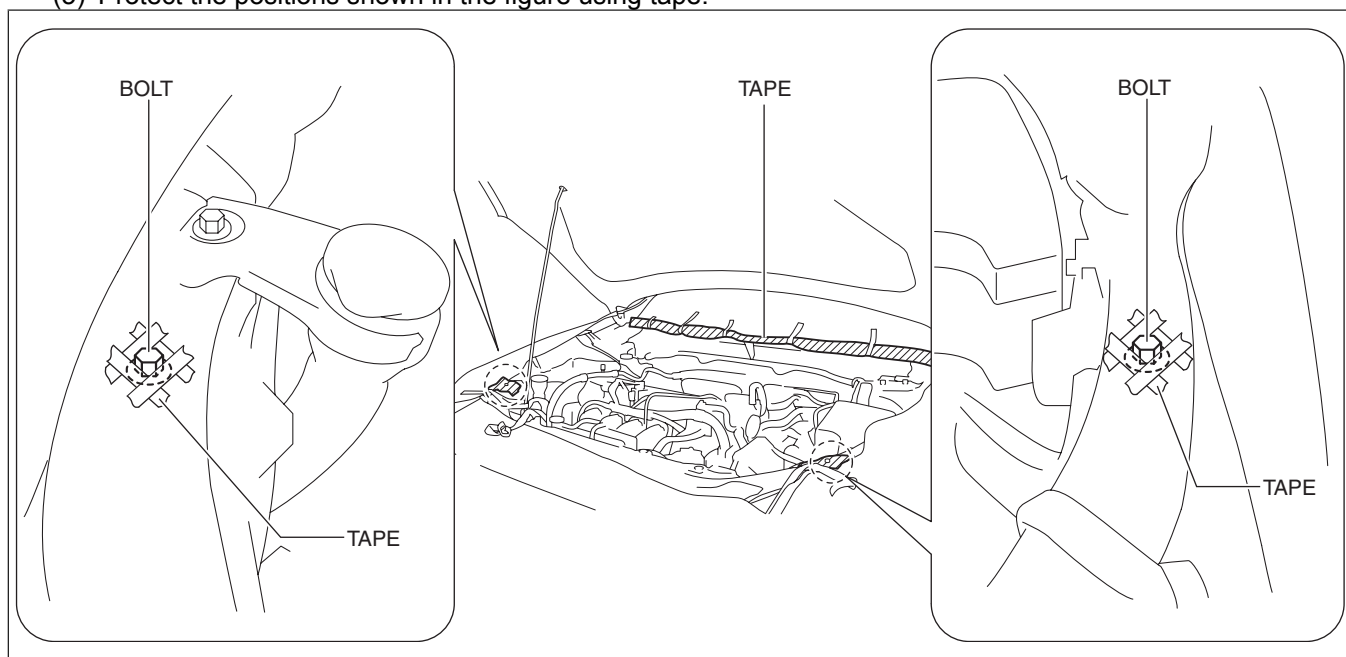

ac5wzw00002850

- (6) To enable to install the **SST**, disconnect the clip shown in the figure and set the wiring harness aside.

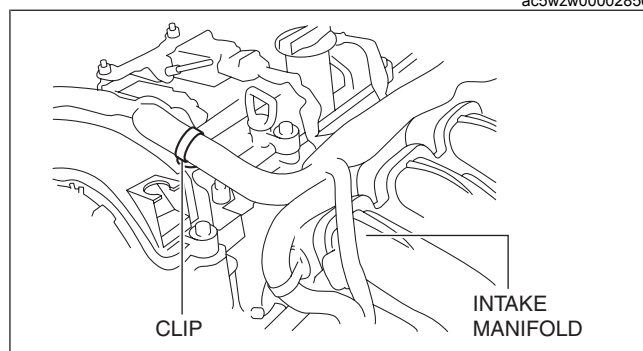


am3uuw00008220

- (7) Install the **SST** using **part number 99794 1025** or an **M10 × 1.25**, length **25 mm {0.98 in}** bolt as shown in the figure.

Engine front side

Tightening torque

38—51 N·m {3.9—5.2 kgf·m, 29—37 ft·lbf}

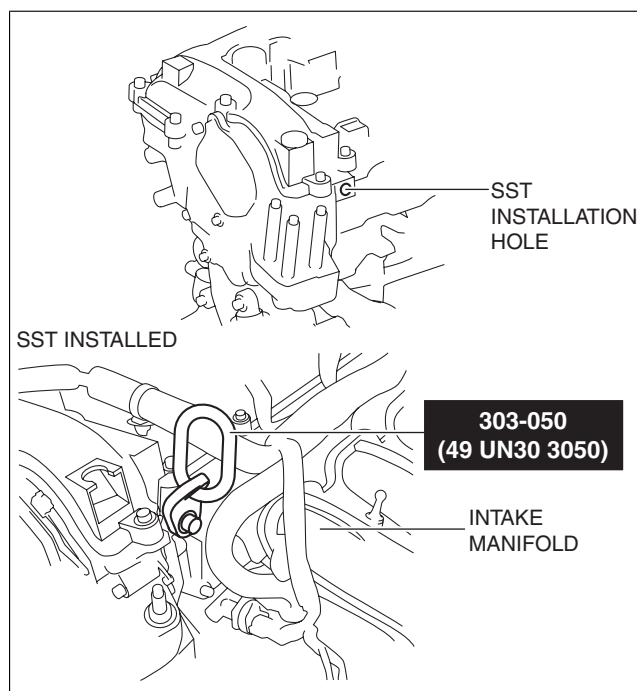


ac5wzw00002129

Engine rear side


Tightening torque

38—51 N·m {3.9—5.2 kgf·m, 29—37 ft·lbf}

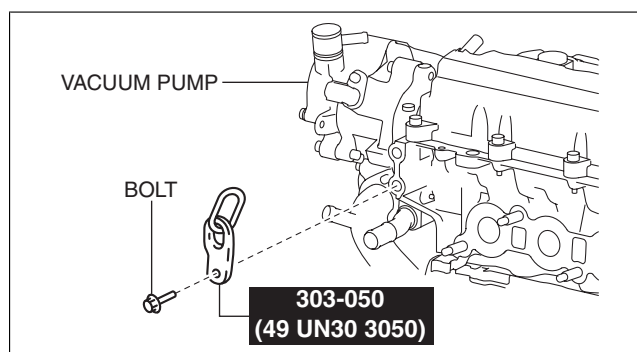


am3uuw00008222

- (8) As shown in the figure, set the rear shafts of the **SST** to the left and right shock absorber nuts.

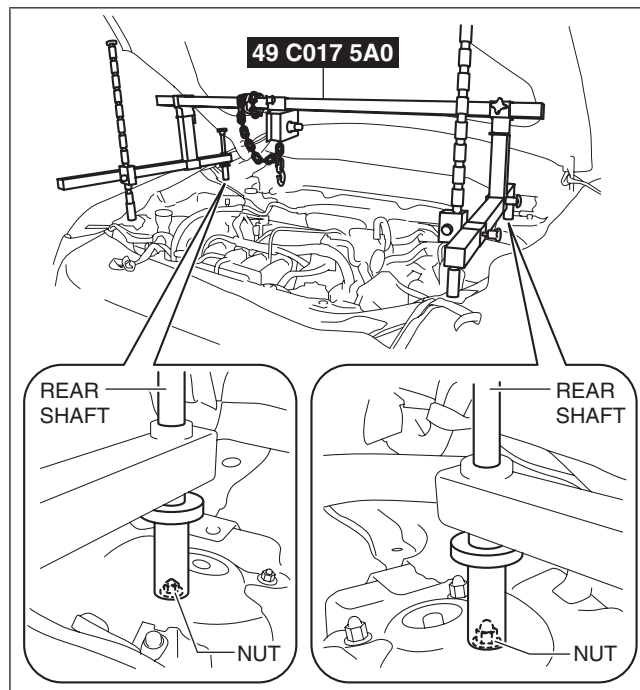


ac5uuw00000737

- (9) As shown in the figure, set the front shafts of the **SST** to the left and right bolts.

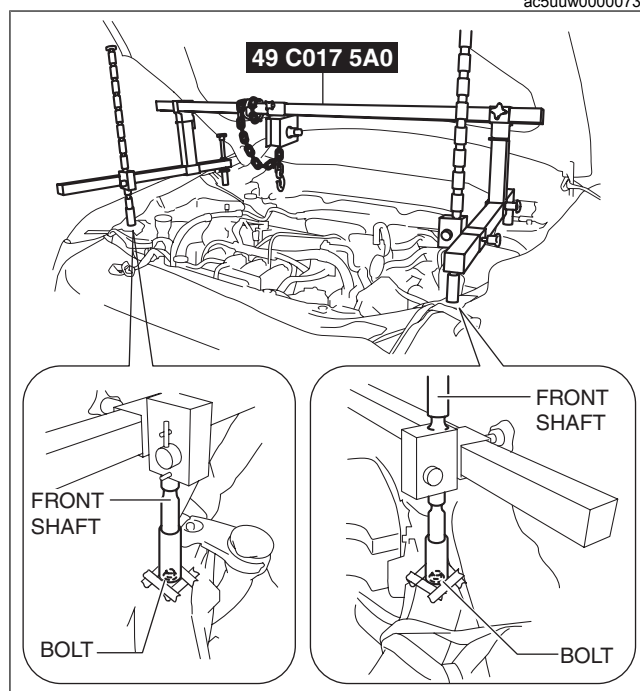


ac5wzw00002851

- (10) When assembling the **SST (49 L017 5A0)**, disconnect the fuel hose from the clip shown in the figure to prevent interference between the fuel hose and **SST**.

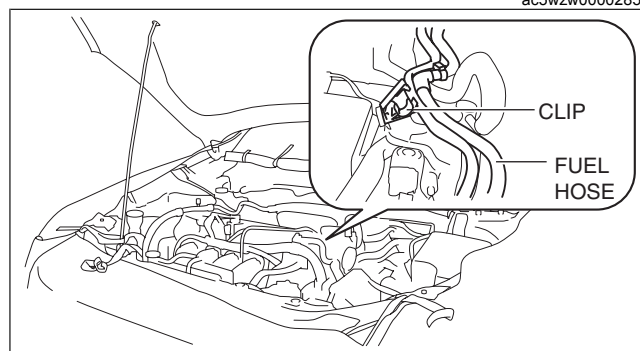

ac5uuw00000739

(11) Install the **SST (49 L017 5A0)** to the **SST (49 C017 5A0)** as shown in the figure.

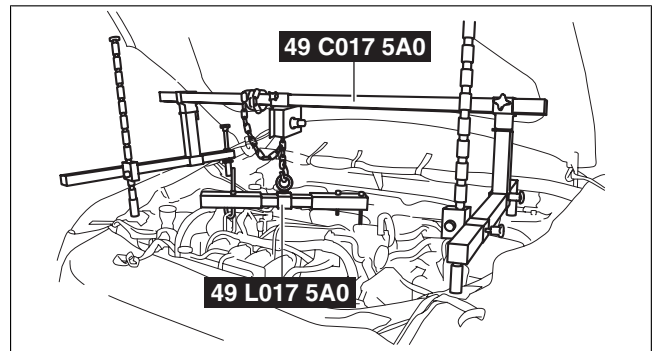


ac5uuw00000740

(12) Install the **SST (49 L017 5A0)** to the **SST (49 UN30 3050)** with the hook of the **SST (49 L017 5A0)** facing outward.


(13) Adjust the height of the left and right side bars so that they are leveled, then tighten each part of the **SST**.

(14) Apply tension to the chain to secure the engine.

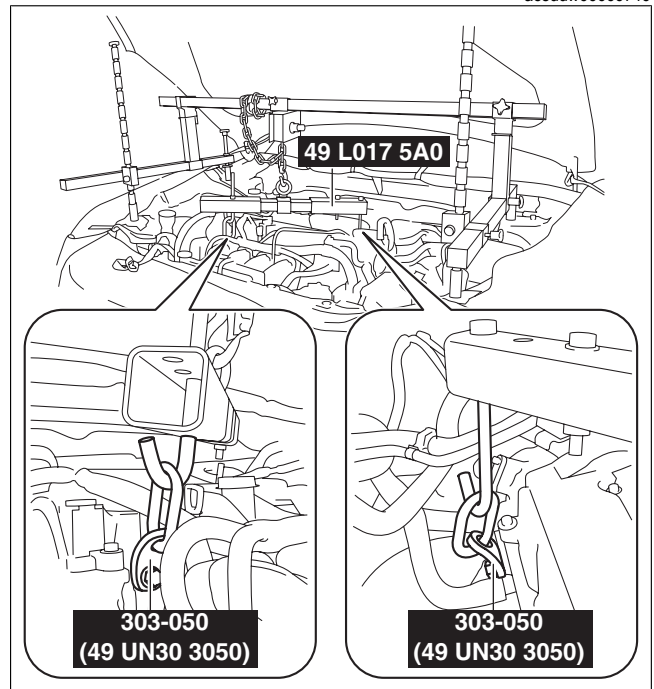

ac5uuw00000741

11. Remove in the order indicated in the table.

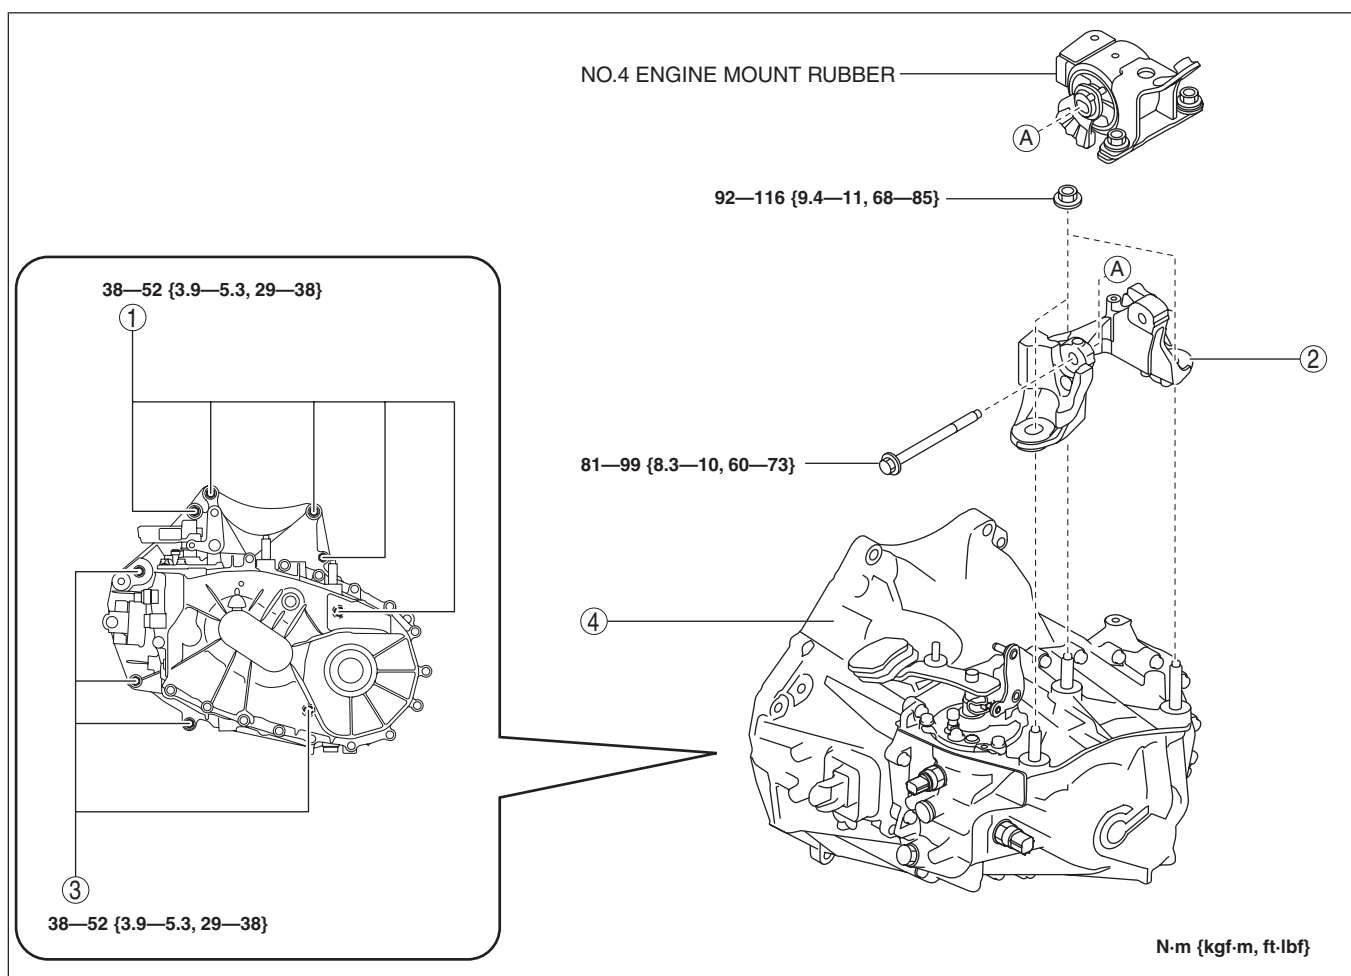

ac5wzw00002852

1	Transaxle mounting bolt (upper side)
2	No.4 engine mount bracket (See No.4 Engine mount bracket removal note.)
3	Transaxle mounting bolt (lower side) (See Transaxle mounting bolt removal note.)
4	Manual transaxle

No.4 Engine mount bracket removal note

Caution


- A slot has been adopted for the No.4 engine mount bracket installation hole. If the No.4 engine mount bracket is deviated from the original position when installing the No.4 engine mount, engine noise or vibration could increase. When removing the No.4 engine mount, place alignment marks on the No.4 engine mount bracket so that they can be assembled to the same positions as before removal.

1. Place alignment marks on the locations shown in the figure so that they can be assembled to the same positions as before removal.

Note

- Paint so that the outline of the nut is framed on the bracket side.

2. Remove the No.4 engine mount bracket.

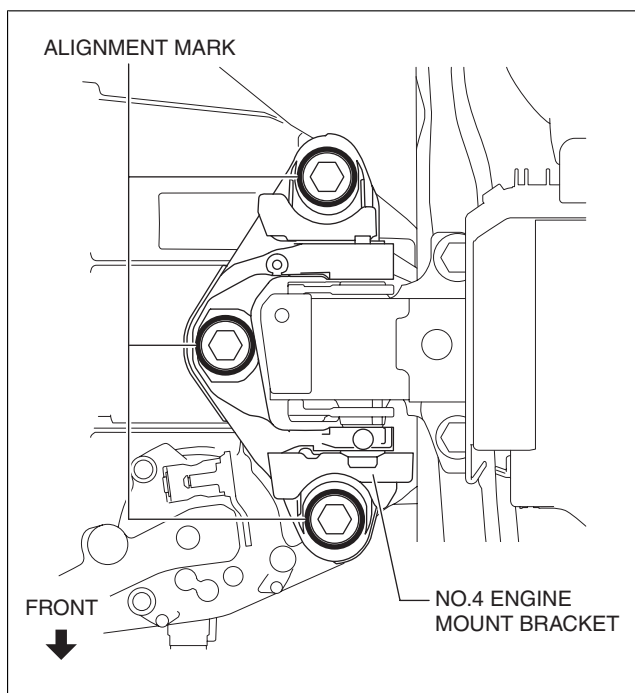


ac5uuw00000743

Transaxle mounting bolt removal note

Warning


- Remove the manual transaxle carefully, holding it steady. If the manual transaxle falls it could be damaged or cause injury.

1. Adjust the **SST** and lean the engine toward the manual transaxle.

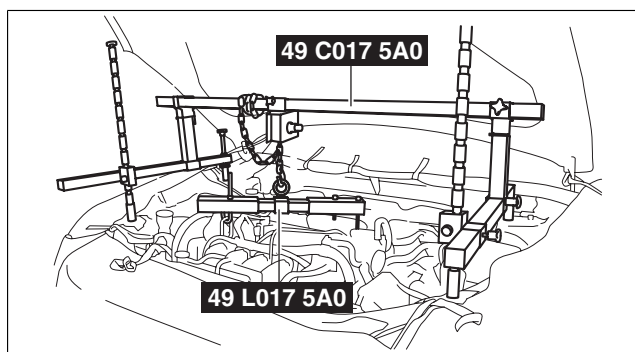


ac5uuw00000740

2. Support the manual transaxle on a jack.

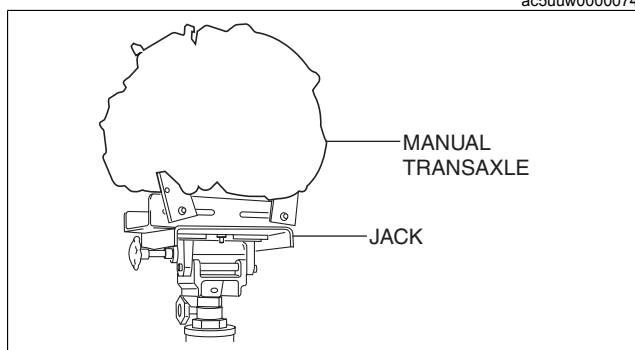

ac5wzw00006166

3. Remove the transaxle mounting bolts (lower side).
4. Remove the manual transaxle.

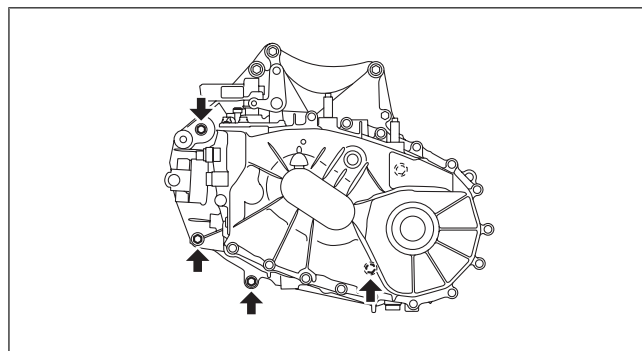


ac5uuw00000745

Installation

Warning

- Install the manual transaxle carefully, holding it steady. If the manual transaxle falls it could be damaged or cause injury.

1. Set the manual transaxle on a jack and lift into place.

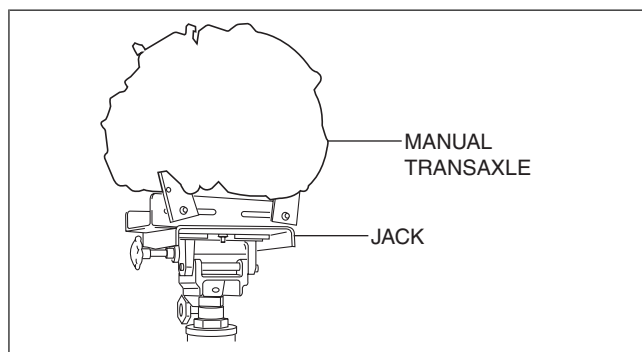


ac5wzw00006166

2. Install the manual transaxle to the engine, and tighten the transaxle mounting bolts.

Tightening torque

38—52 N·m {3.9—5.3 kgf·m, 29—38 ft·lbf}

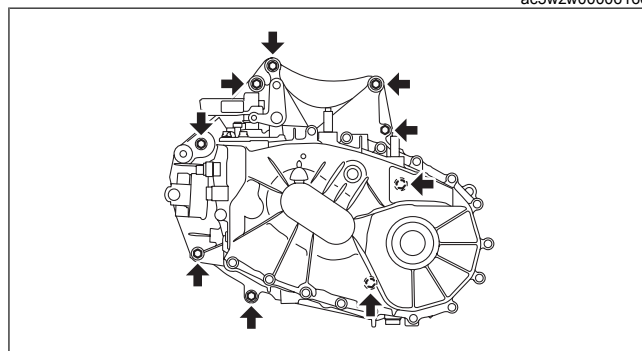


am3uuw00008227

3. Tighten the stud bolts for the manual transaxle.

Note


- If the No.4 engine mount bracket nut is loosened, tighten the stud bolts for the manual transaxle because they may be loosened.

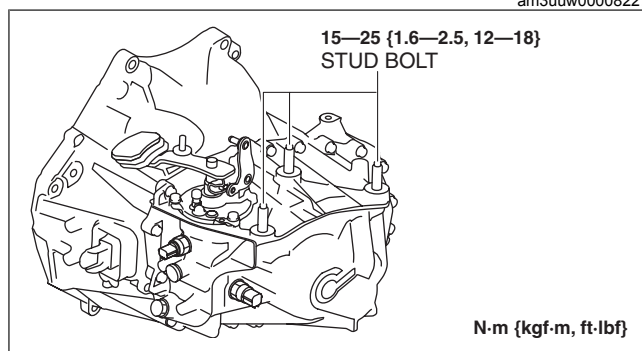

N·m {kgf·m, ft·lbf}


ac5wzw00002853

4. Install the No.4 engine mount bracket to No.4 engine mount rubber, and temporarily tighten the installation bolt.

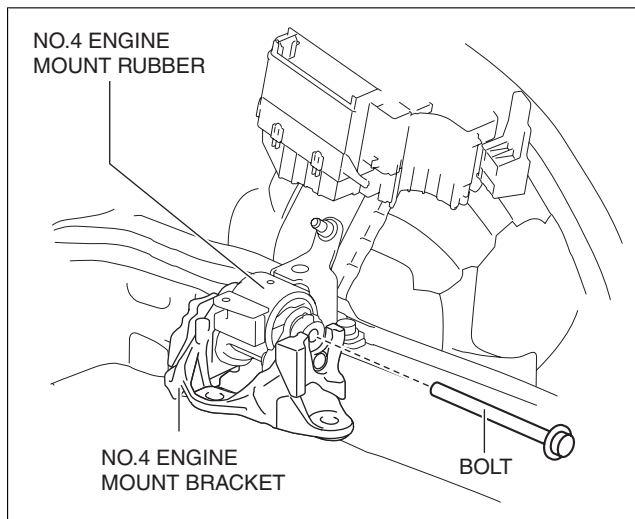

ac5uuw00000747

5. Pull up the manual transaxle using the **SSTs**, pass the manual transaxle stud bolts through the No.4 engine mount bracket, and temporarily tighten the No.4 engine mount installation nuts.

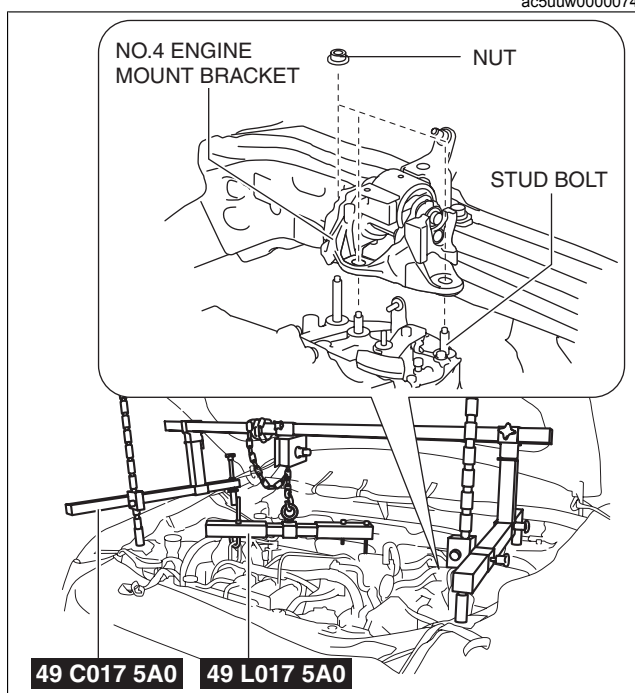


ac5uuw00000748

6. Install the No.1 engine mount bracket and tighten the bolts in the order shown in the figure.

Tightening torque


131—153 N·m {14—15 kgf·m, 97—112 ft·lbf}

7. Install the transfer. (See TRANSFER REMOVAL/ INSTALLATION [C66MX-R].)

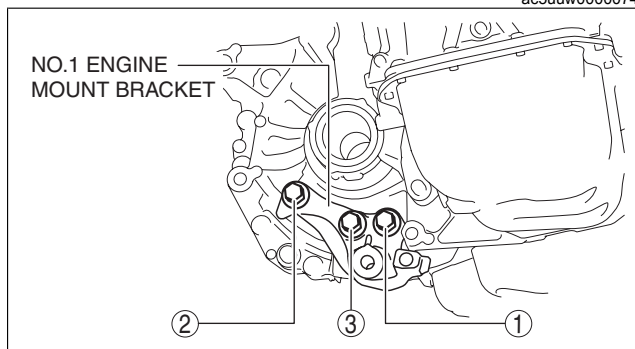


ac5wzw00001305

8. Install the bracket to the manual transaxle and tighten the bolts in the order shown in the figure.
9. Install the exhaust manifold. (See EXHAUST SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
10. Install the front crossmember component and No.1 engine mount rubber as a single unit. (See FRONT CROSSMEMBER REMOVAL/INSTALLATION.)

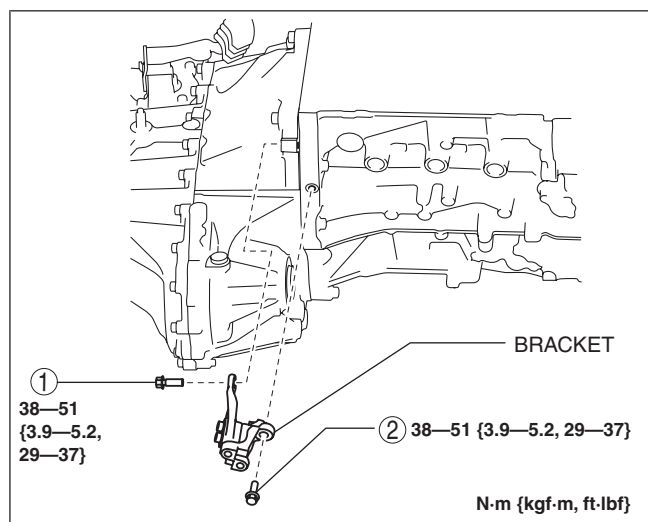


ac5wzw00004638

11. Install the bracket plate, and temporarily tighten the No.1 engine mount rubber installation bolts.

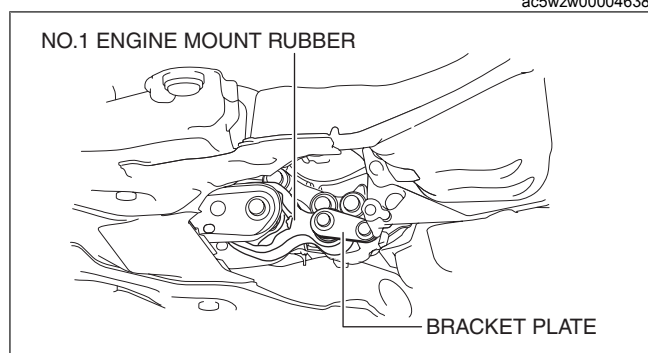

ac5wzw00001307

12. Align the alignment marks on the No.4 engine mount bracket and nuts, and temporarily tighten the nuts shown in the figure.

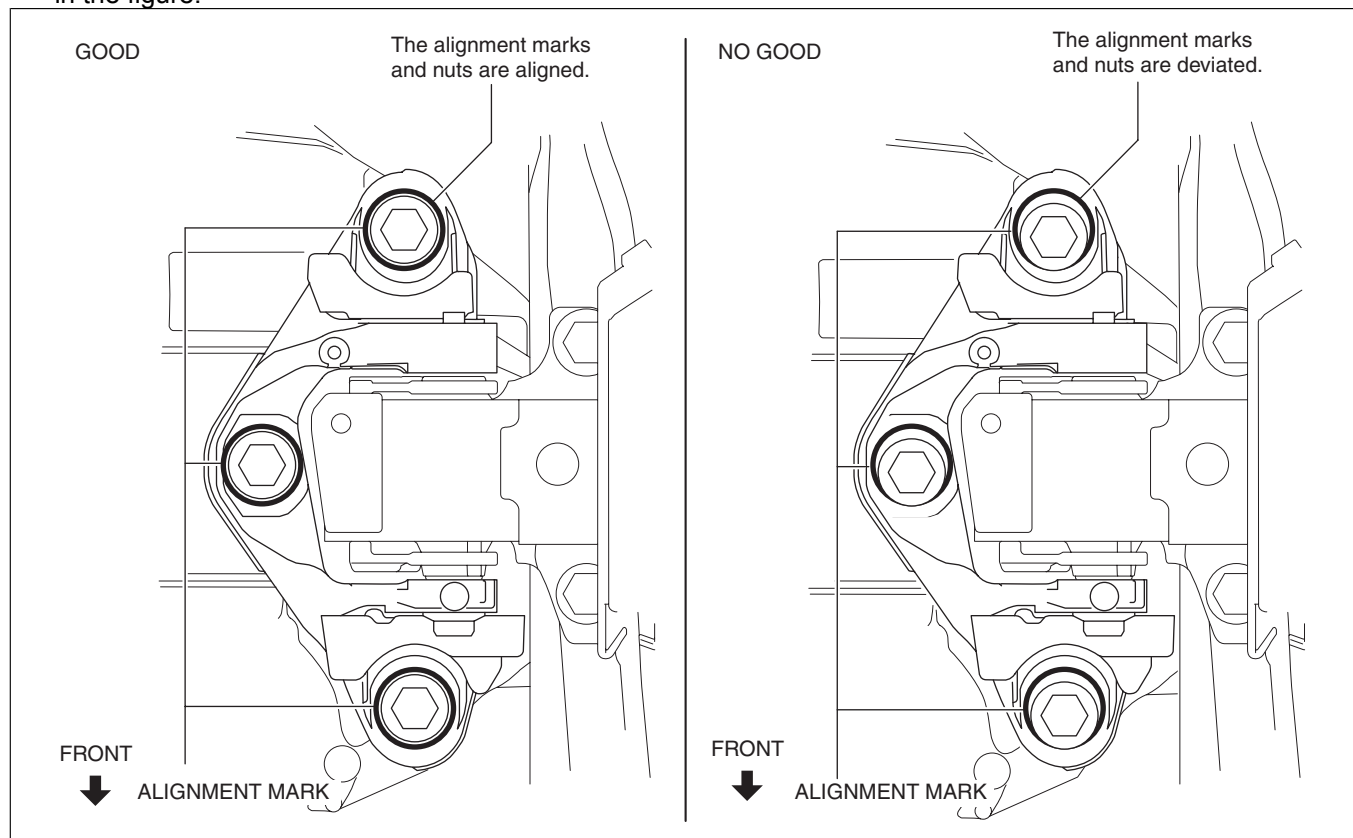

ac5uuw00000750

13. Tighten the No.4 engine mount bracket installation nuts and bolt in the order shown in the figure.

No.	Tightening torque
1, 2, 3	92—116 N·m {9.4—11 kgf·m, 68—85 ft·lbf}
4	81—99 N·m {8.3—10 kgf·m, 60—73 ft·lbf}

14. Remove the **SST (49 C017 5A0)**.
 15. Install the propeller shaft. (See PROPELLER SHAFT REMOVAL/INSTALLATION.)

16. Tighten the No.1 engine mount rubber installation bolts.

17. Connect and/or Install the following parts to the underside of the vehicle.

- (1) Install the tunnel member. (See EXHAUST SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
- (2) Install the brace bar. (See EXHAUST SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
- (3) Install the starter. (See STARTER REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)


- (4) Install the clutch release cylinder to the manual transaxle. (See CLUTCH RELEASE CYLINDER REMOVAL/INSTALLATION [C66M-R, C66MX-R].)

18. Connect and/or Install the following parts related to the suspension and axle.


- (1) Install the drive shaft (RH). (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)
- (2) Connect the drive shaft (LH) to the manual transaxle. (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)
- (3) Connect the front lower arms to the steering knuckles. (See FRONT CROSSMEMBER REMOVAL/INSTALLATION.)
- (4) Connect the stabilizer control links to the stabilizer. (See FRONT STABILIZER REMOVAL/INSTALLATION.)
- (5) Connect the tie-rod end ball joints to the steering knuckles. (See FRONT CROSSMEMBER REMOVAL/INSTALLATION.)
- (6) Connect the ABS wheel-speed sensors to the steering knuckles. (See FRONT ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION.)
- (7) Connect the clip securing the brake hose to the shock absorber. (See BRAKE HOSE (FRONT) REMOVAL/INSTALLATION.)
- (8) Install the front tires. (See GENERAL PROCEDURES (FRONT AND REAR AXLES).)

19. Connect and/or install the following parts in the engine compartment.


- (1) Install the fuel hose to the clip shown in the figure.

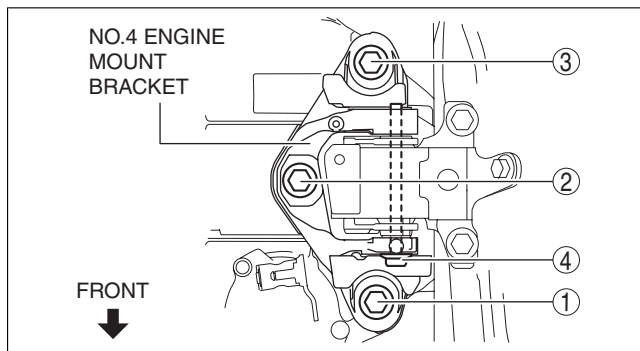

ac5wzw00001308

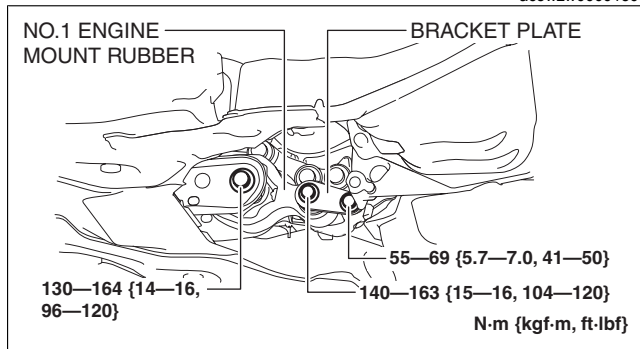


ac5wzw00001311

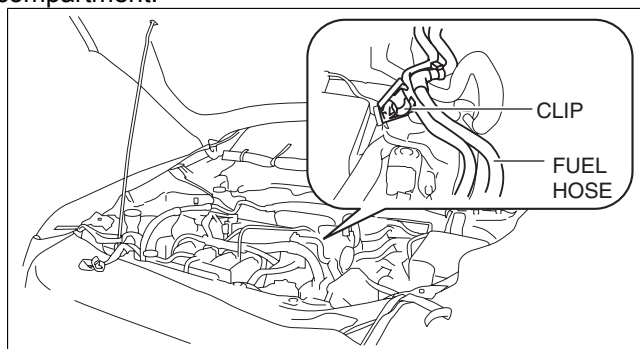


ac5uuw00000739

- (2) Connect the clip shown in the figure.
- (3) Install the cowl panel. (See COWL PANEL REMOVAL/INSTALLATION.)
- (4) Install the cowl grille. (See COWL GRILLE REMOVAL/INSTALLATION.)
- (5) Install the windshield wiper arm and blade. (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)

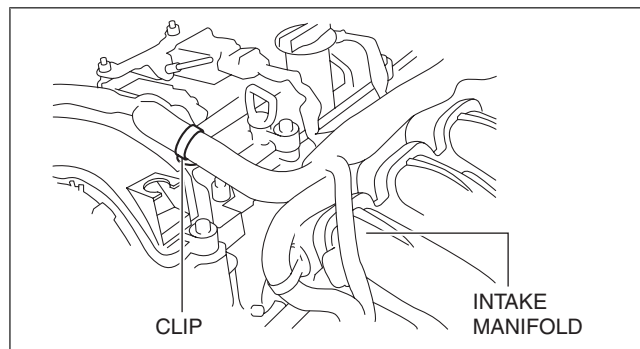


am3uuw00008220

- (6) Install the lower radiator hose clip and bracket to the manual transaxle.
- (7) Connect the back-up light switch connector. (See BACK-UP LIGHT SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R].)
- (8) Connect the neutral switch connector. (See NEUTRAL SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R].)

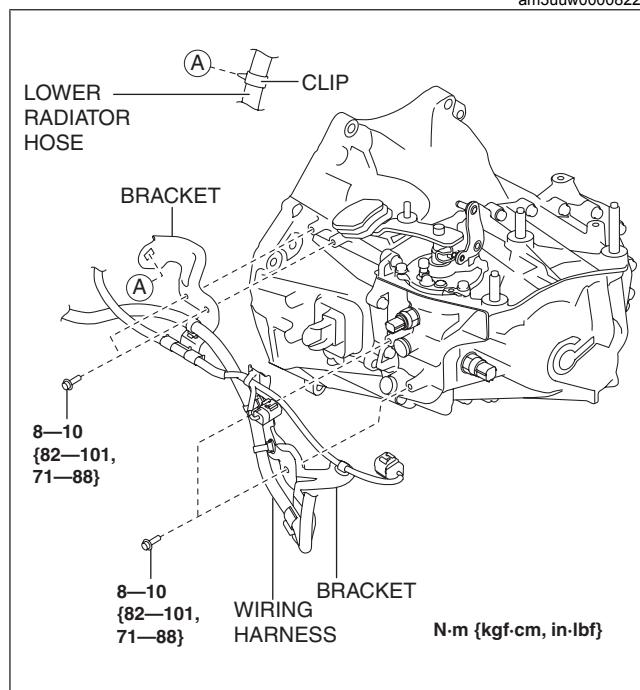


ac5wzw00002854

- (9) Connect the ground cable to the No.4 engine mount bracket.

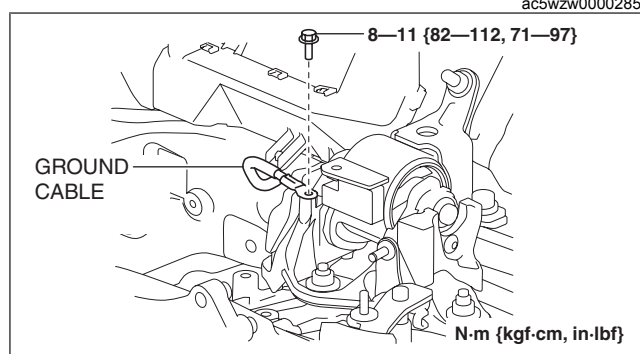

ac5uuw00000756

- (10) Install the control cable bracket to the manual transaxle.
 - (11) Connect the control cable to the manual transaxle. (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].)
 - (12) Install the battery component (battery, battery tray and PCM component). (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
 - (13) Install the air cleaner component (air cleaner, air hose). (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
20. Install the splash shield. (See SPLASH SHIELD REMOVAL/INSTALLATION.)
 21. Install the front under cover No.1. (See FRONT UNDER COVER No.1 REMOVAL/INSTALLATION.)
 22. Add the specified amount of specified manual transaxle oil. (See MANUAL TRANSAXLE OIL REPLACEMENT [C66M-R].)
 23. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
 24. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)
 25. Install the plug hole plate. (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
 26. If the manual transaxle is overhauled, perform the "INSPECTION AFTER MANUAL TRANSAXLE OVERHAUL". (See INSPECTION AFTER MANUAL TRANSAXLE OVERHAUL [C66M-R, C66MX-R].)

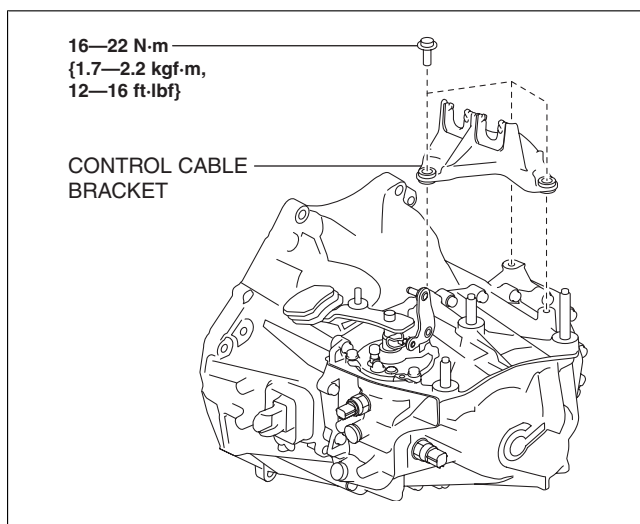

ac5wzw00002855