


## REAR PARKING SENSOR BUZZER REMOVAL/INSTALLATION

id092200030500

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
  - (2) Liftgate side trim (See LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.)
  - (3) Liftgate recess (See LIFTGATE RECESS REMOVAL/INSTALLATION.)
  - (4) Liftgate lower trim (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
3. Disconnect the connector.
4. Pull out the rear parking sensor buzzer in the direction of arrow (2) shown in the figure while pressing the clip in the direction of arrow (1) shown in the figure and remove the rear parking sensor buzzer.
5. Install in the reverse order of removal.

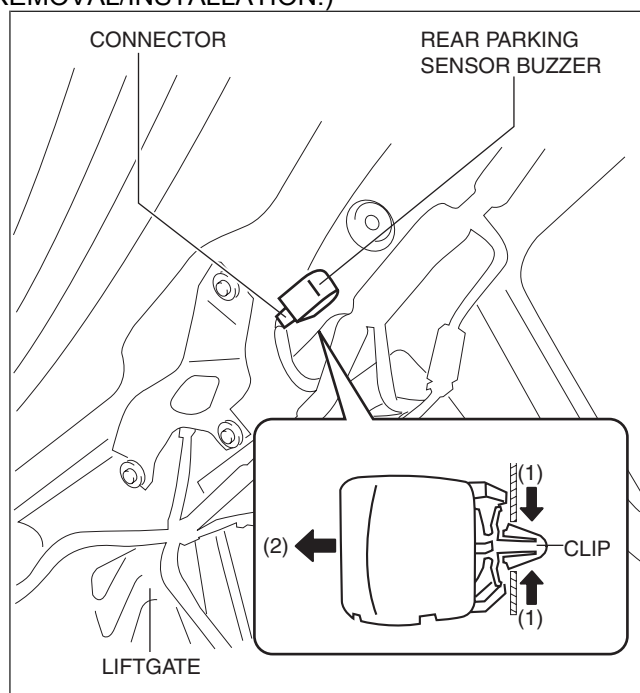

ac5jjw00000403