


MANUAL TRANSAXLE OIL REPLACEMENT [C66M-R, C66MX-R]

id0515ma159700

1. Park the vehicle on level ground.
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
3. Remove the drain plug and gasket, and drain the manual transaxle oil.
4. Install a new gasket and the drain plug.

Tightening torque

39—59 N·m {4.0—6.0 kgf·m, 29—43 ft·lbf}

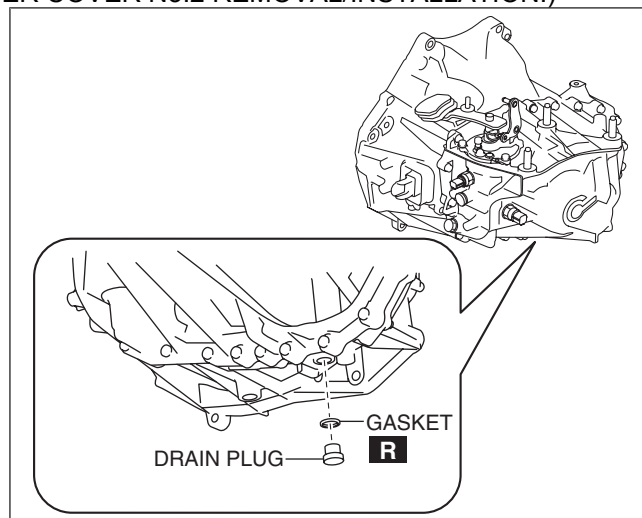

ac5wzw00002835

5. Remove the oil level plug and gasket.
6. Add the specified manual transaxle oil through the oil level plug port.

Manual transaxle oil grade

API service GL-4


Manual transaxle oil viscosity

SAE 75W-80

Manual transaxle oil capacity (approx. quantity)

2WD: 1.65 L {1.74 US qt, 1.45 Imp qt}

4WD: 1.70 L {1.80 US qt, 1.50 Imp qt}

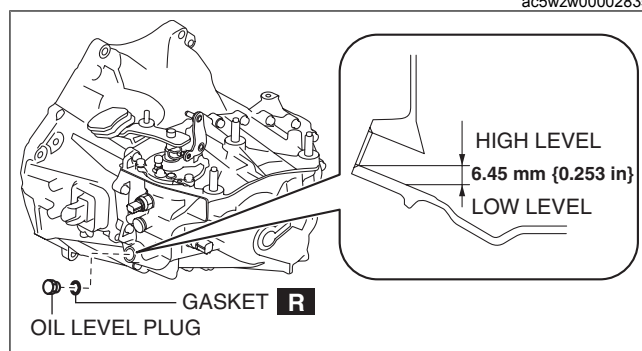

ac5wzw00002836

7. Install a new gasket and the oil level plug.

Tightening torque

39—59 N·m {4.0—6.0 kgf·m, 29—43 ft·lbf}

8. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)