



GLOVE COMPARTMENT LIGHT BULB REMOVAL/INSTALLATION

id091800801900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Open the glove compartment.
3. While pressing the glove compartment light tab in the direction of the arrow (1) shown in the figure, pull out the glove compartment light in the direction of the arrow (2) shown in the figure to detach the glove compartment light tab and lower panel.

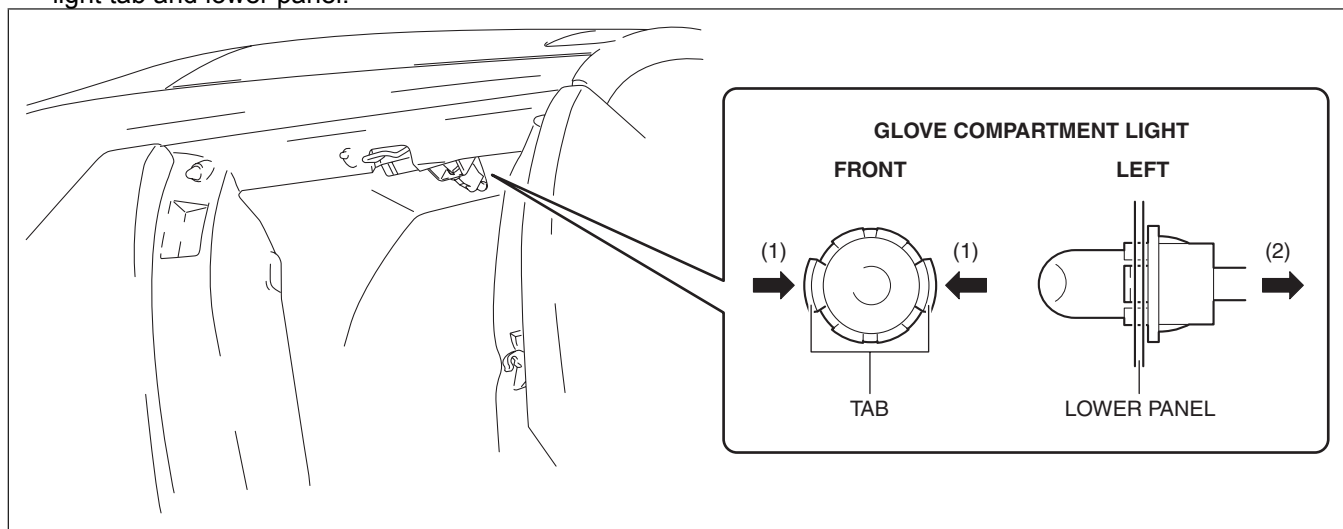

4. Remove the glove compartment light.

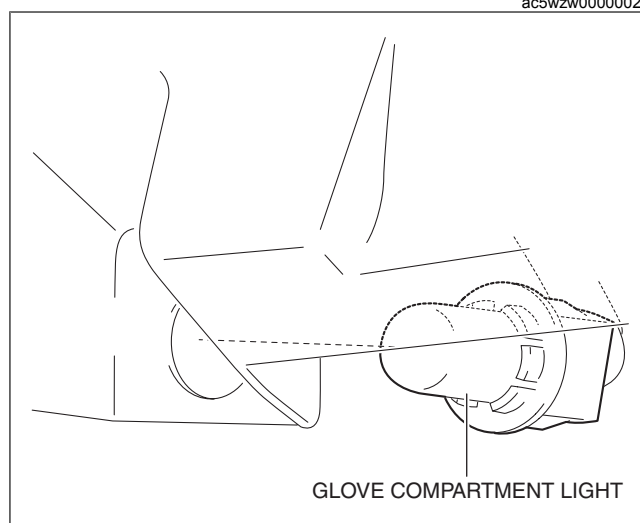

5. Remove the glove compartment light bulb.
6. Install in the reverse order of removal.

