


BLOWER UNIT REMOVAL/INSTALLATION

id071100800500


L.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Front scuff plate (passenger-side) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (2) Front side trim (passenger-side) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
 - (4) Front heat duct (passenger-side) (See FRONT HEAT DUCT REMOVAL/INSTALLATION.)
 - (5) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
 - (6) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
 - (7) Lower panel (passenger-side) (See LOWER PANEL REMOVAL/INSTALLATION.)
3. Disconnect the blower motor connector.

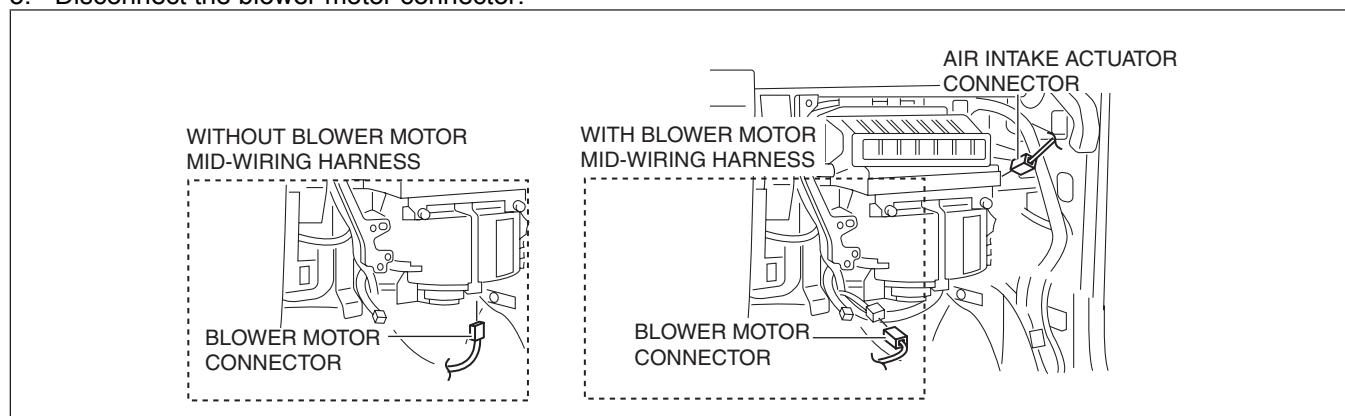


ac5wzw00006468

4. Disconnect the air intake actuator connector.
5. Remove the blower unit installation nuts.

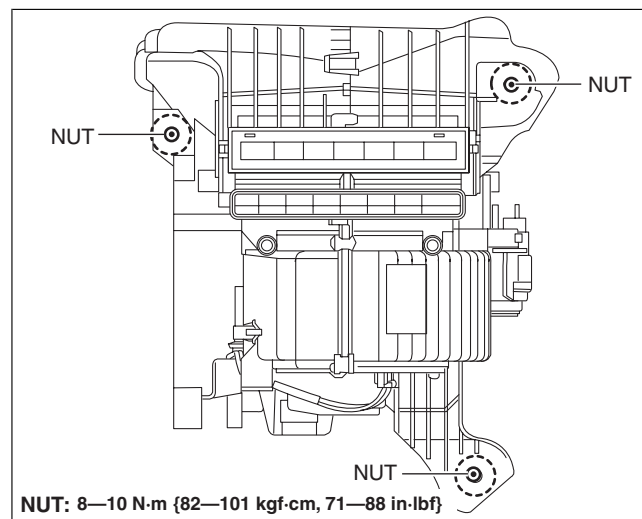


ac5wzw00001791

6. Pass the blower unit projection between the brackets shown in the figure (1) and rotate the blower unit (2).

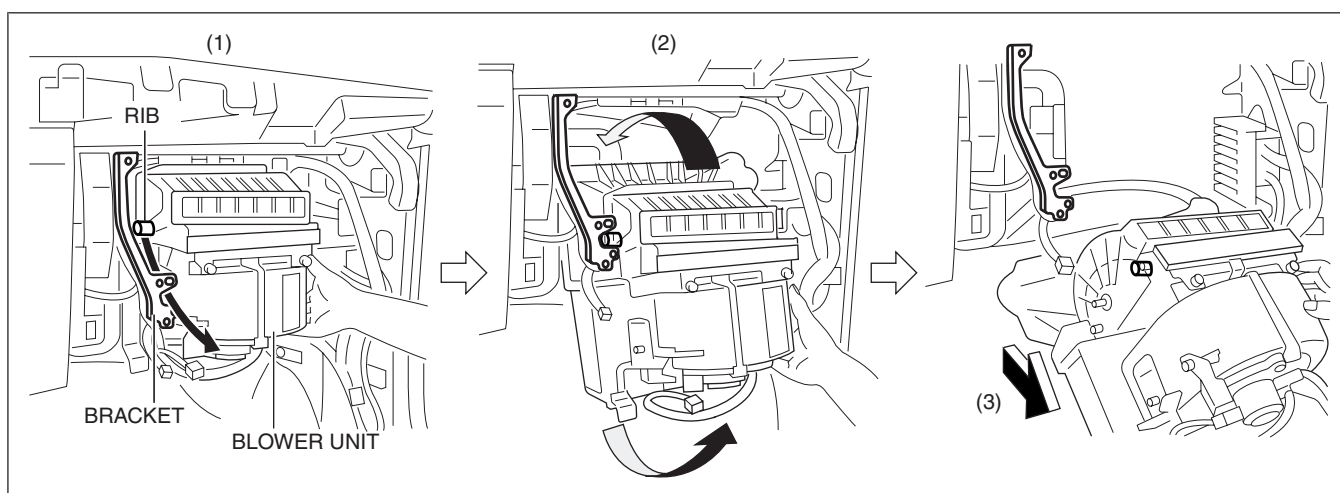

ac5wzw00001792

7. Pull out the blower unit in the direction of the arrow (3).
8. Remove the blower unit.
9. Install in the reverse order of removal.

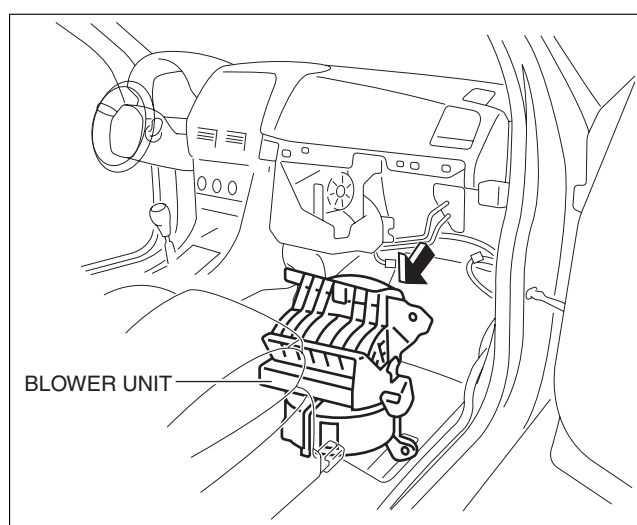


ac5wzw00001793

R.H.D.


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Front scuff plate (passenger-side) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (2) Front side trim (passenger-side) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
 - (4) Front heat duct (passenger-side) (See FRONT HEAT DUCT REMOVAL/INSTALLATION.)
 - (5) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
 - (6) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
 - (7) Lower panel (passenger-side) (See LOWER PANEL REMOVAL/INSTALLATION.)

3. Disconnect the air intake actuator connector.
4. Disconnect the instrument panel harness connector.
5. Remove the bolt, then remove the instrument panel harness bracket.

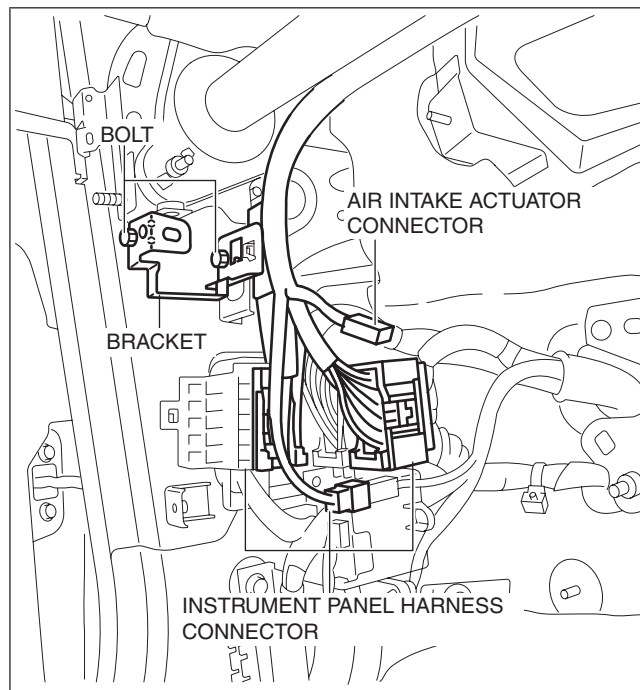

ac5wzw00001794


6. Set the instrument panel harness connector and bracket out of the way as shown in the figure.

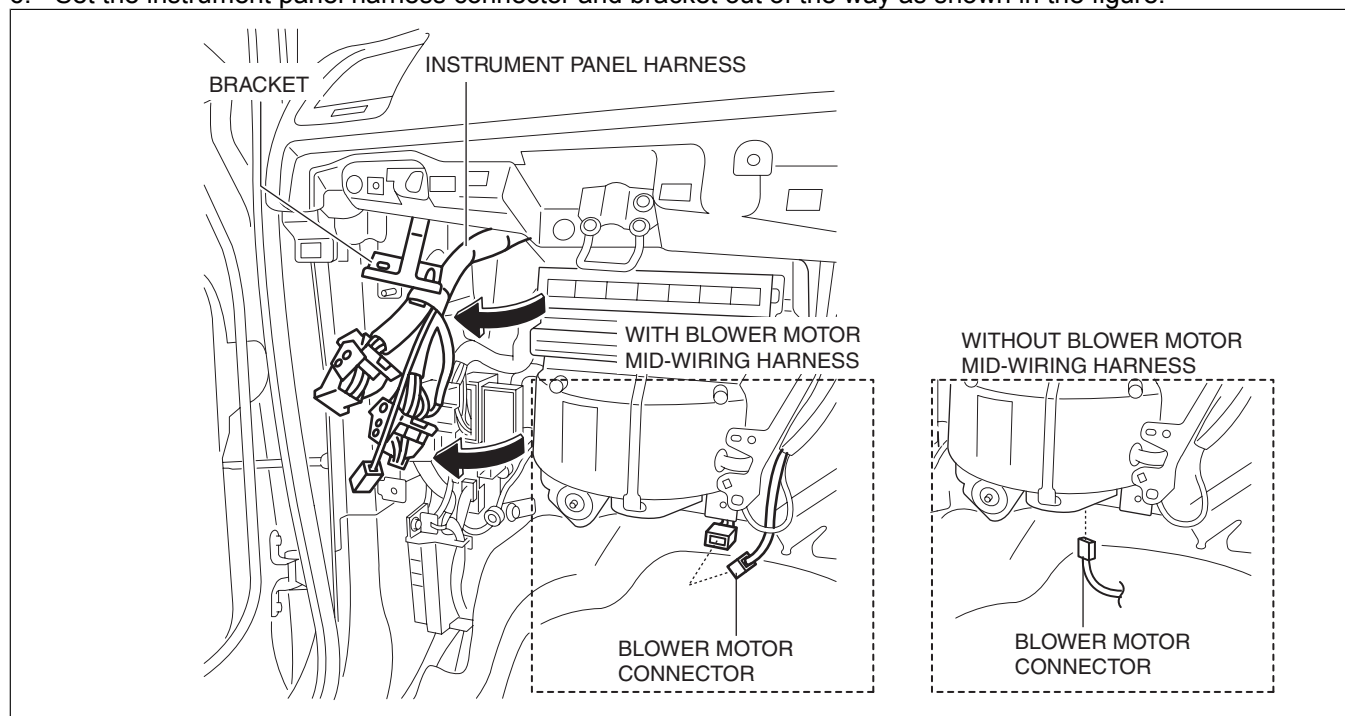

ac5wzw00006469

7. Disconnect the blower motor connector.


8. Remove the blower unit installation nuts.

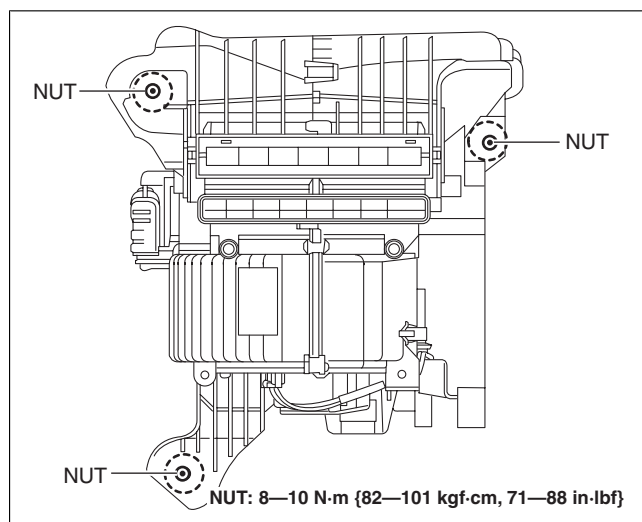

ac5wzw00001796

9. Remove the blower unit.

10. Install in the reverse order of removal.

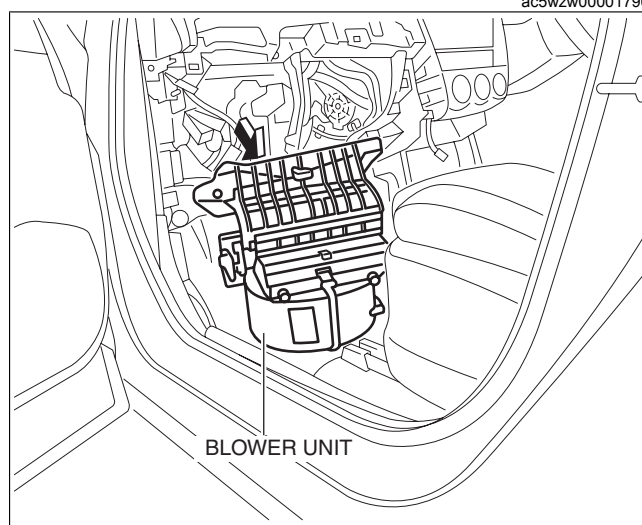

ac5wzw00001797