
CLUTCH [D66M-R, D66MX-R]

id0510mf283600


Purpose, Function

- The clutch unit transmits or cuts the drive force between the engine and manual transaxle according to the clutch pedal operation.



Construction/Operation

- The construction/operation of the clutch unit is the same as the original manual transaxle (ex: A26M-R, A26XM-R).
- The wear assurance function of the clutch cover maintains the set load of the clutch cover unchanged even as the clutch disc becomes worn, thereby extending disc life.


R.H.D.

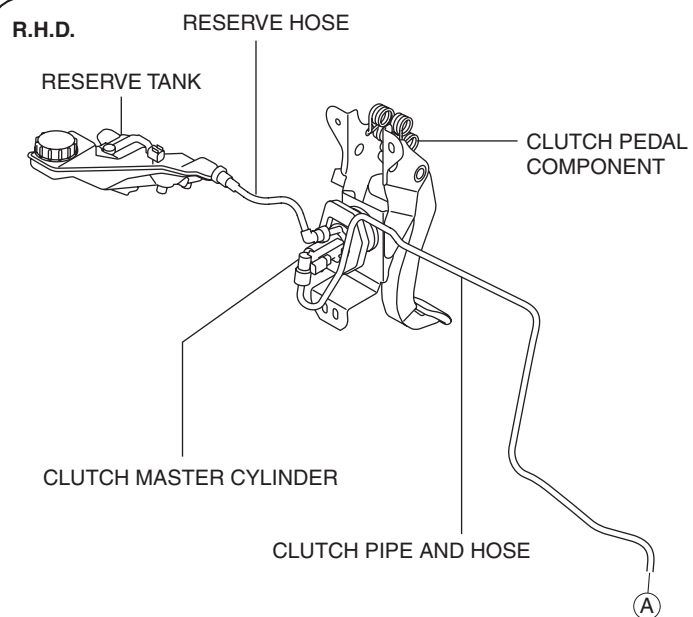


L.H.D.

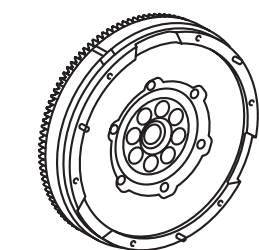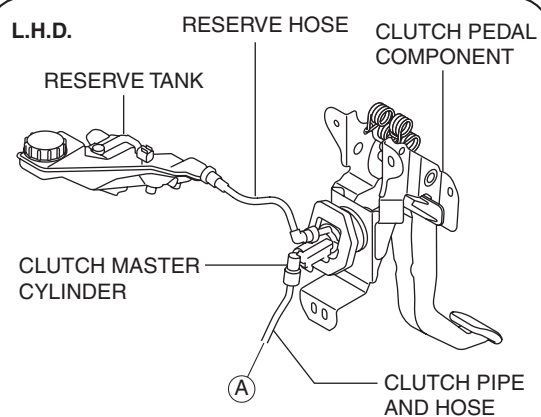

CLUTCH RELEASE COLLAR

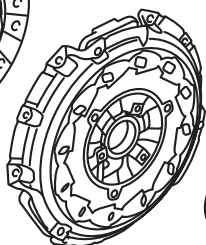

CLUTCH RELEASE FORK

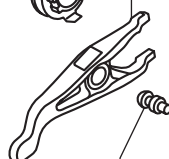

PIVOT PIN

BOOT

CLUTCH RELEASE CYLINDER

