


REDUCTION PLANETARY GEAR ASSEMBLY

id051700663900

Structural View

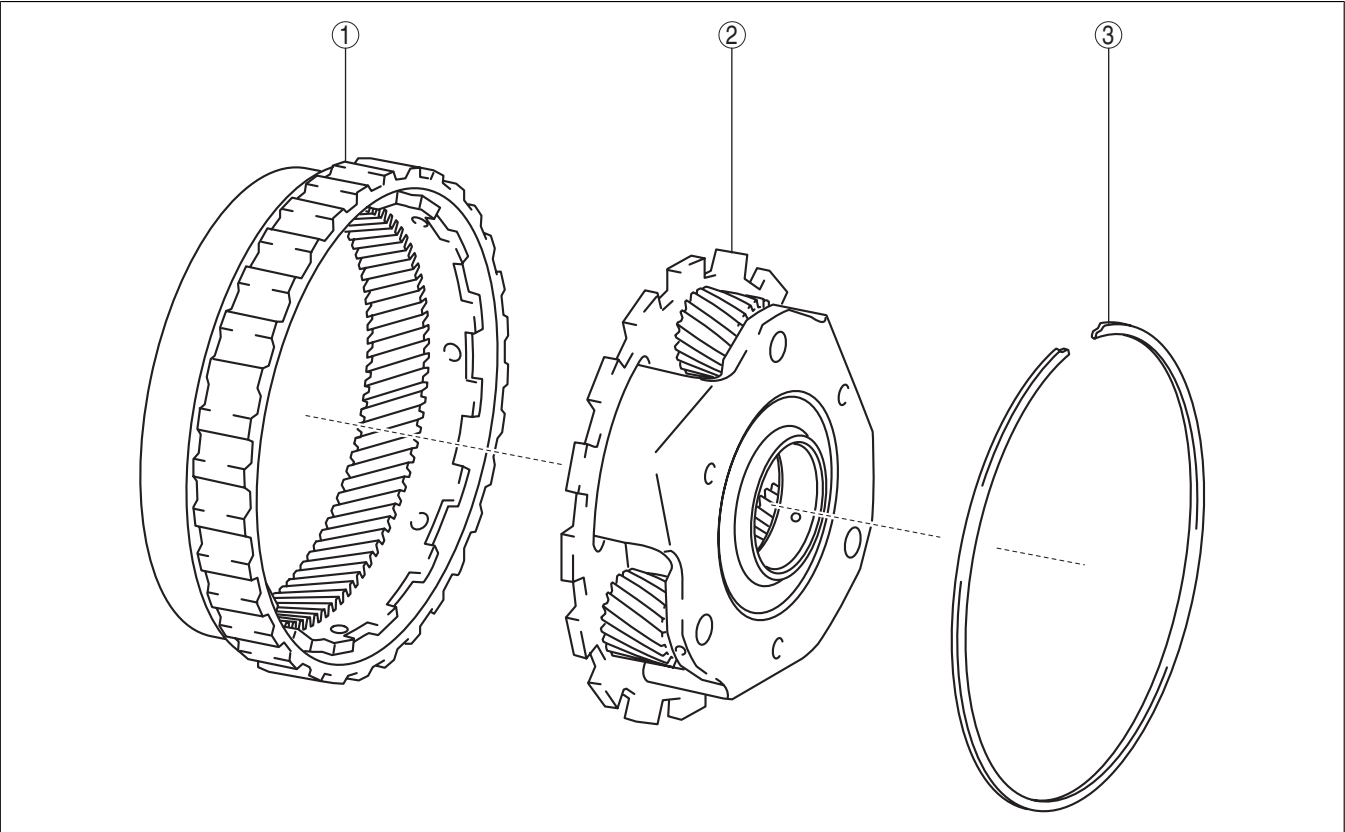


azzjw00000297

1	Rear internal gear
2	Reduction planetary carrier


3	Snap ring (outer diameter approx. 142.5 mm {5.610 in})
---	--

Assembly Procedure

1. Assemble the reduction planetary carrier.

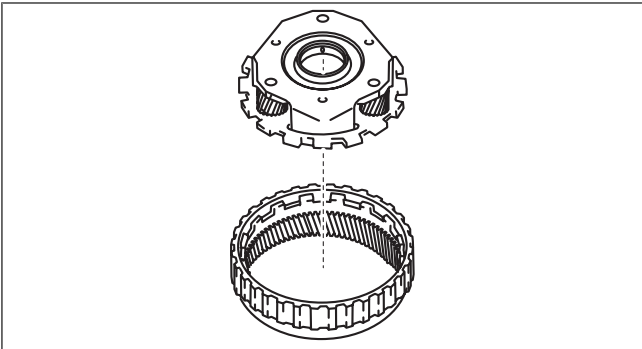

azzjw00000878

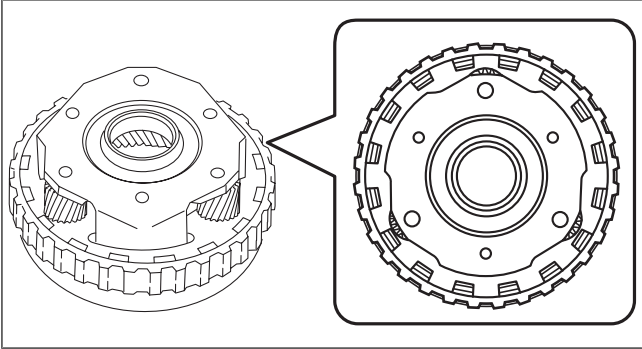

azzjw00000879


2. Assemble the snap ring.

Caution


- After assembling the snap ring, verify that the snap ring is securely inserted into the bottom of the snap ring groove.

Note

- Snap ring size: Outer diameter approx. 142.5 mm {5.610 in}

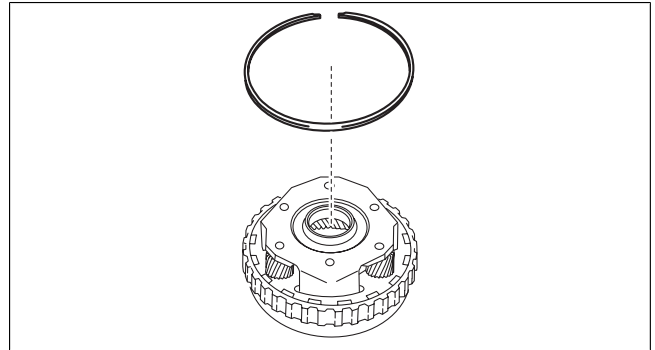

azzjw00000880

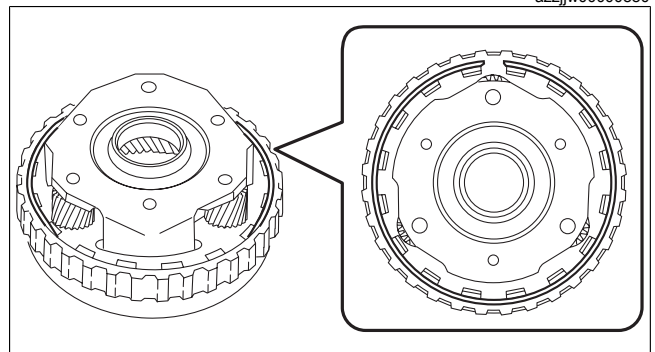

azzjw00000881