


## ENGINE LOCATION INDEX [SKYACTIV-D 2.2]

id0110s5800100

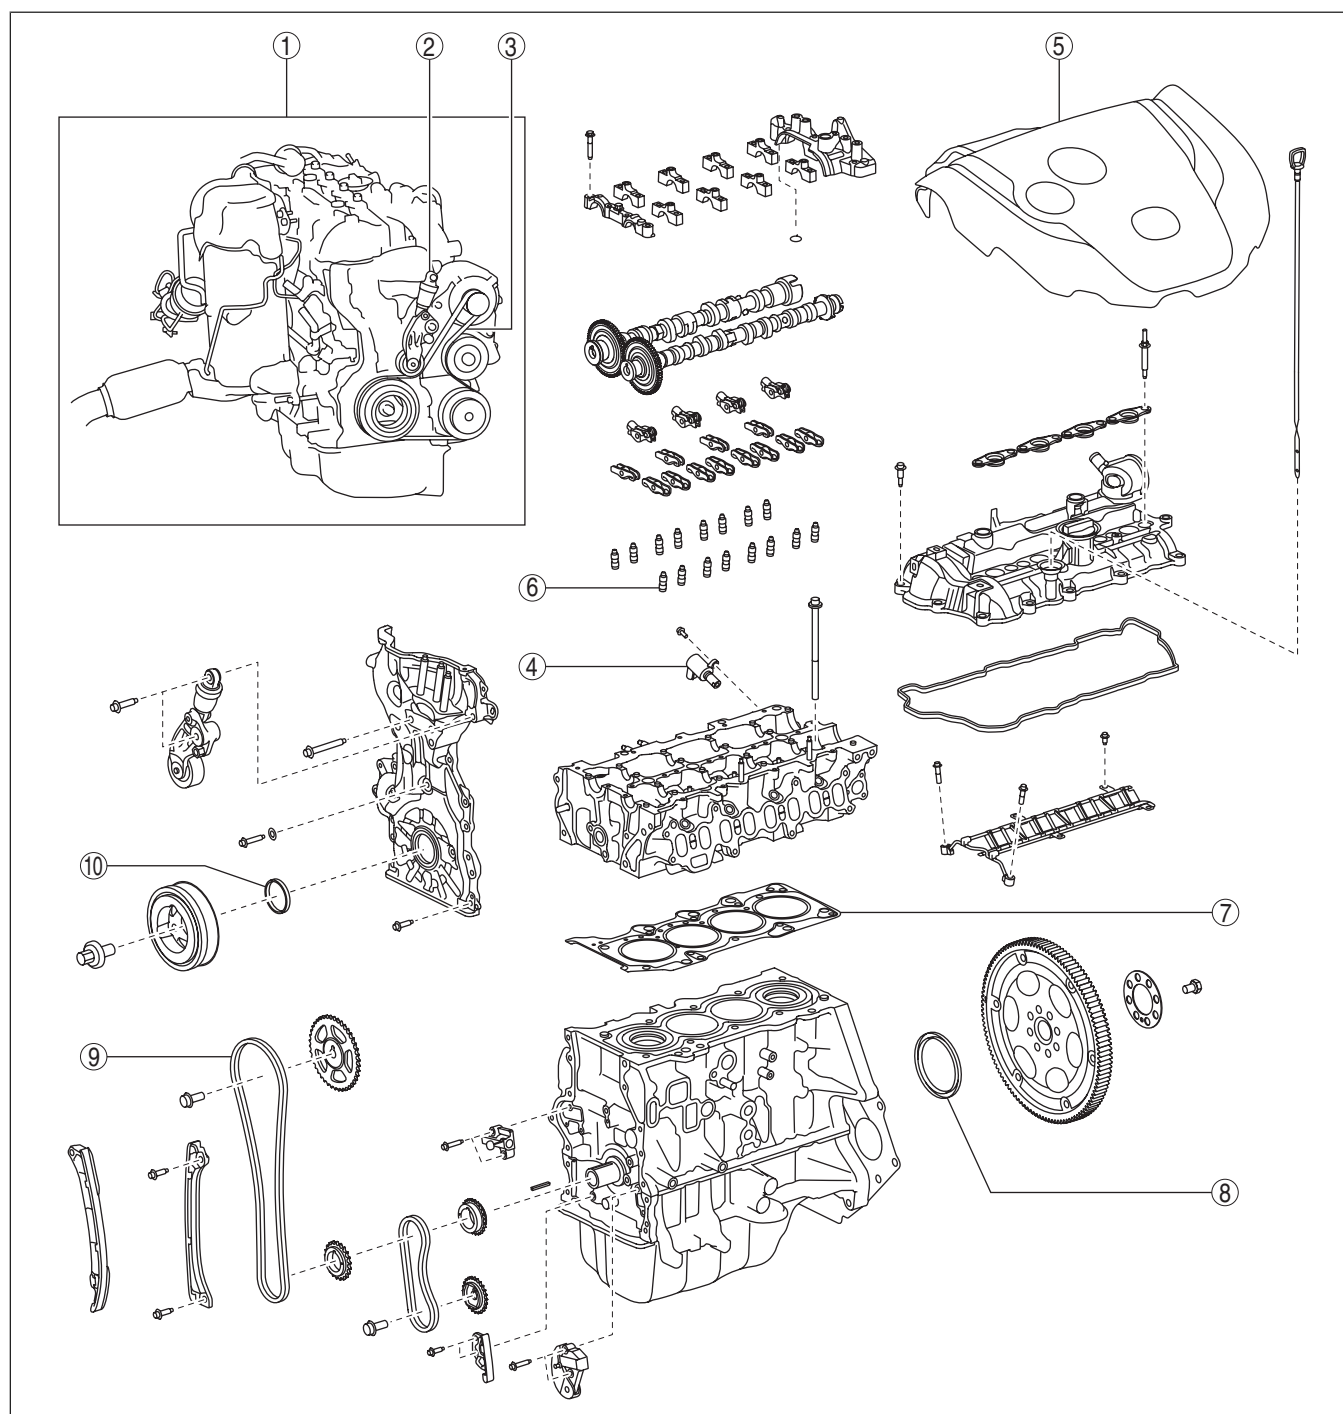

am6zzw00010079

1	<p>Engine  (See ENGINE TUNE-UP [SKYACTIV-D 2.2].)  (See COMPRESSION INSPECTION [SKYACTIV-D 2.2].)  (See ENGINE MOUNT DISASSEMBLY/ASSEMBLY [SKYACTIV-D 2.2].)  (See ENGINE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)  (See ENGINE DISASSEMBLY/ASSEMBLY [SKYACTIV-D 2.2].)</p>	2	<p>Drive belt auto tensioner  (See DRIVE BELT AUTO TENSIONER INSPECTION [SKYACTIV-D 2.2].)  (See DRIVE BELT AUTO TENSIONER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)</p>
		3	<p>Drive belt  (See DRIVE BELT INSPECTION [SKYACTIV-D 2.2].)  (See DRIVE BELT REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)</p>

---

4	OCV (See OIL CONTROL VALVE (OCV) INSPECTION [SKYACTIV-D 2.2].) (See OIL CONTROL VALVE (OCV) REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
5	Engine cover (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
6	Hydraulic lash adjuster (HLA) (See HYDRAULIC LASH ADJUSTER (HLA) INSPECTION [SKYACTIV-D 2.2].) (See HYDRAULIC LASH ADJUSTER (HLA) REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

7	Cylinder head gasket (See CYLINDER HEAD GASKET REPLACEMENT [SKYACTIV-D 2.2].)
8	Rear oil seal (See REAR OIL SEAL REPLACEMENT [SKYACTIV-D 2.2].)
9	Timing chain (See TIMING CHAIN REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
10	Front oil seal (See FRONT OIL SEAL REPLACEMENT [SKYACTIV-D 2.2].)