


CHARGE AIR COOLER INSPECTION [SKYACTIV-D 2.2]

id0113z7800900

1. Remove the charge air cooler. (See CHARGE AIR COOLER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
2. Plug port A.
3. Apply pressure from port B and verify that there is no airflow.
 - If there is airflow, replace the charge air cooler. (See CHARGE AIR COOLER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

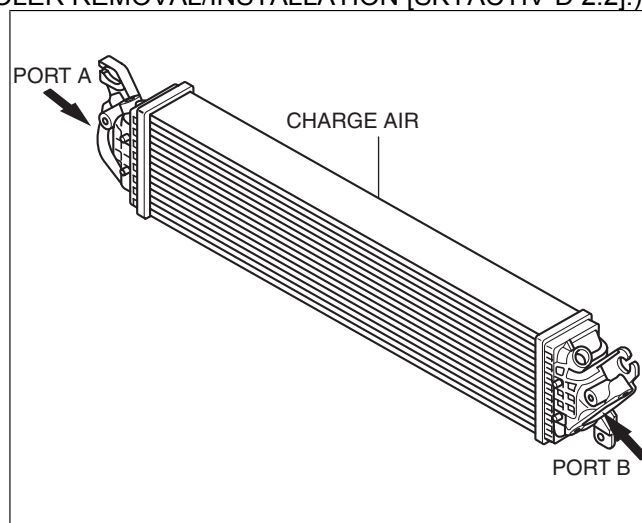

ac5wzw00005906