


REAR HEAT DUCT REMOVAL/INSTALLATION

id071100800900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
 - (2) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
 - (3) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
 - (4) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
 - (5) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
 - (6) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
 - (7) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
 - (8) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
 - (9) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (10) Front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
 - (11) Joint cover (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
3. Turn the floor covering over.
4. Remove in the order indicated in the table.

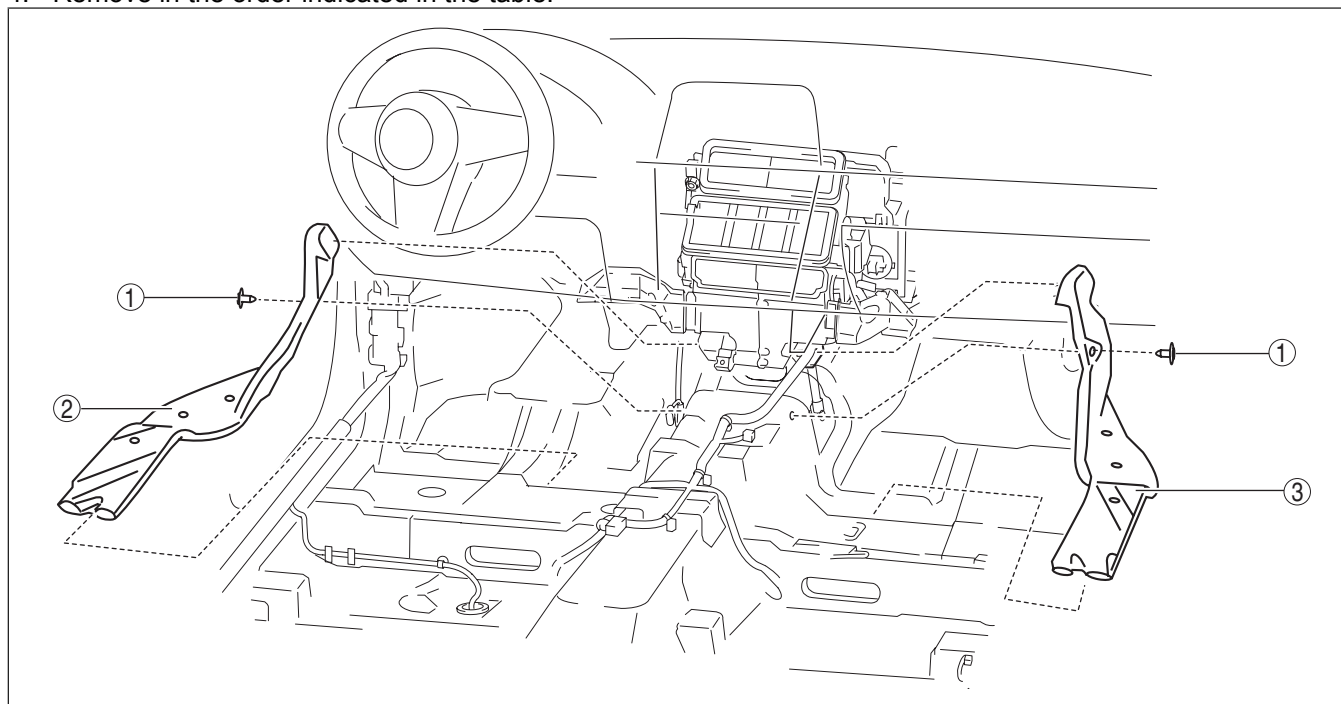

ac5wzw00001800

1	Fastener
2	Rear heat duct (1)
3	Rear heat duct (2)

5. Install in the reverse order of removal.