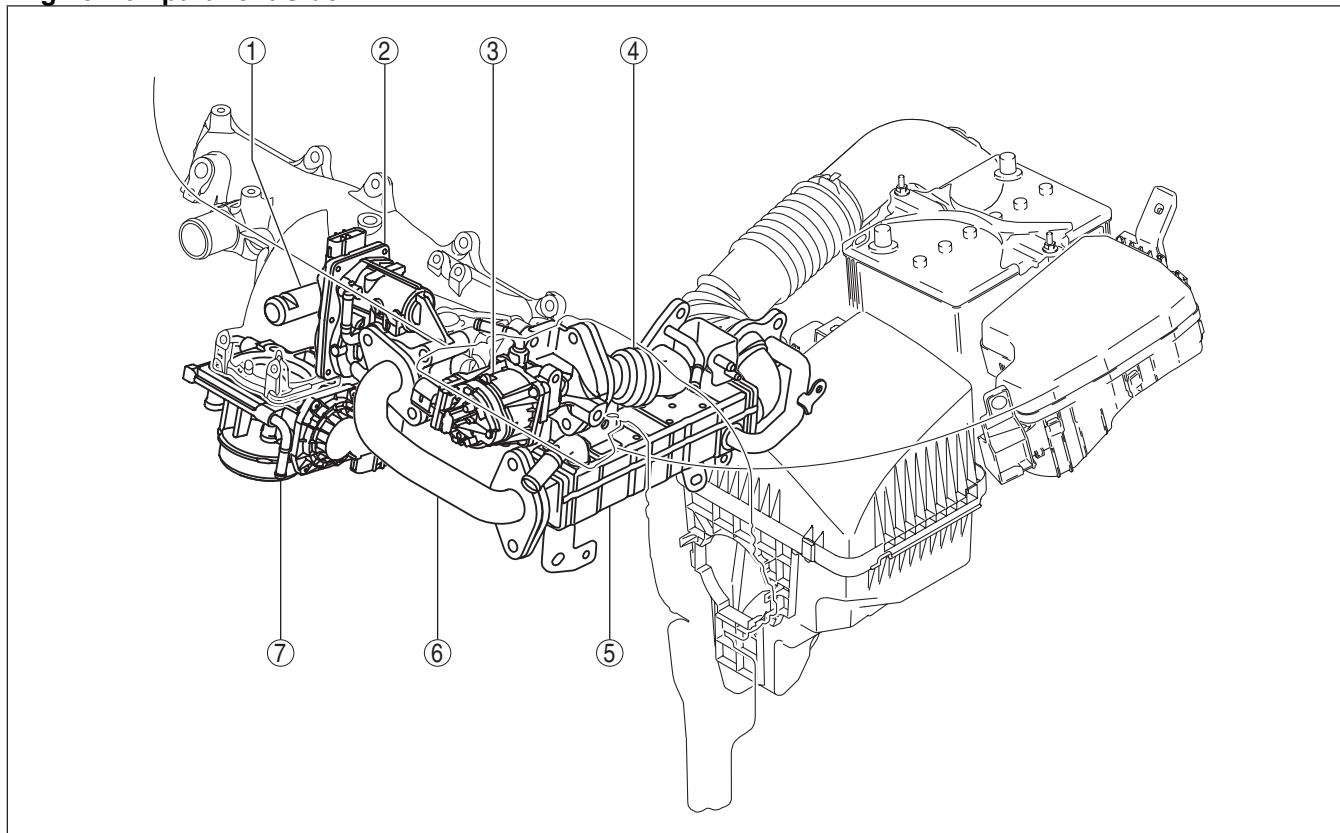


**Engine Compartment Side**

ac5jjw00003545


1	EGR pipe (Intake manifold side) (See EGR PIPE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
2	EGR valve (See EGR VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See EGR VALVE INSPECTION [SKYACTIV-D 2.2].)
3	EGR cooler bypass valve (See EGR COOLER BYPASS VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See EGR COOLER BYPASS VALVE INSPECTION [SKYACTIV-D 2.2].)
4	EGR pipe (EGR cooler bypass valve side) (See EGR PIPE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

5	EGR cooler (See EGR COOLER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See EGR COOLER INSPECTION [SKYACTIV-D 2.2].)
6	EGR pipe (EGR valve side) (See EGR PIPE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
7	Intake shutter valve (See INTAKE SHUTTER VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See INTAKE SHUTTER VALVE INSPECTION [SKYACTIV-D 2.2].)

**Exhaust System Side**

## 2WD


1	Catalytic converter (See EXHAUST SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-D 2.2].)
---	--

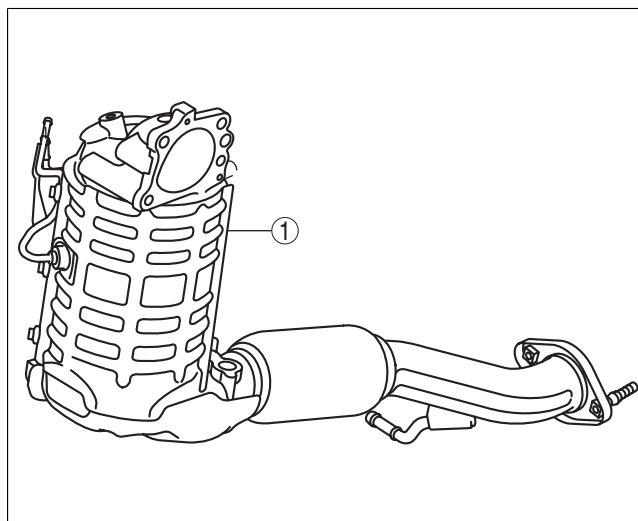

ac5jjw00003547

## 4WD


1	Catalytic converter (See EXHAUST SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-D 2.2].)
---	--

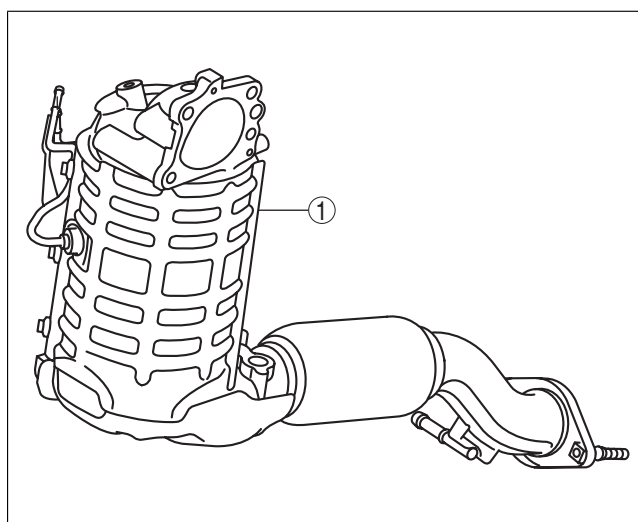

ac5jjw00003546

## Fuel Tank Side

## 2WD

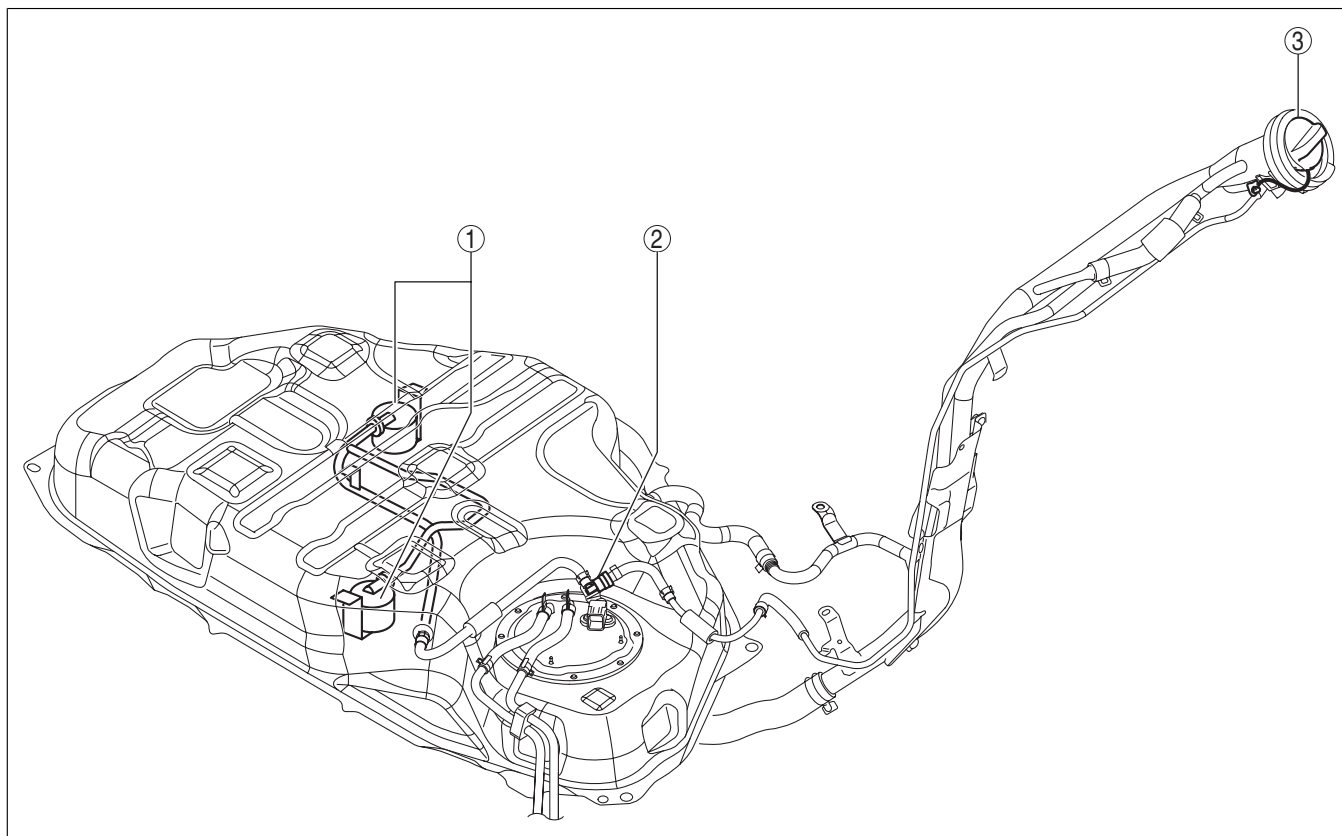


ac5jjw00003548

1	Rollover valve (See ROLLOVER VALVE REMOVAL/ INSTALLATION [SKYACTIV-D 2.2].) (See ROLLOVER VALVE INSPECTION [SKYACTIV-D 2.2].)
2	Check valve (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See CHECK VALVE INSPECTION [SKYACTIV-D 2.2].)

3	Fuel-filler cap (See FUEL-FILLER PIPE REMOVAL/ INSTALLATION [SKYACTIV-D 2.2].)
---	--

## 4WD

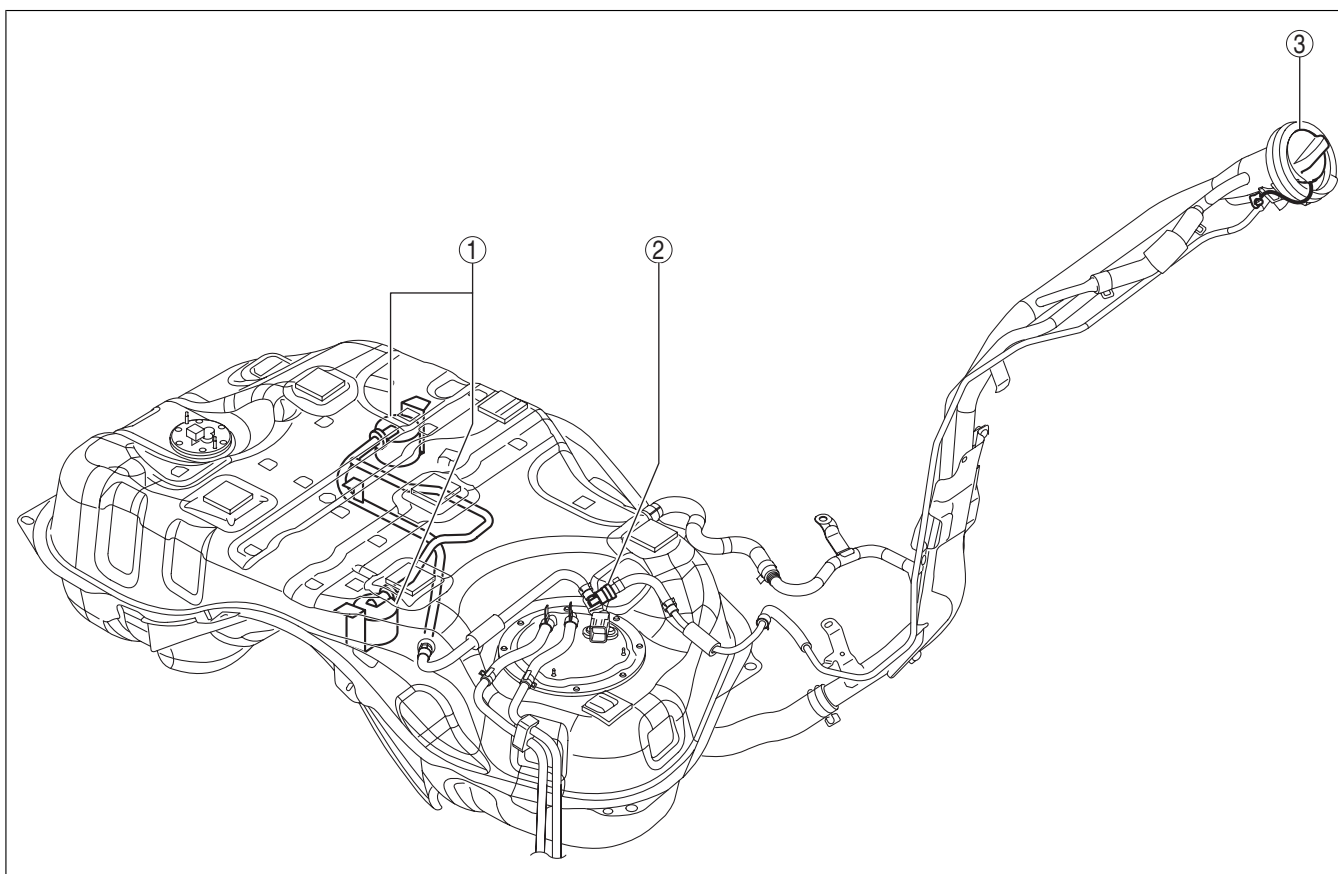

ac5ijw00003549

1	Rollover valve (See ROLLOVER VALVE REMOVAL/ INSTALLATION [SKYACTIV-D 2.2].) (See ROLLOVER VALVE INSPECTION [SKYACTIV-D 2.2].)
2	Check valve (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See CHECK VALVE INSPECTION [SKYACTIV-D 2.2].)

3	Fuel-filler cap (See FUEL-FILLER PIPE REMOVAL/ INSTALLATION [SKYACTIV-D 2.2].)
---	--