
KEYLESS RECEIVER


id091400109800

Purpose, Function

- Receives ID data from the remote transmitter and sends the received ID data to the start stop unit.

Construction

- Installed inside the trunk side trim.

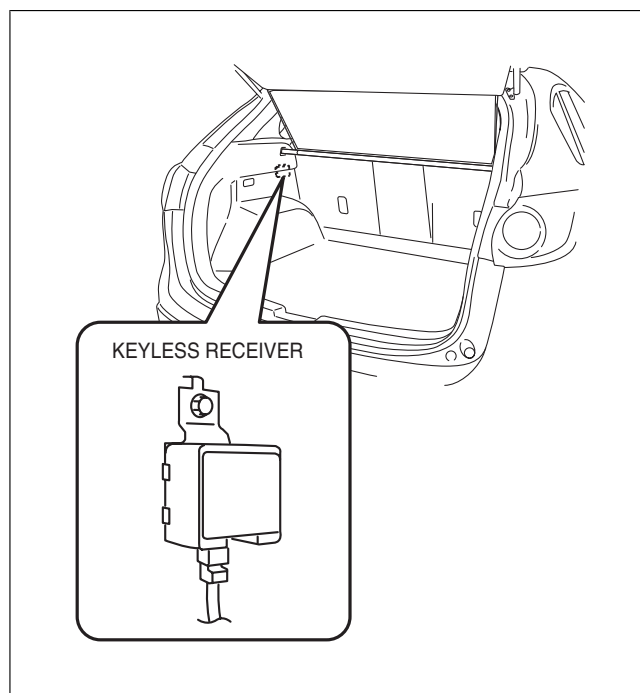

ac5wzn00000551

Operation

1. The ID data sent from the remote transmitter is received by the keyless receiver.
2. The keyless receiver transmits the received ID data to the start stop unit.

Fail-safe

- Function not equipped.