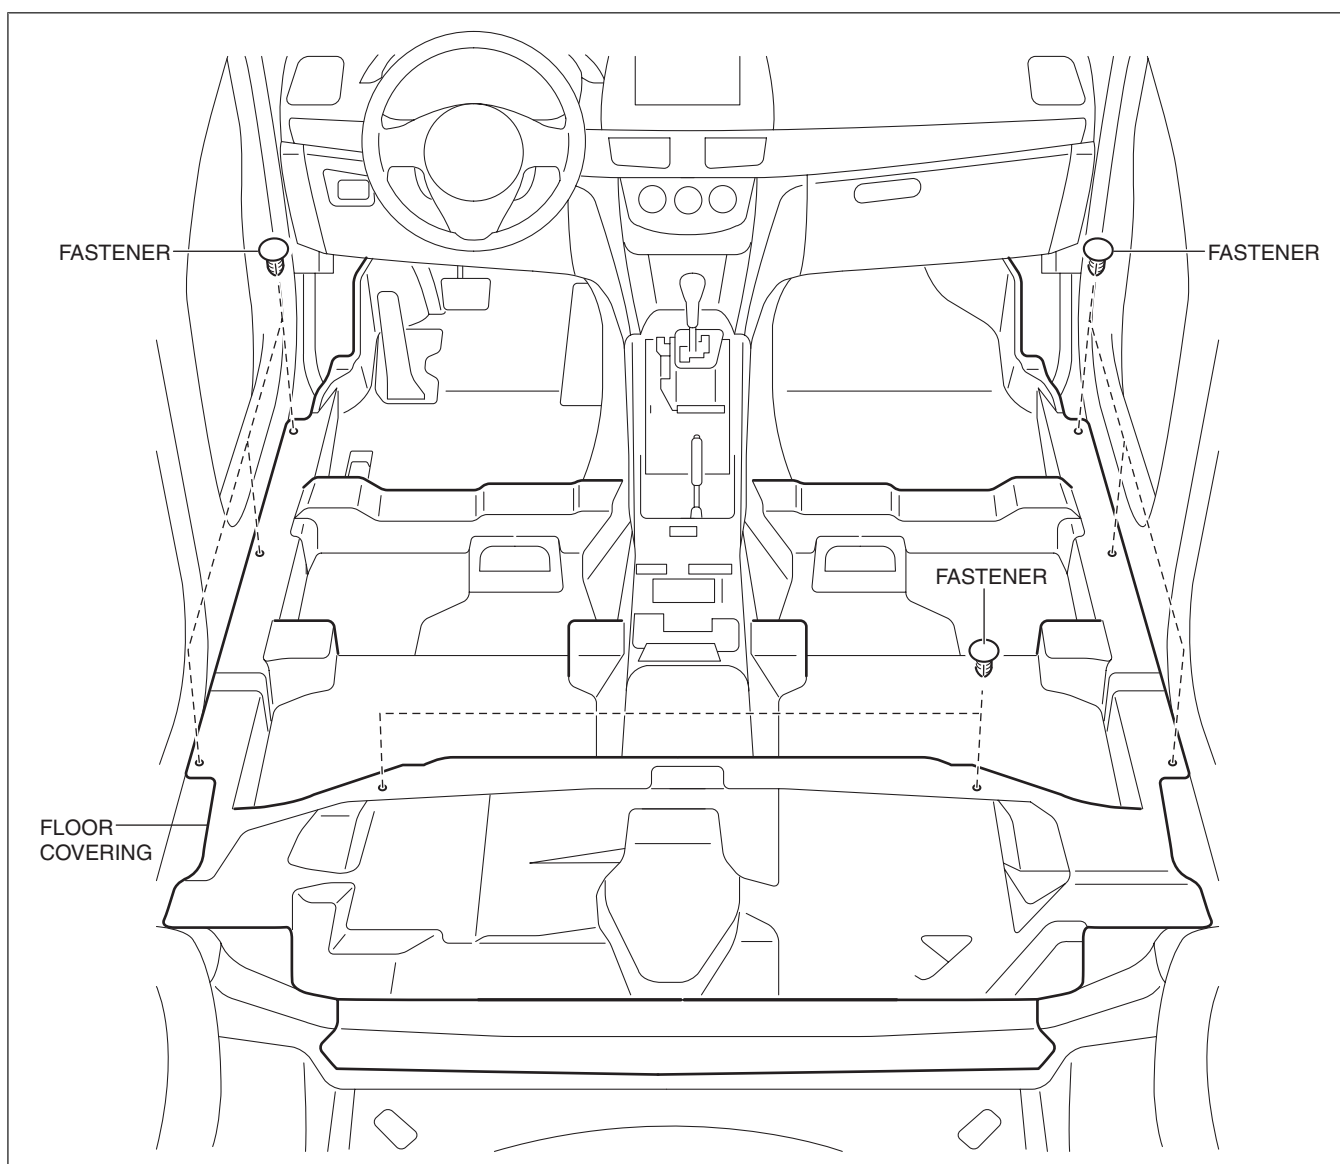

FLOOR COVERING REMOVAL/INSTALLATION

id091700803000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (2) Front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
 - (4) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
 - (5) Rear seat cushion (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
 - (6) Front seat (See FRONT SEAT REMOVAL/INSTALLATION.)
 - (7) Lower anchor of the front seat belt (without lap pre-tensioner seat belt) (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
 - (8) Lap pre-tensioner seat belt (with lap pre-tensioner seat belt) (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
 - (9) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
 - (10) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
 - (11) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
 - (12) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
 - (13) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
 - (14) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
 - (15) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
 - (16) SAS control module (See SAS CONTROL MODULE REMOVAL/INSTALLATION.)
 - (17) Parking lever (See PARKING BRAKE LEVER REMOVAL/INSTALLATION.)
 - (18) Joint cover (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
3. Remove fasteners.



ac5wzw00003075

4. Take the floor covering out from the opened door.
5. Install in the reverse order of removal.