


LIFTGATE GARNISH REMOVAL/INSTALLATION


id091600445800

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
 - (2) Liftgate side trim (See LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Liftgate recess (See LIFTGATE RECESS REMOVAL/INSTALLATION.)
 - (4) Liftgate lower trim (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
3. Disconnect the connectors.

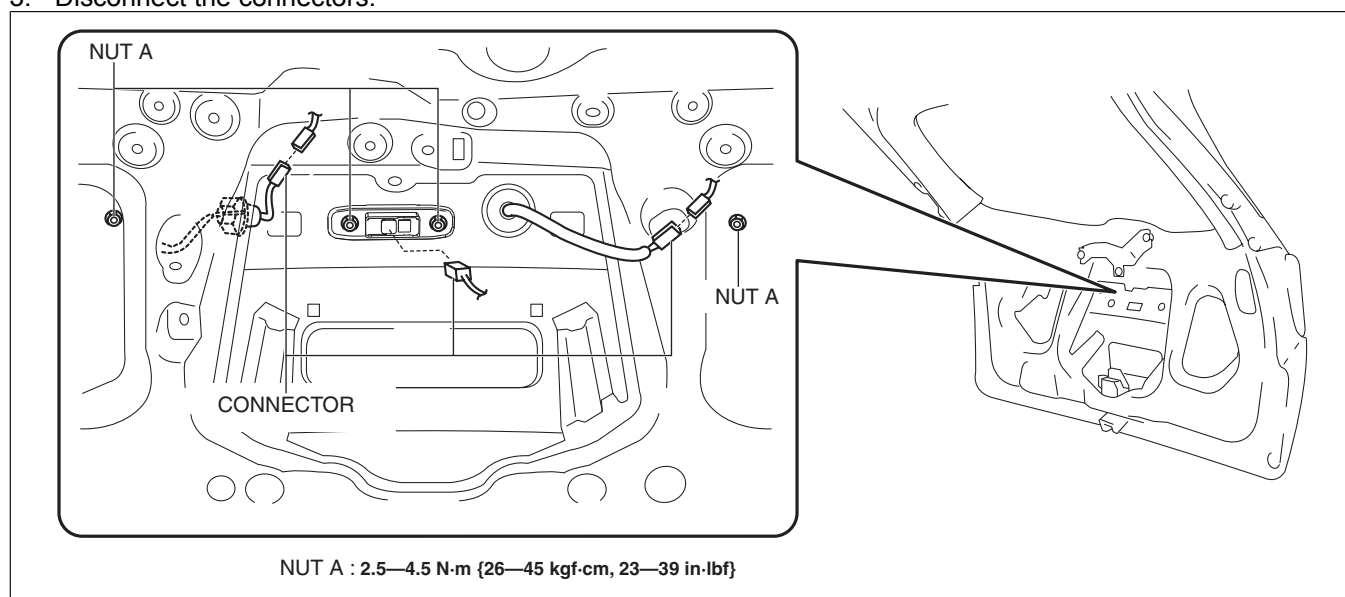


ac5wzw00003034

4. Remove nuts A.
5. Detach clips B shown in the figure.

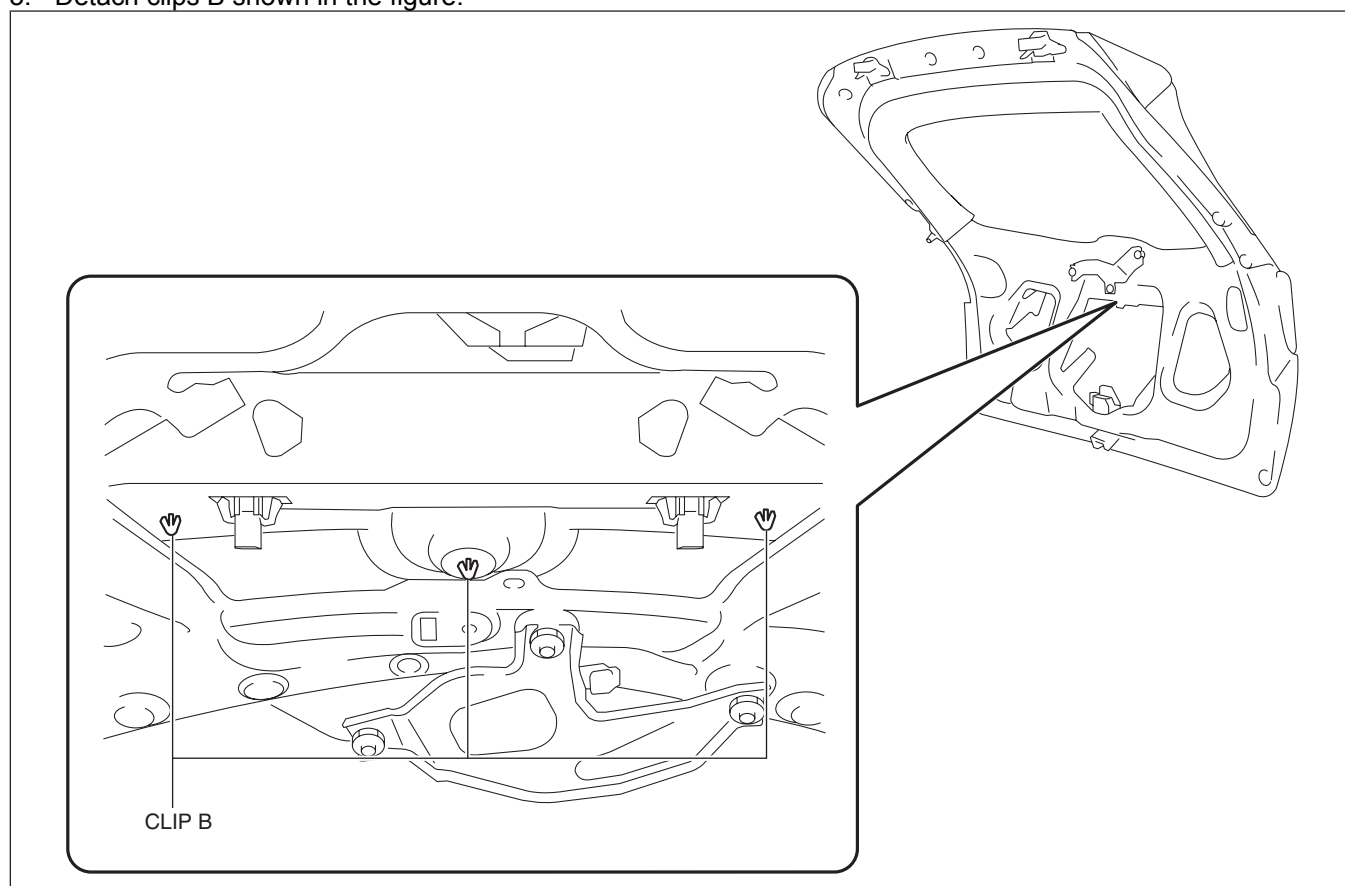

ac5wzw00001266

6. Remove the liftgate garnish shown in the figure.

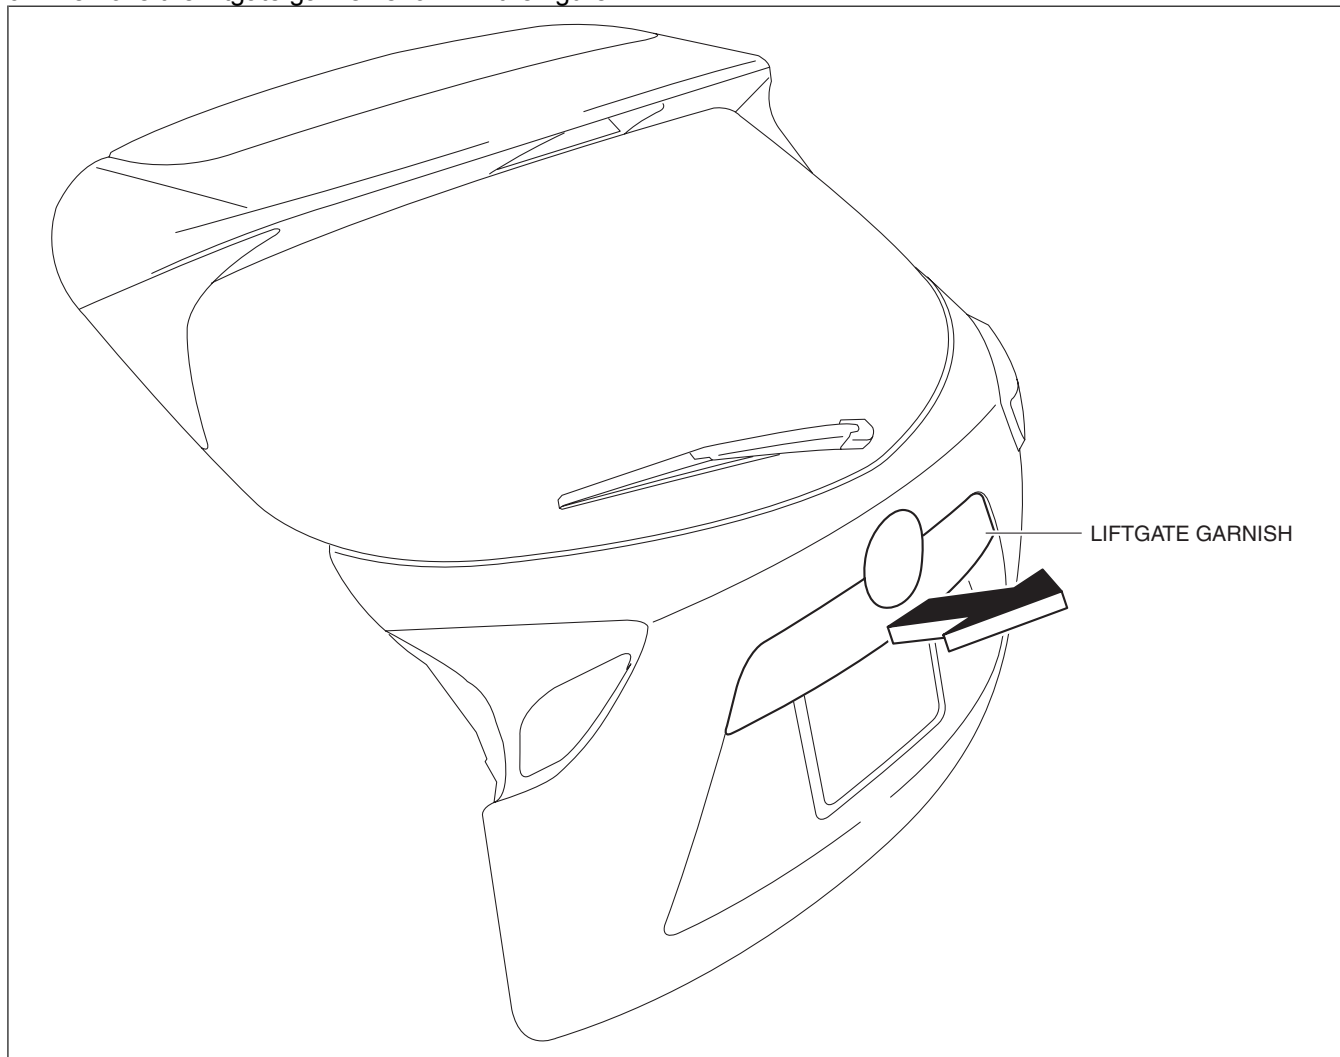

7. Install in the reverse order of removal.

ac5wzw00001267