


BLIND SPOT MONITORING (BSM) BRACKET REMOVAL/INSTALLATION

id092200013900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Rear combination lights (See REAR COMBINATION LIGHT REMOVAL/INSTALLATION.)
 - (2) Rear bumper (See REAR BUMPER REMOVAL/INSTALLATION.)
 - (3) BSM control module (See BLIND SPOT MONITORING (BSM) CONTROL MODULE REMOVAL/INSTALLATION.)
3. Remove the nuts.


ILLUSTRATION INDICATES LEFT SIDE. (RH SIDE IDENTICAL)

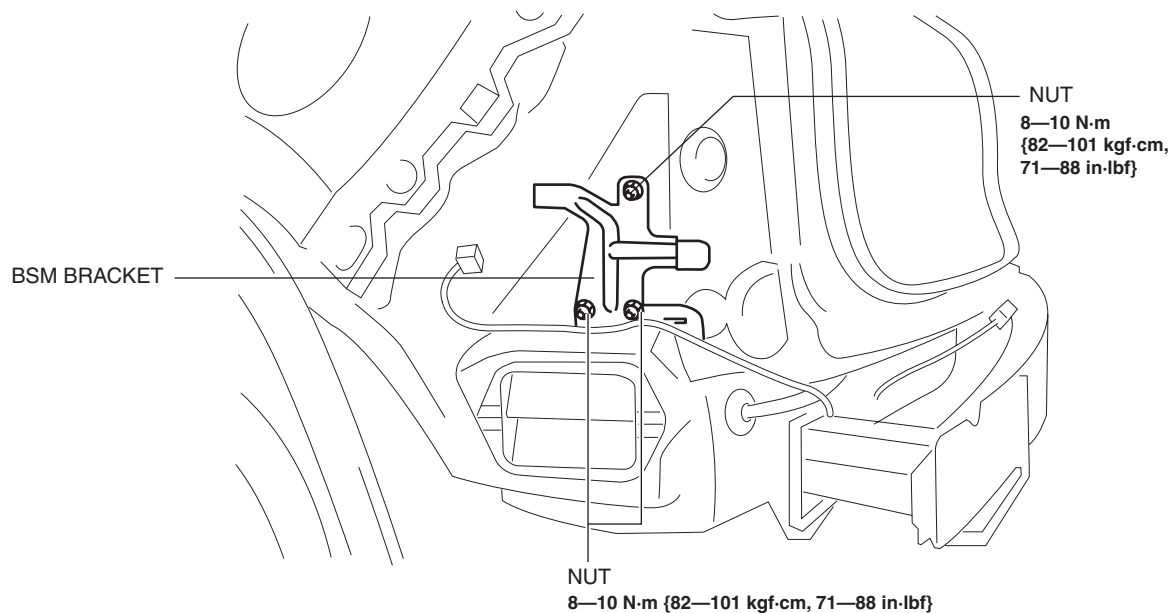

ac5wzw00000856

4. While pressing the clip tabs in the direction of the arrows (1) shown in the figure, press the clip in the direction of the arrow (2) to detach the clip tabs from the bracket.

ILLUSTRATION INDICATES LEFT SIDE. (RH SIDE IDENTICAL)

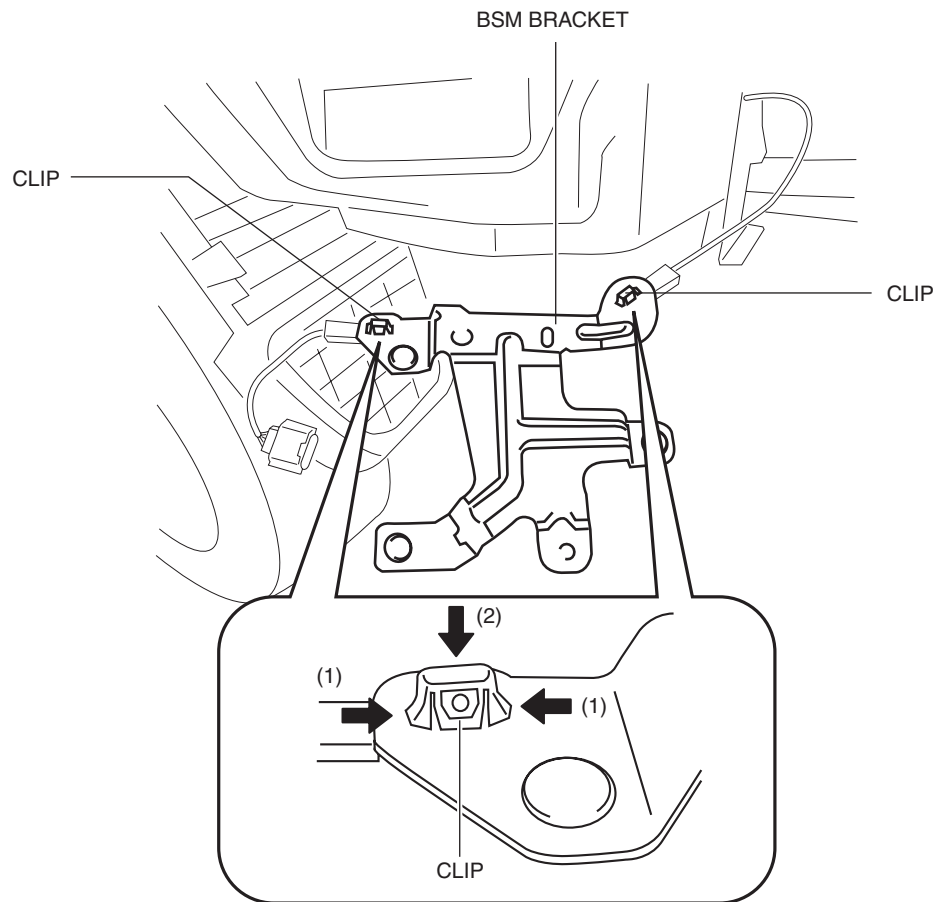

ac5wzw00000857

5. Detach the clip.
6. Remove the BSM bracket.
7. Install in the reverse order of removal.
8. Perform the BSM radar test. (See BLIND SPOT MONITORING (BSM) RADAR TEST.)

Caution

- If the BSM bracket is replaced, not performing the BSM radar test will cause a deviation in the radar emission angle which could result in the system not detecting a vehicle approaching from the rear correctly. If the BSM bracket is replaced, perform the BSM radar test.