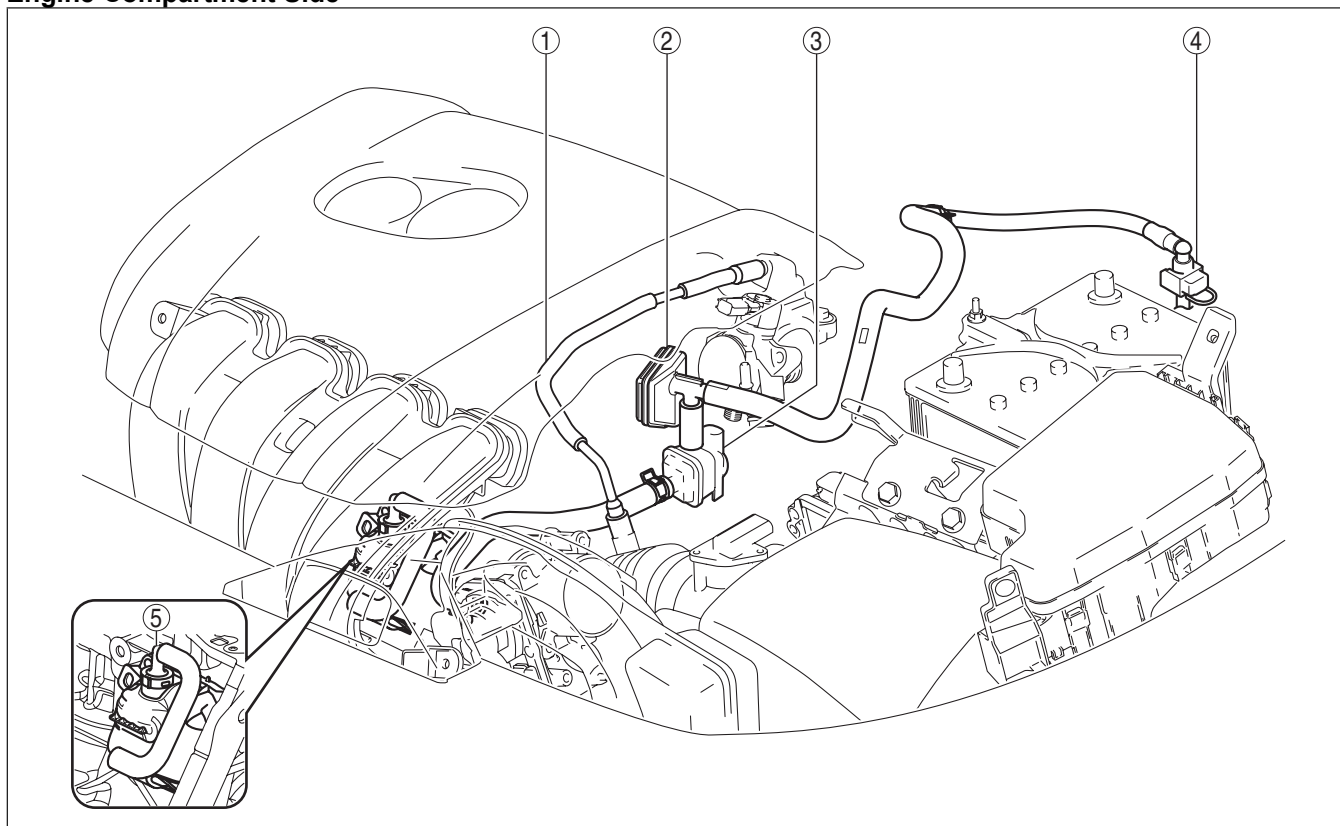


Engine Compartment Side

ac5wzw00001383


1	Ventilation hose (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
2	Catch tank (See PURGE SOLENOID VALVE REMOVAL/ INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See CATCH TANK INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
3	Purge solenoid valve (See PURGE SOLENOID VALVE REMOVAL/ INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See PURGE SOLENOID VALVE INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

4	Quick release connector (See QUICK RELEASE CONNECTOR (EMISSION SYSTEM) REMOVAL/INSTALLATION [SKYACTIV- G 2.0, SKYACTIV-G 2.5].)
5	PCV valve (See POSITIVE CRANKCASE VENTILATION (PCV) VALVE REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See POSITIVE CRANKCASE VENTILATION (PCV) VALVE INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

Exhaust System Side

2WD


1	WU-TWC (See EXHAUST SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
2	TWC (See EXHAUST SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

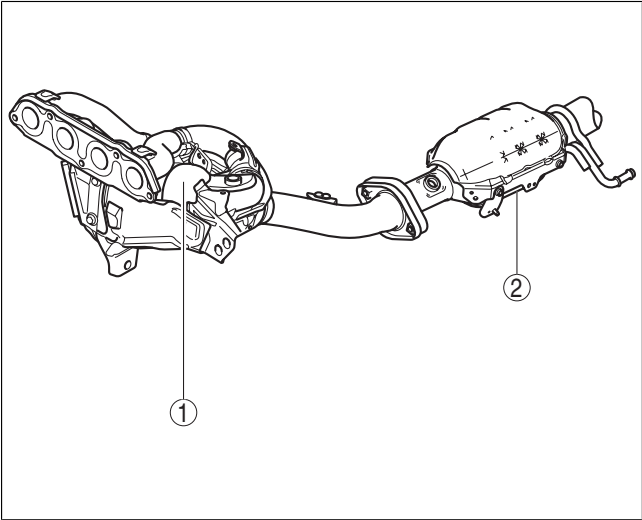

ac5uuw00000456


4WD

1	WU-TWC (See EXHAUST SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
2	TWC (See EXHAUST SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

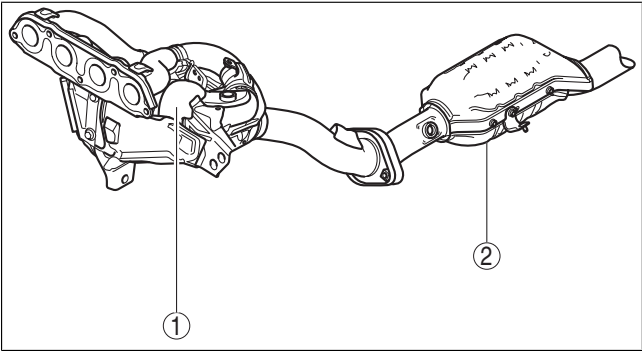

ac5uuw00000457


Fuel Tank Side

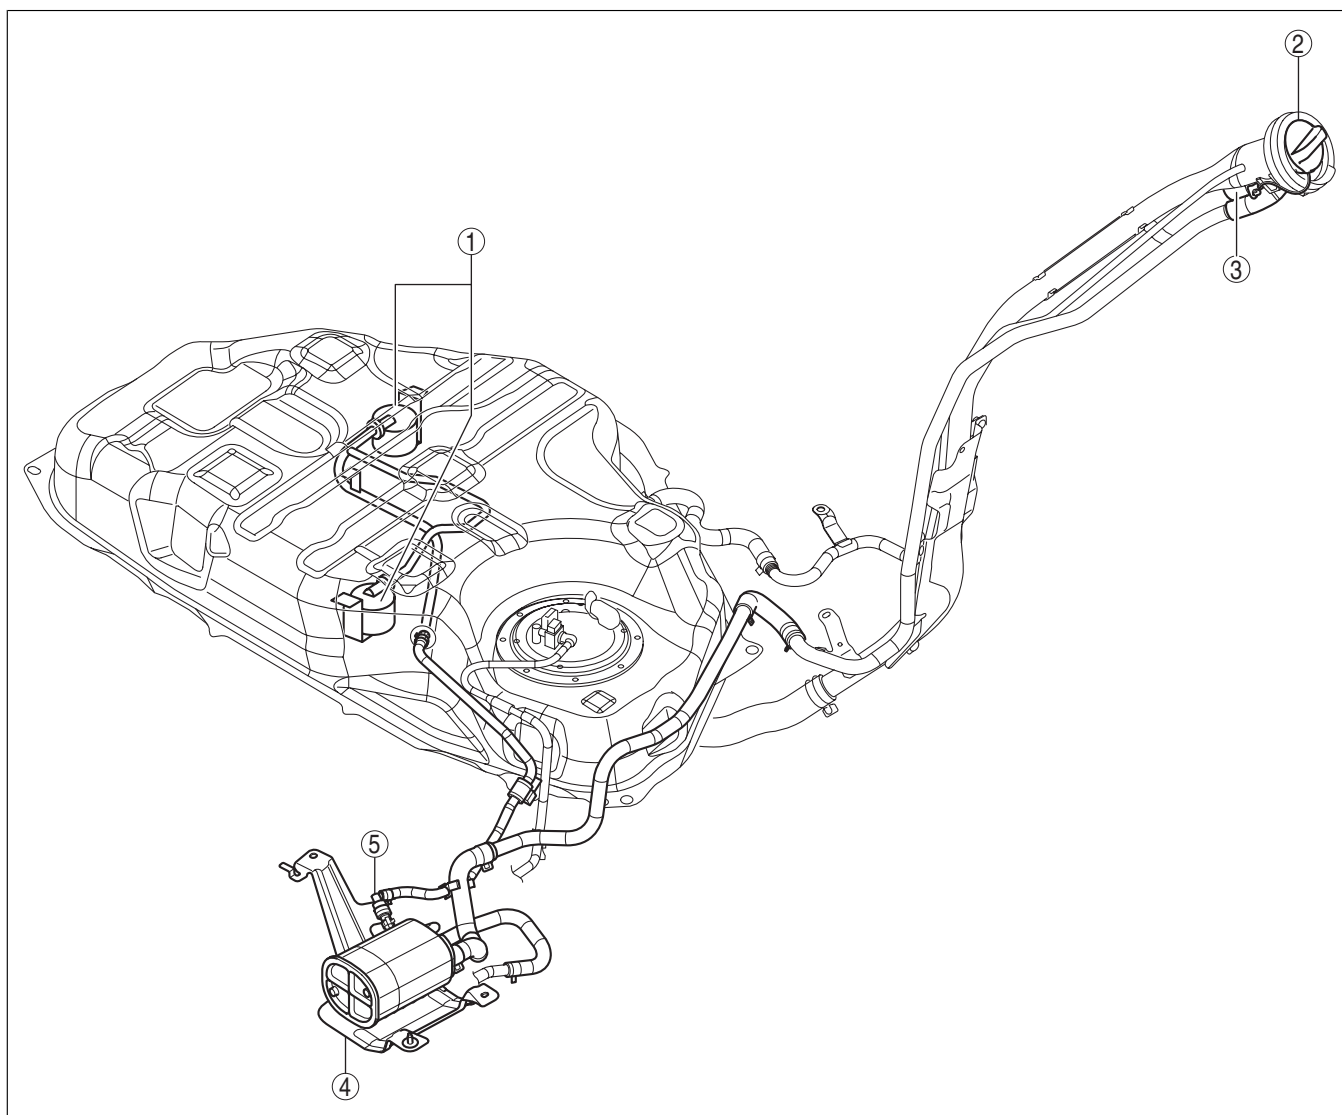

ac5wzw00002704

1	Rollover valve (See ROLLOVER VALVE REMOVAL/ INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See ROLLOVER VALVE INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
2	Fuel-filler cap (See FUEL-FILLER PIPE REMOVAL/ INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
3	Plug (See FUEL-FILLER PIPE REMOVAL/ INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

4	Charcoal canister (See CHARCOAL CANISTER REMOVAL/ INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See CHARCOAL CANISTER INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
5	Check valve (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See CHECK VALVE INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

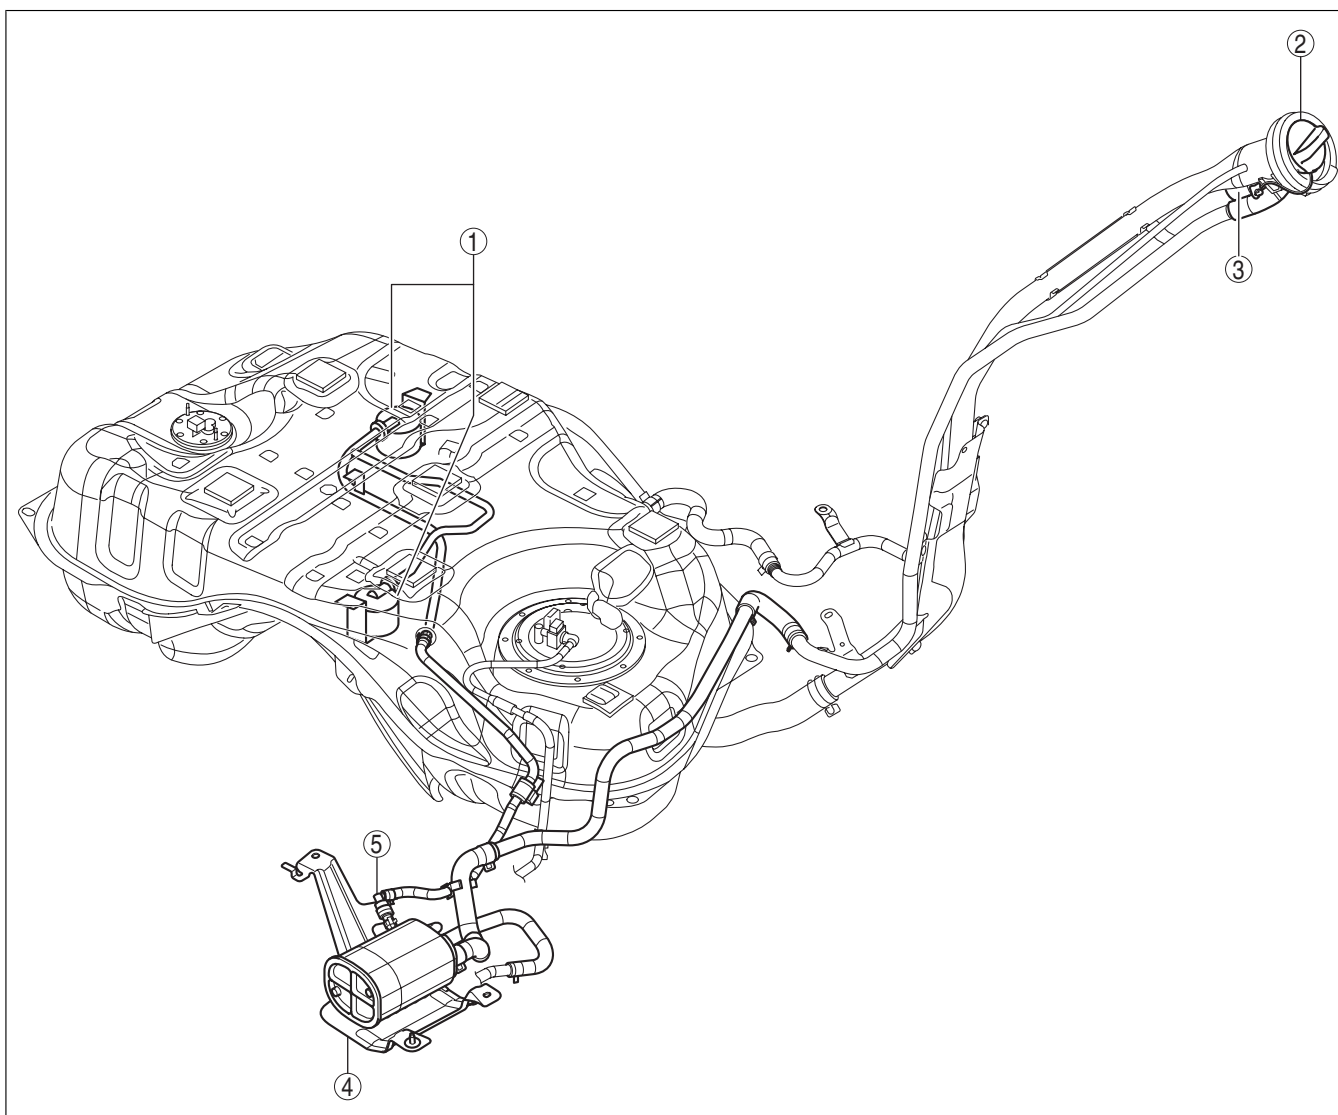

ac5wzw00002705

1	Rollover valve (See ROLLOVER VALVE REMOVAL/ INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See ROLLOVER VALVE INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
2	Fuel-filler cap (See FUEL-FILLER PIPE REMOVAL/ INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
3	Plug (See FUEL-FILLER PIPE REMOVAL/ INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

4	Charcoal canister (See CHARCOAL CANISTER REMOVAL/ INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See CHARCOAL CANISTER INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
5	Check valve (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See CHECK VALVE INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)