

STARTER INTERLOCK SWITCH INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0119i2104200

Caution

- Do not reuse the starter interlock switch if it is removed from the vehicle even once. Replace with a new starter interlock switch when installing.


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)])
2. Disconnect the starter interlock switch connector.
3. Verify that the continuity is as indicated in the table using a tester.

○—○ : Continuity

Condition	Terminal	
	A	B
Clutch pedal is depressed	○	○
Clutch pedal is not depressed		

am6zzw00002367

- If the continuity is not as indicated in the table, replace the starter interlock switch. (See STARTER INTERLOCK SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R].)

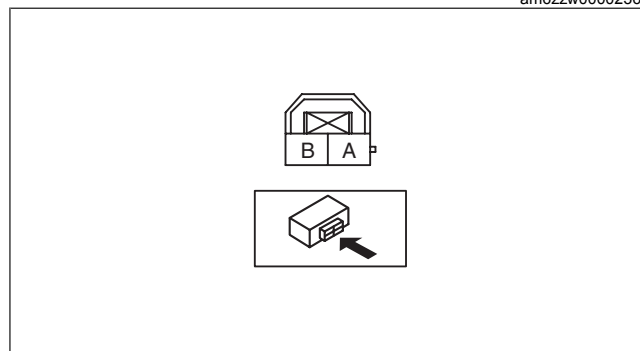

am6xuw00002340