


WASHER FLUID-LEVEL SENSOR INSPECTION

id091900801900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Partially peel back the front over fender. (See FRONT OVER FENDER REMOVAL/INSTALLATION.)
3. Set the mudguard (RH) aside. (See MUDGUARD REMOVAL/INSTALLATION.)
4. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
5. Inspect for continuity according to washer fluid level between the washer fluid-level sensor terminals.

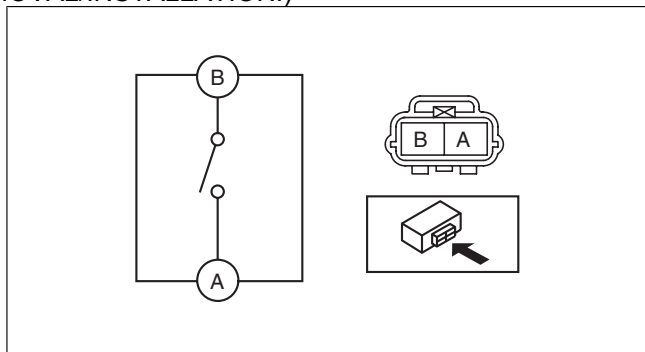

ac5jjw00000678

- If not as indicated in the table, replace the washer fluid-level sensor. (See WASHER FLUID-LEVEL SENSOR REMOVAL/INSTALLATION.)

Fluid level	Terminal	
	A	B
	○ — ○ : Continuity	
Above low		
Below low	○ —	— ○

am3zzw00011658