


## FRONT COMBINATION LIGHT DISASSEMBLY/ASSEMBLY

id091800816000

1. Disassemble in the order shown in the figure.

### Halogen type

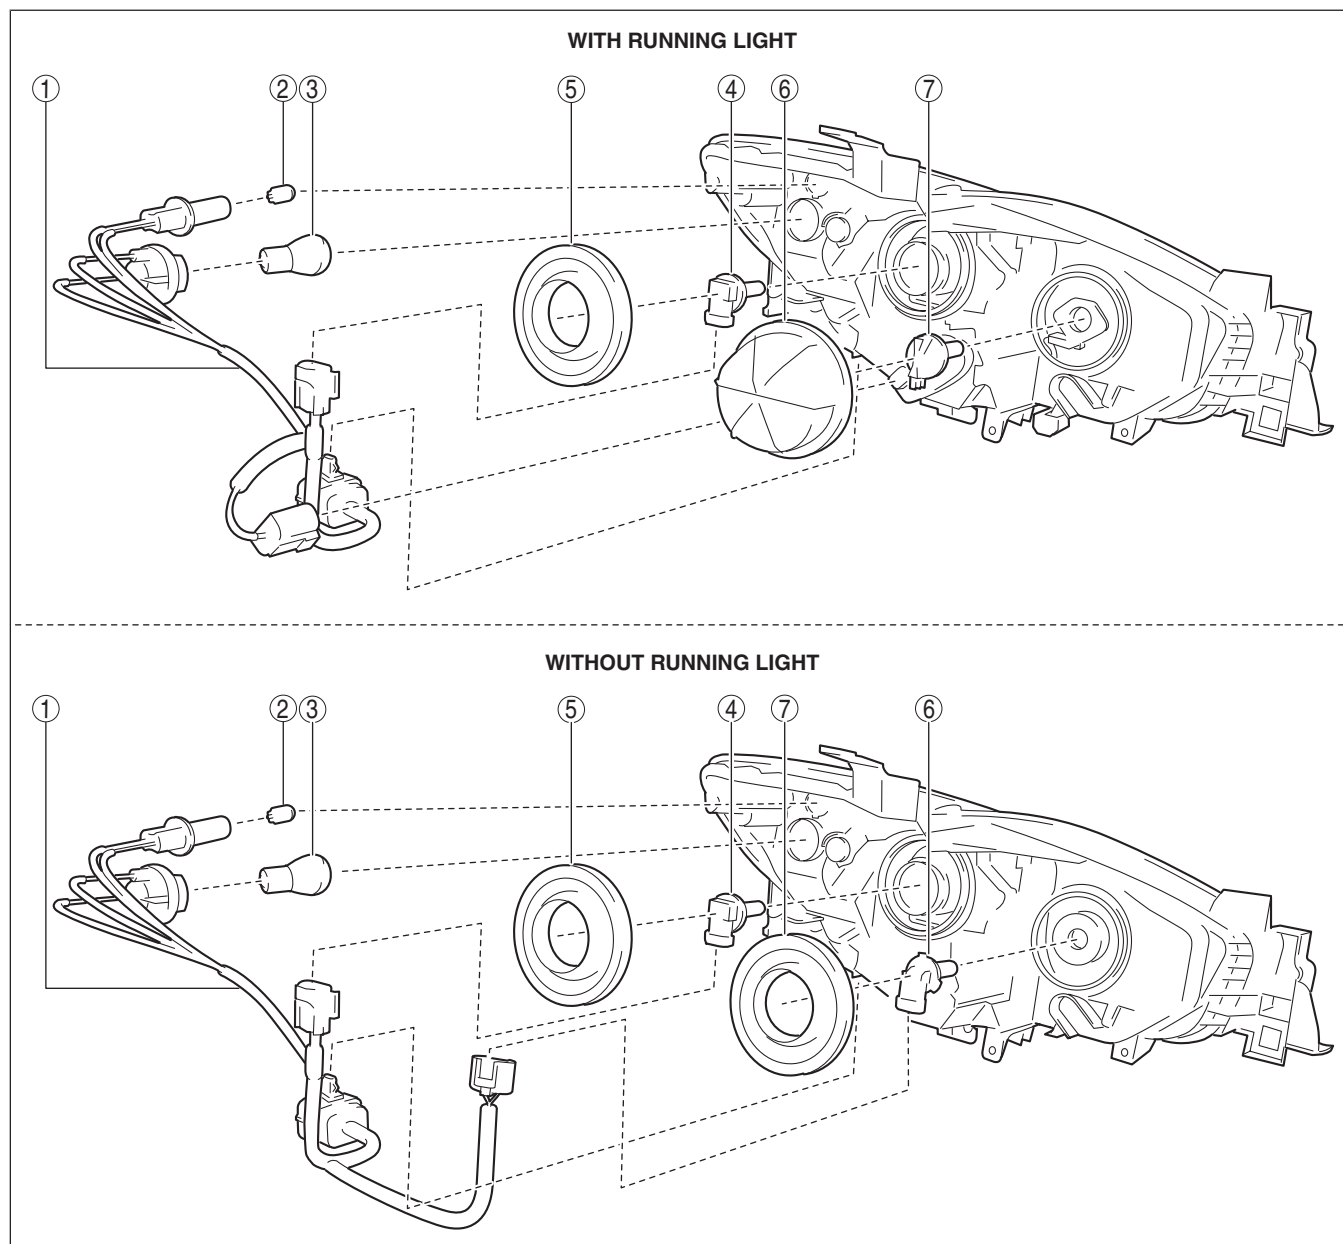


ac5wzw00005596

1	Short cord (See Short Cord Removal Note.)
2	Parking light bulb (See PARKING LIGHT BULB REMOVAL/ INSTALLATION.)
3	Front turn light bulb (See FRONT TURN LIGHT BULB REMOVAL/ INSTALLATION.)
4	Headlight LO bulb (See HEADLIGHT BULB REMOVAL/ INSTALLATION.)
5	Cover No. 1 (See Cover Installation Note.)

6	Cover No.2 (with running light) (See Cover Installation Note.)
	Headlight HI bulb (without running light) (See HEADLIGHT BULB REMOVAL/ INSTALLATION.)
7	Headlight HI bulb (Running light bulb) (with running light) (See HEADLIGHT BULB REMOVAL/ INSTALLATION.)
	Cover No.2 (without running light) (See Cover Installation Note.)

Discharge type

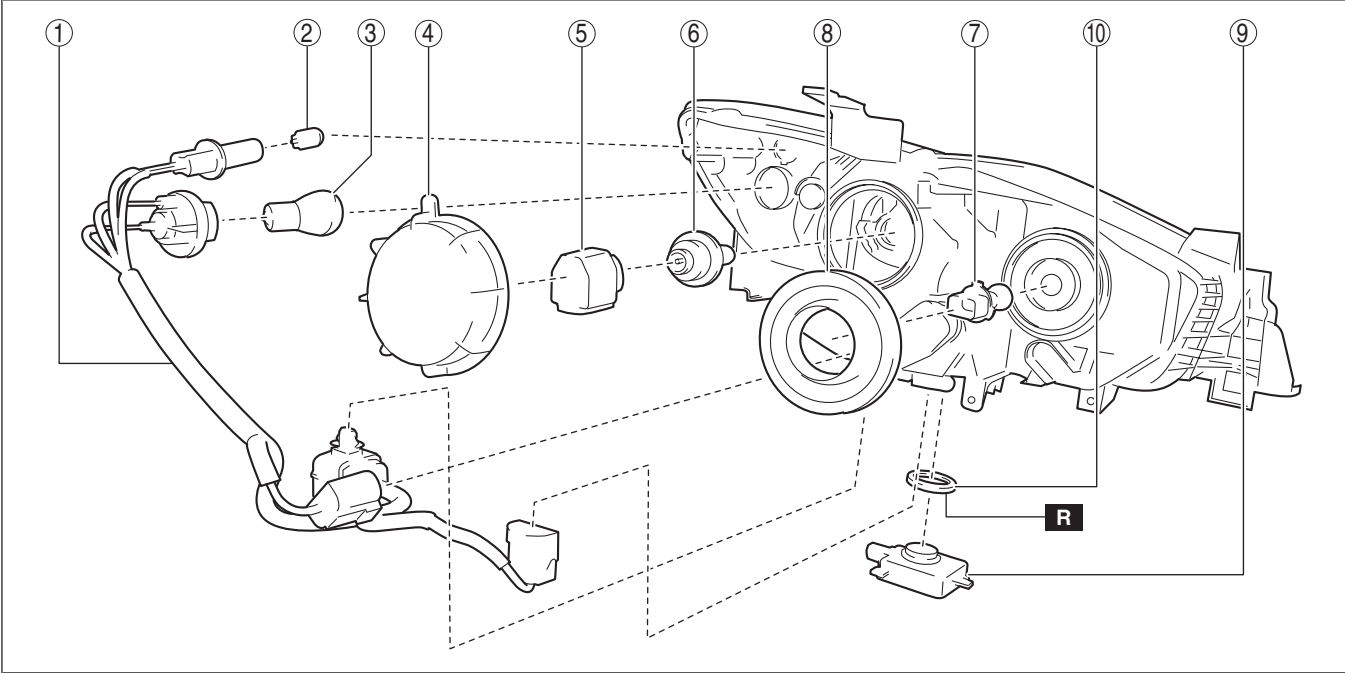


ac5wzw00005597

1	Short cord (See Short Cord Removal Note.)
2	Parking light bulb (See PARKING LIGHT BULB REMOVAL/ INSTALLATION.)
3	Front turn light bulb (See FRONT TURN LIGHT BULB REMOVAL/ INSTALLATION.)
4	Cover No.1 (See Cover Installation Note.)
5	Igniter (See IGNITER REMOVAL/INSTALLATION.)
6	Headlight HI/LO bulb (See HEADLIGHT BULB REMOVAL/ INSTALLATION.)
7	Running light bulb (See RUNNING LIGHT BULB REMOVAL/ INSTALLATION.)
8	Cover No.2 (See Cover Installation Note.)
9	Discharge headlight control module (See DISCHARGE HEADLIGHT CONTROL MODULE REMOVAL/INSTALLATION.)
10	Seal

2. Assemble in the reverse order of disassembly.

### Short Cord Removal Note

1. While pressing the clip tab in the direction of the arrows (1) shown in the figure, press the clip in the direction of the arrow (2) shown in the figure to detach the clip tab and front combination light.
2. Remove the short cord.

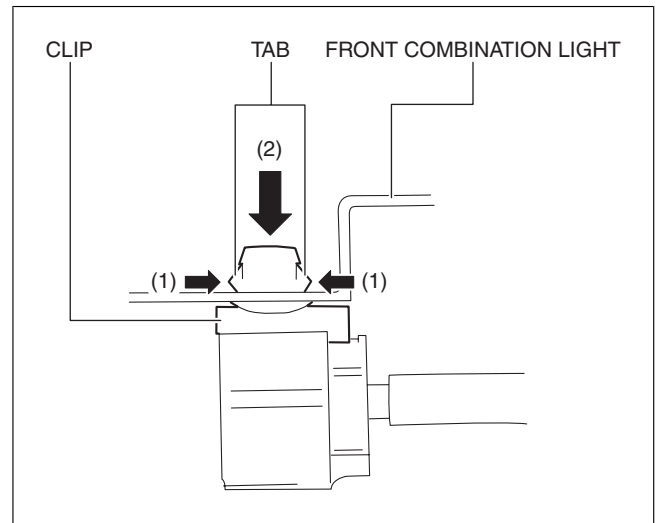


ac5wzw00000833

### Cover Installation Note

1. Install the cover to the housing so that there is no clearance between the housing and the cover.

#### Caution

- If there is a gap between the housing and the cover, water may penetrate from the gap causing a malfunction in the front combination light. Verify that there is no gap between the cover and the housing.

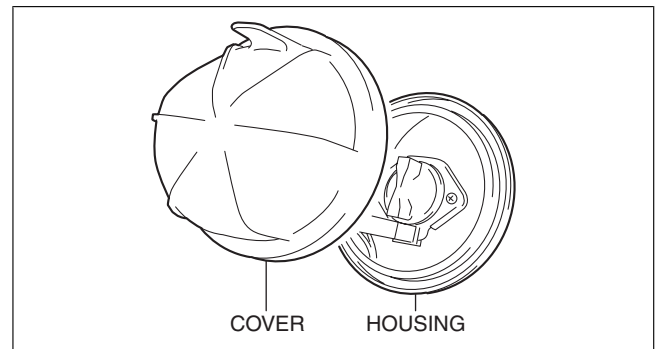

ac5wzw00000512