


## ROCKER ARM INSPECTION

id011000904800

### Rocker Arm (No.1)


1. Rotate the roller of the rocker arm (No.1) by hand and verify that rotates smoothly.
  - If it does not rotate smoothly, replace the rocker arm (No.1).
2. Visually inspect the rocker arm (No.1) surface where it contacts the HLA and valve stem for wear or damage.
  - If there is any malfunction, replace the rocker arm (No.1).

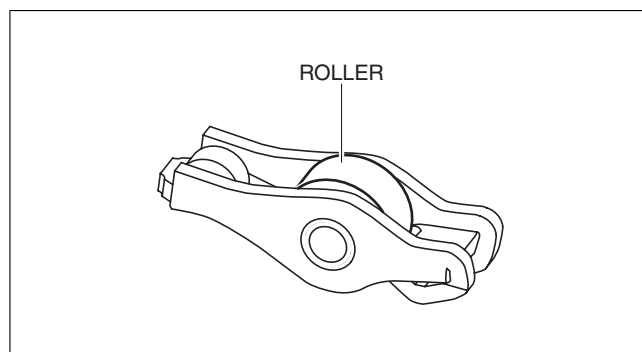

bpe2ue00000096


### Rocker Arm (No.2)

1. Rotate the roller of the rocker arm (No.2) by hand and verify that rotates smoothly.
  - If it does not rotate smoothly, replace the rocker arm (No.2).
2. Visually inspect the rocker arm (No.2) surface where it contacts the HLA and valve stem for wear or damage.
  - If there is any malfunction, replace the rocker arm (No.2).

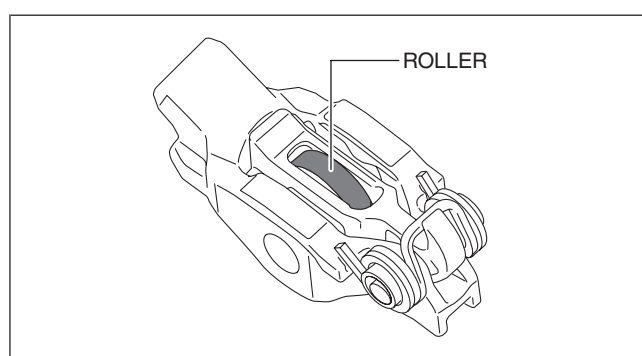


bes2ze00000125

3. Visually inspect the slipper area of the rocker arm (No.2) for wear or damage.
  - If there is any malfunction, replace the rocker arm (No.2).

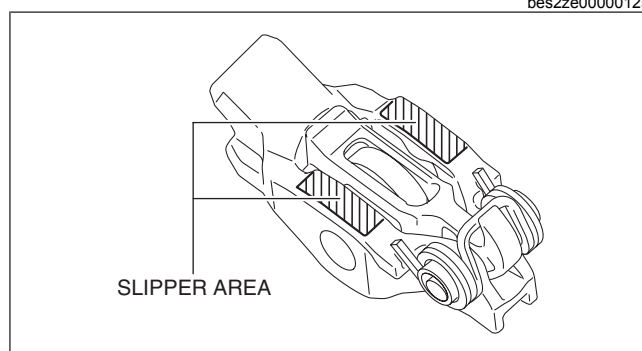

bes2ze00000126

4. Press the inner lever of the rocker arm (No.2) with a finger to verify that it moves.
  - If there is any malfunction, replace the rocker arm (No.2).

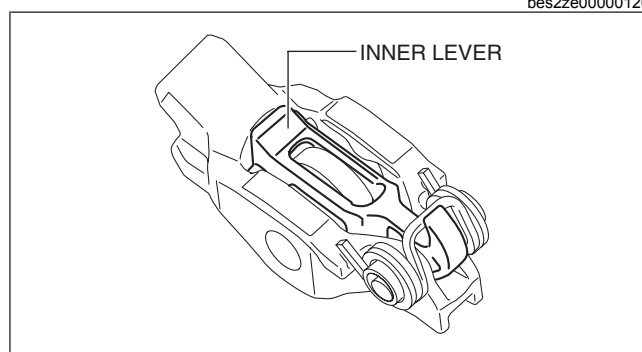

bes2ze00000127