


LIFTGATE OPENER SWITCH REMOVAL/INSTALLATION

id091400516100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
 - (2) Liftgate side trim (See LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Liftgate lower trim (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
 - (4) Liftgate garnish (See LIFTGATE GARNISH REMOVAL/INSTALLATION.)
3. Remove the liftgate opener switch from the liftgate garnish.
4. Install in the reverse order of removal.

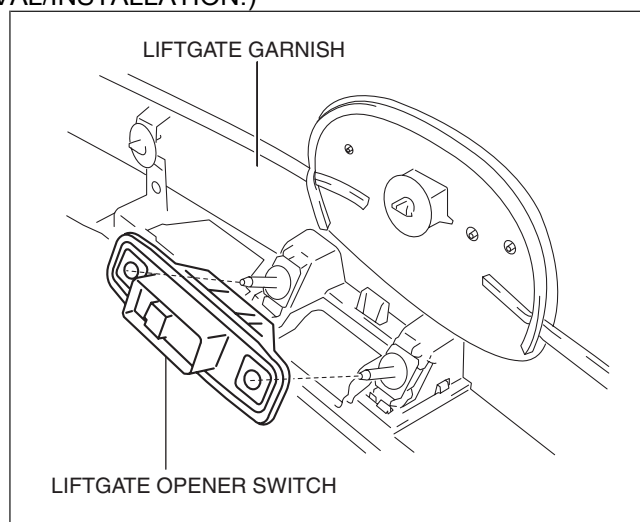

ac5jjw00000228