


SEAT WARMER CONTROL UNIT REMOVAL/INSTALLATION

id091300977500

Warning

- Handling a side air bag improperly can accidentally operate (deploy) the air bag, which may seriously injure you. Read the service warnings/cautions in the Workshop Manual before handling the front seat (side air bag integrated). (See AIR BAG SYSTEM SERVICE WARNINGS.) (See AIR BAG SYSTEM SERVICE CAUTIONS.)

1. Switch the ignition off (LOCK).
2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Disconnect the connector.

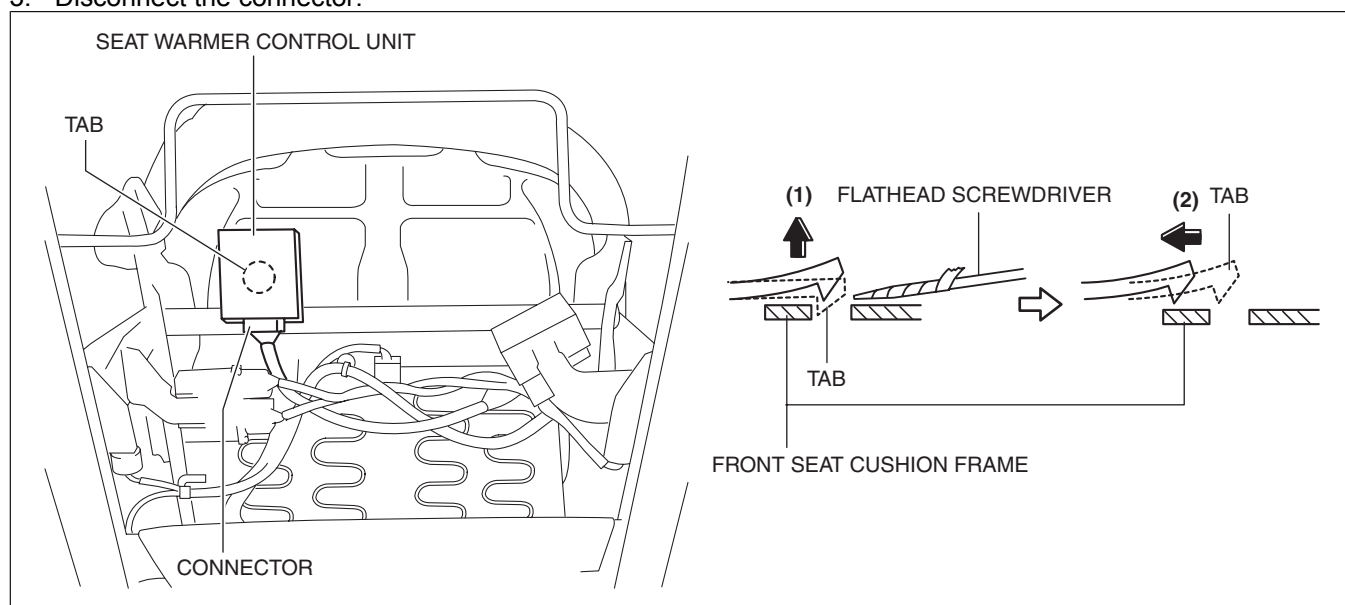

4. Using a flathead screwdriver, disconnect the seat warmer control unit in the direction of the arrow (2) while releasing tab in the direction of the arrow (1) shown in the figure.
5. Install in the reverse order of removal.

ac5uuw00002086