

## CYLINDER HEAD GASKET [SKYACTIV-G 2.0, SKYACTIV-G 2.5]


id0110h3000300

### Purpose, Function

- The cylinder head gasket is installed between the cylinder head and cylinder block to prevent leakage of air-fuel mixture, combustion gas, engine oil, and engine coolant.

### Construction

- A four-layer type metal gasket has been adopted for the cylinder head gasket.

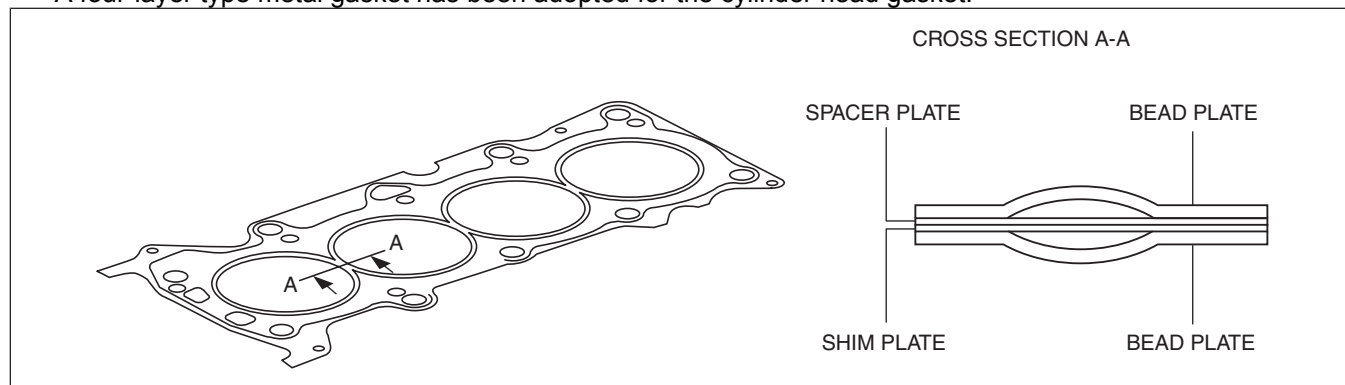

am3uun00002188