


MAIN FUSE REMOVAL/INSTALLATION

id092100801500


SKYACTIV-G 2.0, SKYACTIV-G 2.5

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)
2. Insert a tape-wrapped flathead screwdriver into the service hole in the position shown in the figure.

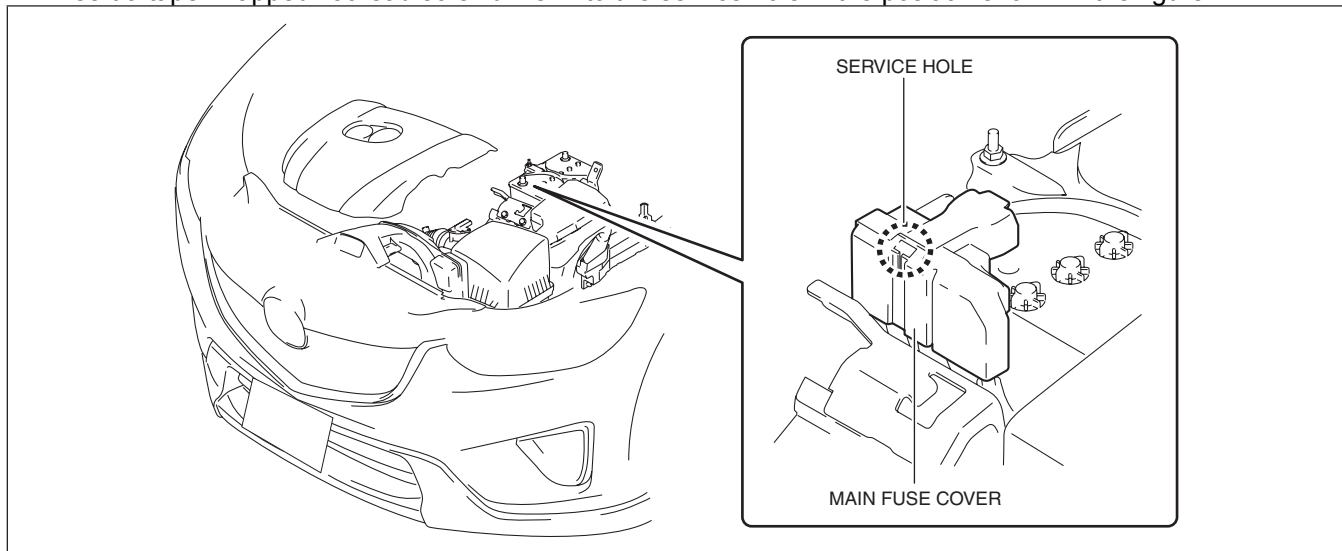


ac5wzw00003799

3. Move the flathead screwdriver in the direction of the arrow (1) shown in the figure, pull up the main fuse cover in the direction of the arrow (2) shown in the figure, and detach the main fuse cover tab from the main fuse.

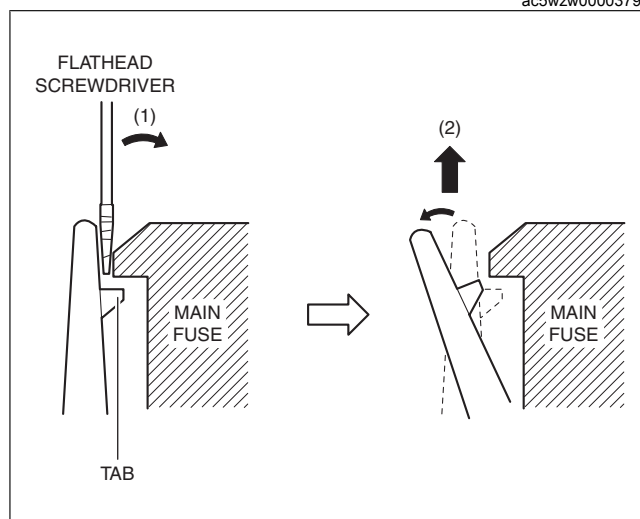


ac5wzw00003765

4. Remove the main fuse cover.

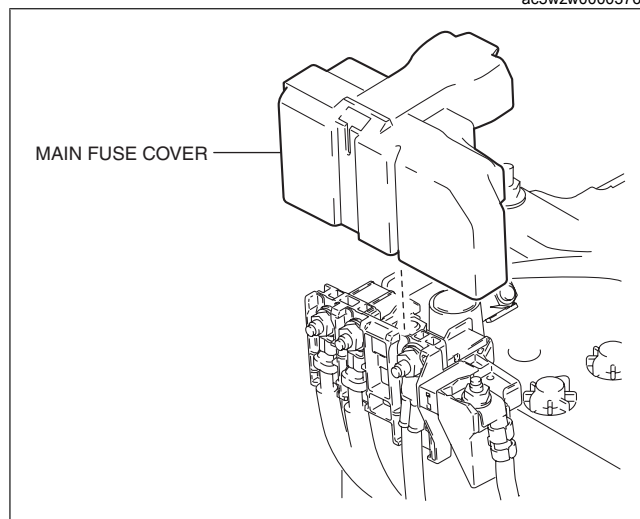

ac5wzw00000527

5. Remove the nuts.

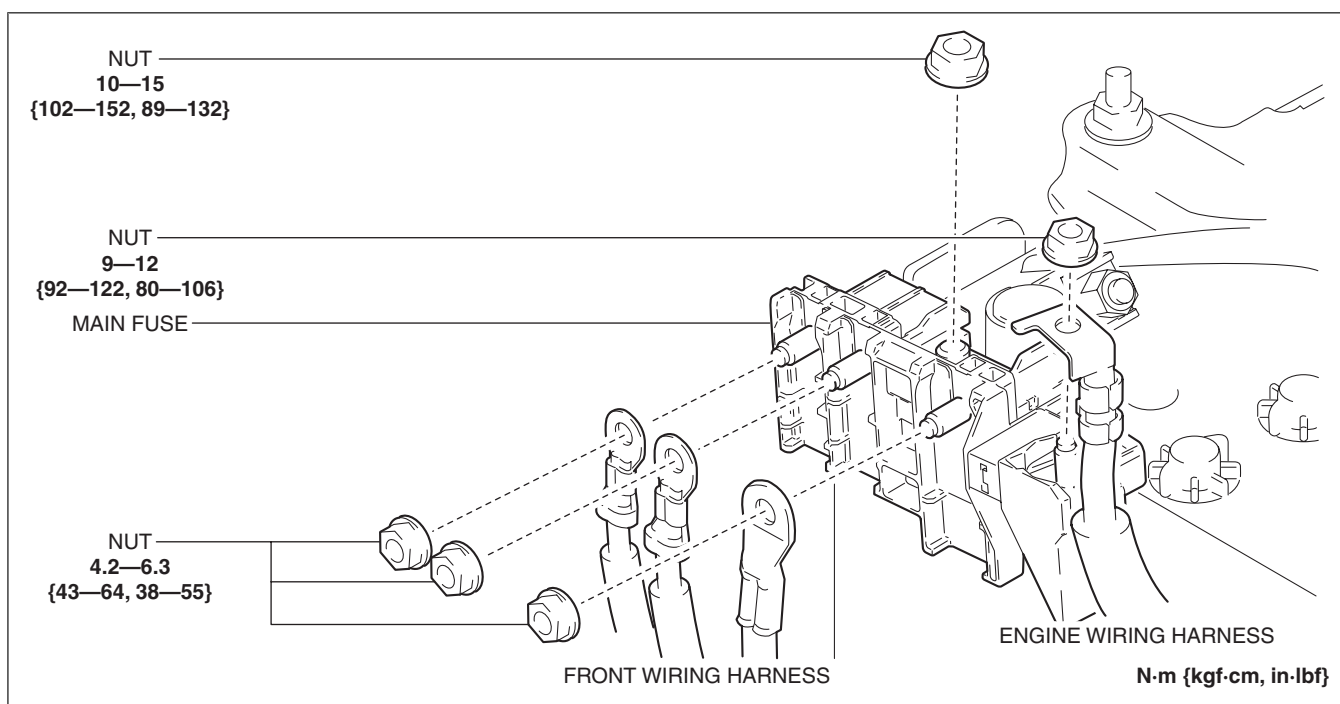


ac5wzw00000152

6. Remove the main fuse.
7. Install in the reverse order of removal.


SKYACTIV-D 2.2

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Insert a tape-wrapped flathead screwdriver into the service hole in the position shown in the figure.

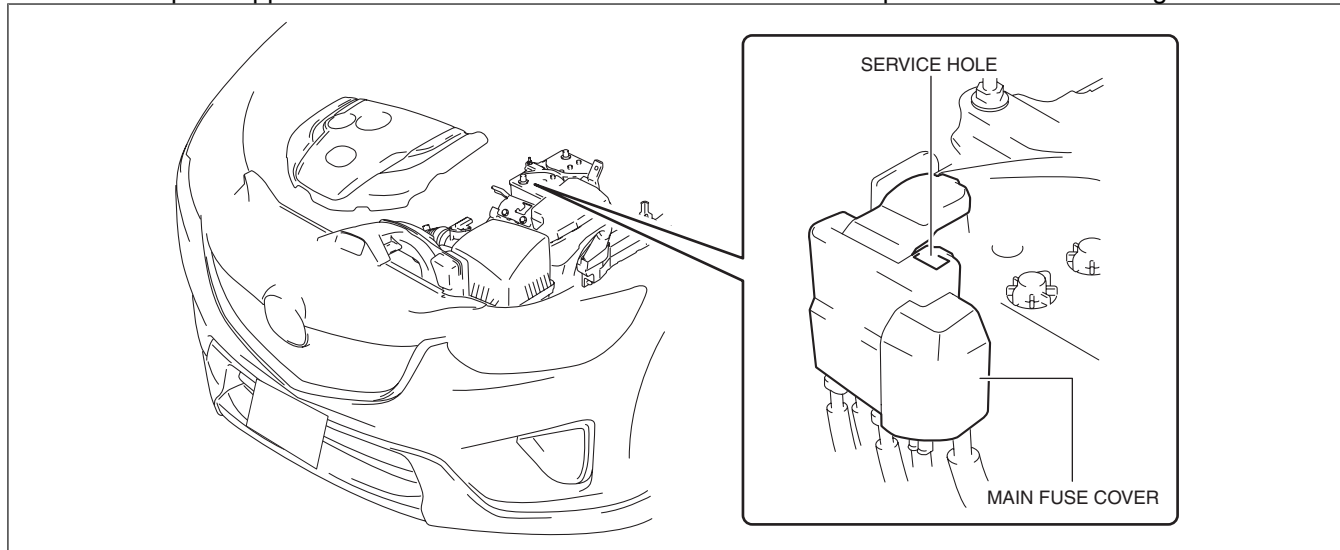


ac5wzw00002872

3. Move the flathead screwdriver in the direction of the arrow (1) shown in the figure, pull up the main fuse cover in the direction of the arrow (2) shown in the figure, and detach the main fuse cover tab from the main fuse.

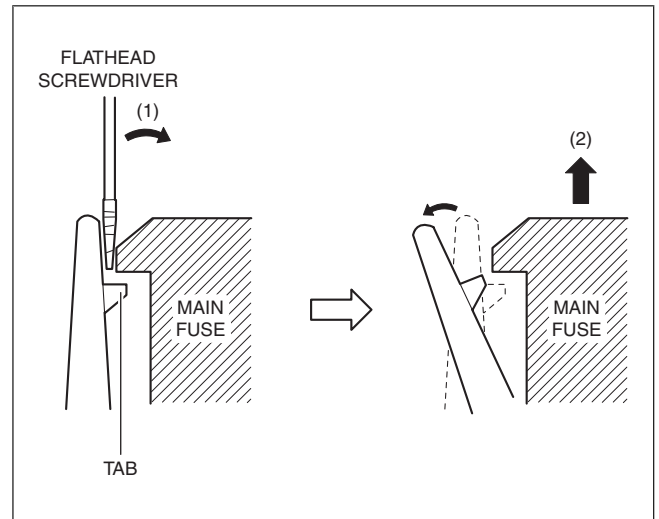


ac5wzw00002873

4. Remove the main fuse cover.

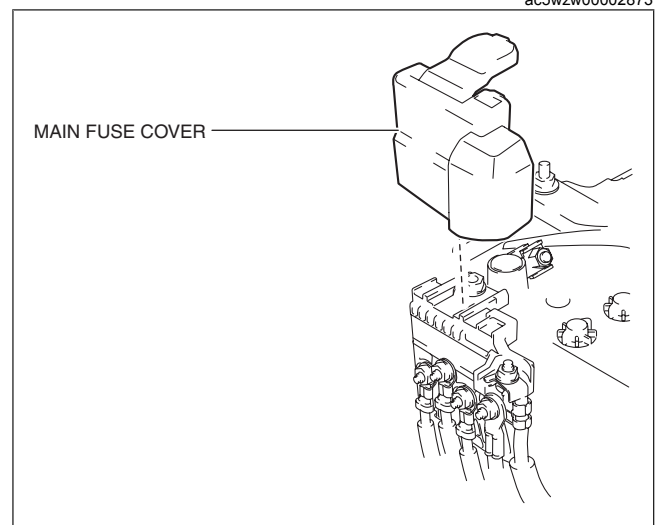

ac5wzw00002874

5. Remove the nuts.

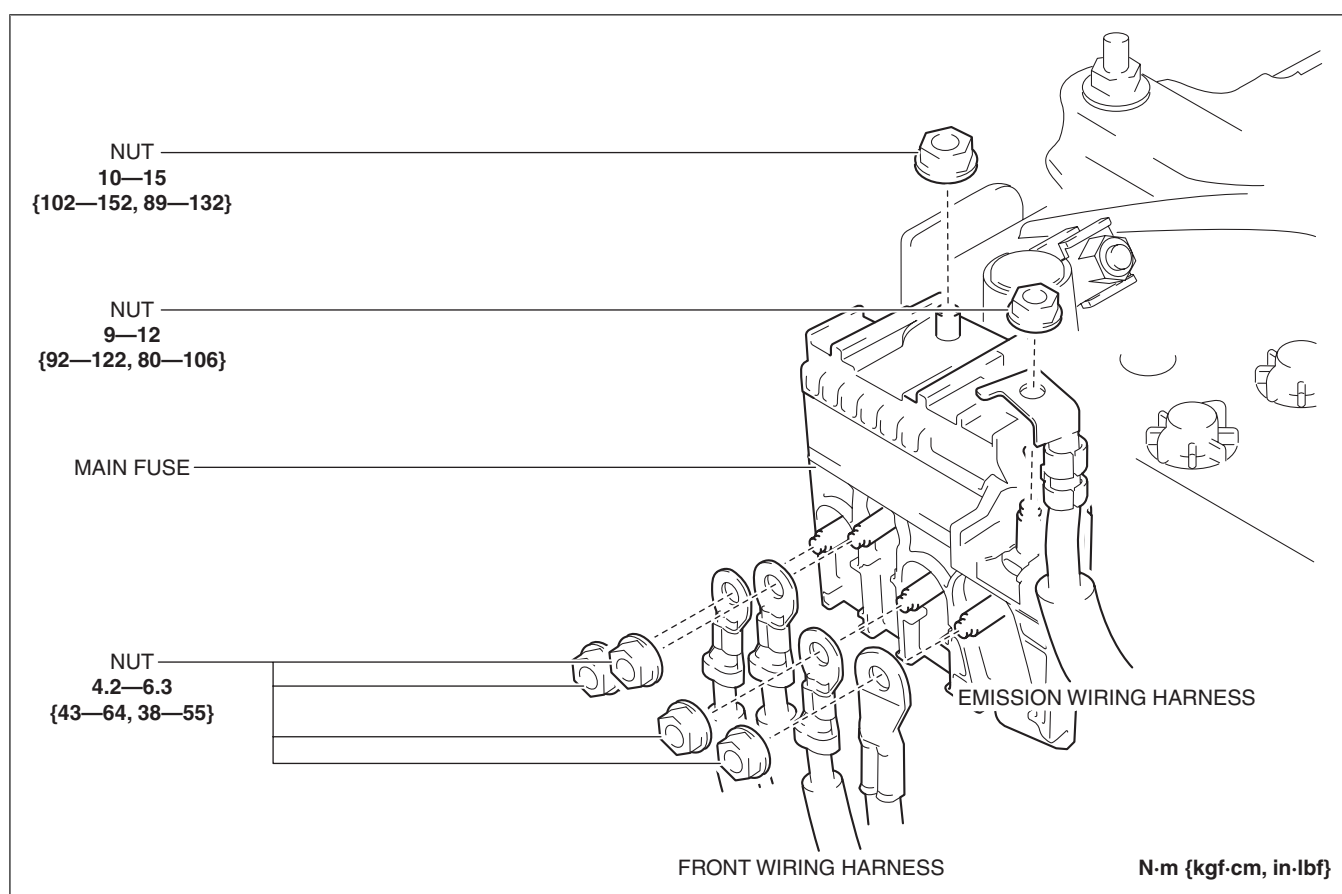

ac5wzw00002875

6. Remove the main fuse.
7. Install in the reverse order of removal.