


## HYDRAULIC VARIABLE VALVE TIMING ACTUATOR INSPECTION

id011000126800

### Caution

- **Do not disassemble the hydraulic variable valve timing actuator because it is a precision unit.**

1. Verify that the notch of the rotor and projection of the cover on the hydraulic variable valve timing actuator are aligned and fitted.
  - If the projection and notch are not aligned, rotate the rotor (camshaft installation) until a click is heard and verify that they are aligned and fixed in place.
  - If the projection and notch are not aligned or the rotor and cover are not secured even if their projection and notch are aligned, replace the hydraulic variable valve timing actuator.

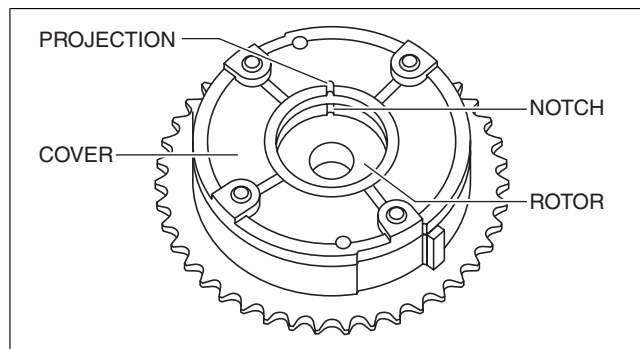

bpe2ue00000012