


WINDSHIELD WASHER NOZZLE REMOVAL/INSTALLATION

id091900802000

1. Remove the following parts:
 - (1) Windshield wiper arm and blade (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
 - (2) Cowl grille (See COWL GRILLE REMOVAL/INSTALLATION.)
2. Disconnect the windshield washer hose from the windshield washer nozzle. (See WINDSHIELD WASHER HOSE REMOVAL/INSTALLATION.)
3. While pressing windshield washer nozzle tabs in the direction of the arrow (1) shown in the figure, pull the windshield washer nozzle in the direction of the arrow (2) to remove it from the cowl grille.

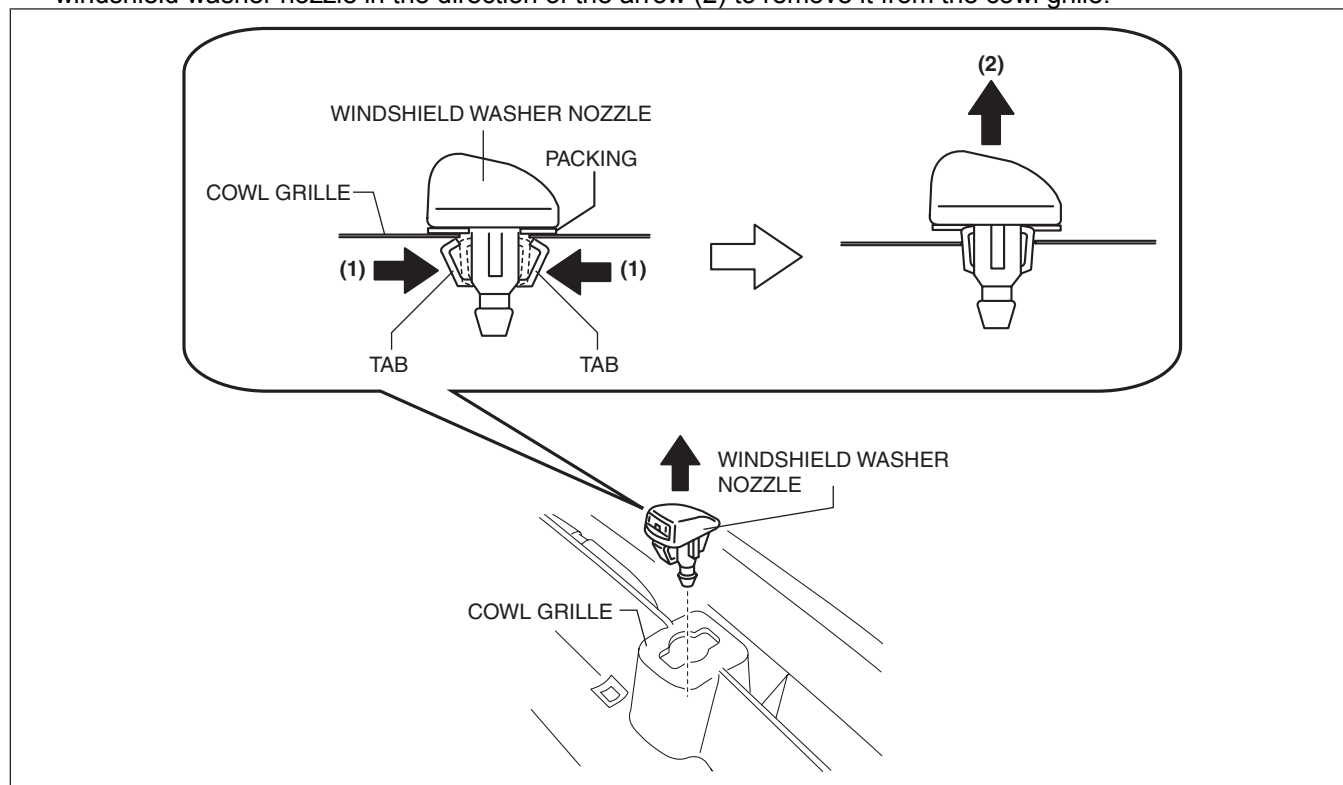

ac5wzw00002488

4. Install in the reverse order of removal.
5. Adjust the windshield washer nozzle. (See WINDSHIELD WASHER NOZZLE ADJUSTMENT.)