

OIL PAN [SKYACTIV-D 2.2]


id0111s6002300

Purpose, Function

- The engine oil required for lubrication in the engine accumulates in the oil pan.

Construction

- The oil pan is installed on the lower part of the cylinder block.
- Silicone sealant with excellent sealing has been adopted for the oil pan gasket.

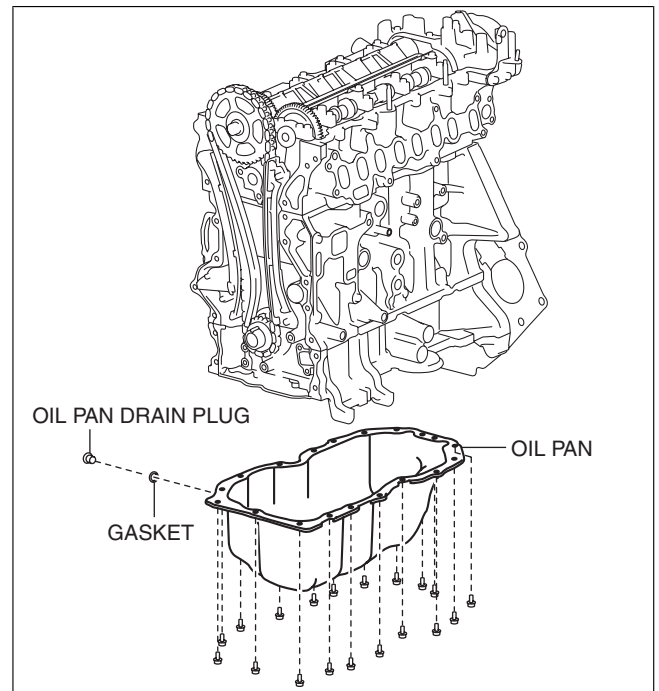

ac5wzn00001812