


FRONT SIDE TRIM REMOVAL/INSTALLATION

id091700802400

1. Remove the front scuff plate. (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
2. Partially peel back the seaming welt.
3. Remove the cap nut.

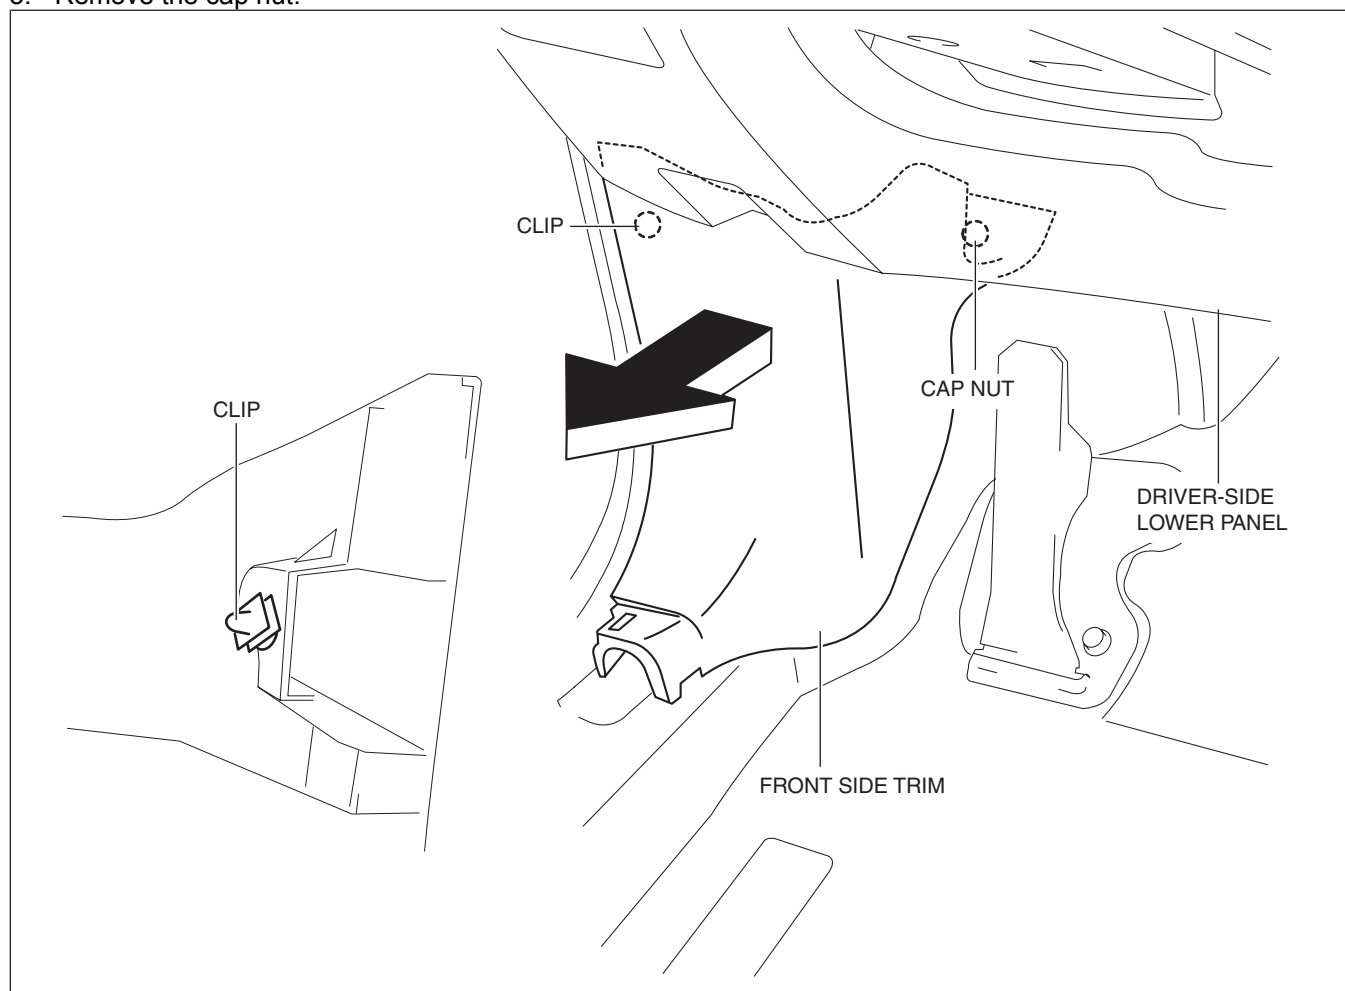

4. Pull the front side trim in the direction of the arrow shown in the figure and remove it while detaching the clip.
5. Install in the reverse order of removal.

ac5wzw00003001