

ACCELERATOR PEDAL, KICKDOWN SWITCH [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0113z9189000

Purpose, Function

- The driver's intentions are transmitted to the PCM via the accelerator pedal.

Kickdown switch (ATX)*


- If the accelerator pedal is depressed carelessly, kickdown control will be implemented based on the accelerator pedal being determined as fully open, and vehicle shock will occur. A kickdown switch has been adopted so that it can be determined that the accelerator pedal is fully open based on the driver's intention of depressing the accelerator pedal for kickdown.

* : Vehicle identification number (VIN): JM0 KE***** 200001-, JM6 KE***** 200001-, JM8 KE***** 200001-, JMZ KE***** 200001-, KE10** 200001-

Construction

- The accelerator pedal has a built-in APP sensor and kickdown switch (ATX)*.
- For the APP sensor, refer to CONTROL SYSTEM. (See ACCELERATOR PEDAL POSITION (APP) SENSOR [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)


* : Vehicle identification number (VIN): JM0 KE***** 200001-, JM6 KE***** 200001-, JM8 KE***** 200001-, JMZ KE***** 200001-, KE10** 200001-

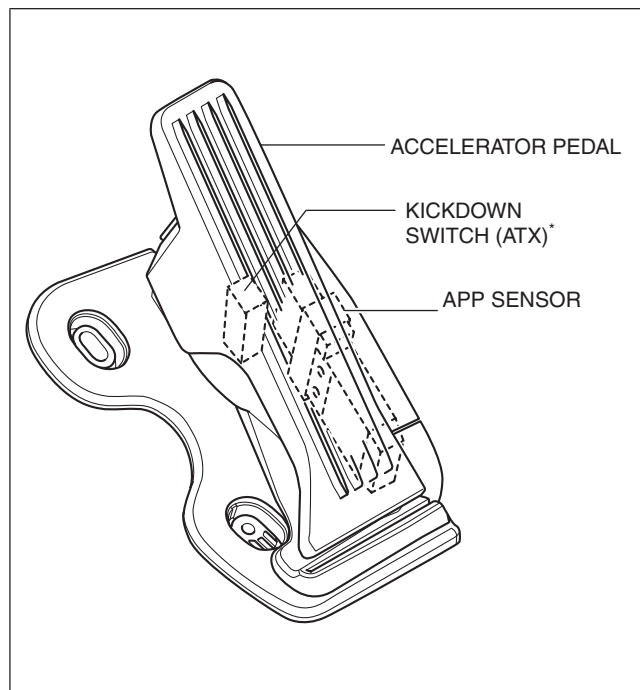

ac5wzn00002616

Kickdown Switch (ATX)*

- A load can be felt while the accelerator pedal is being depressed and when it is further depressed the kickdown switch turns on.

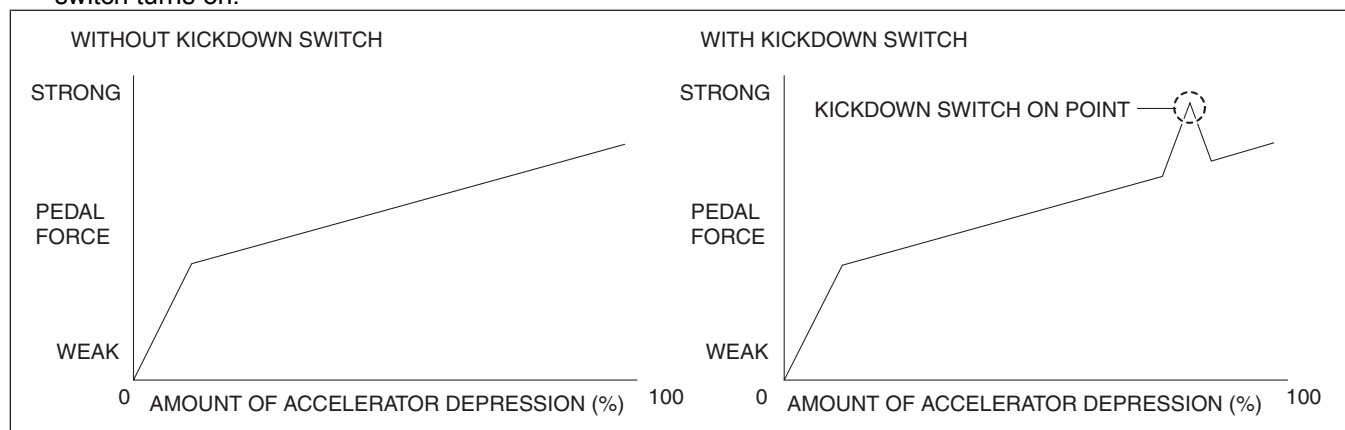

am6zzn00002507

- The driver can control the kickdown by knowing the amount of accelerator depression.
- The kickdown switch is only a measure of the kickdown. An electrical signal is not transmitted by the kickdown switch turning on/off, and vehicle control is not affected.

* : Vehicle identification number (VIN): JM0 KE***** 200001-, JM6 KE***** 200001-, JM8 KE***** 200001-, JMZ KE***** 200001-, KE10** 200001-