


## POWER OUTER MIRROR REMOVAL/INSTALLATION


id091200002400

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the inner garnish. (See INNER GARNISH REMOVAL/INSTALLATION.)
3. Remove the front door trim. (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
4. Insert a tape-wrapped flathead screwdriver into the service hole and remove hooks A in the direction of arrow (1).

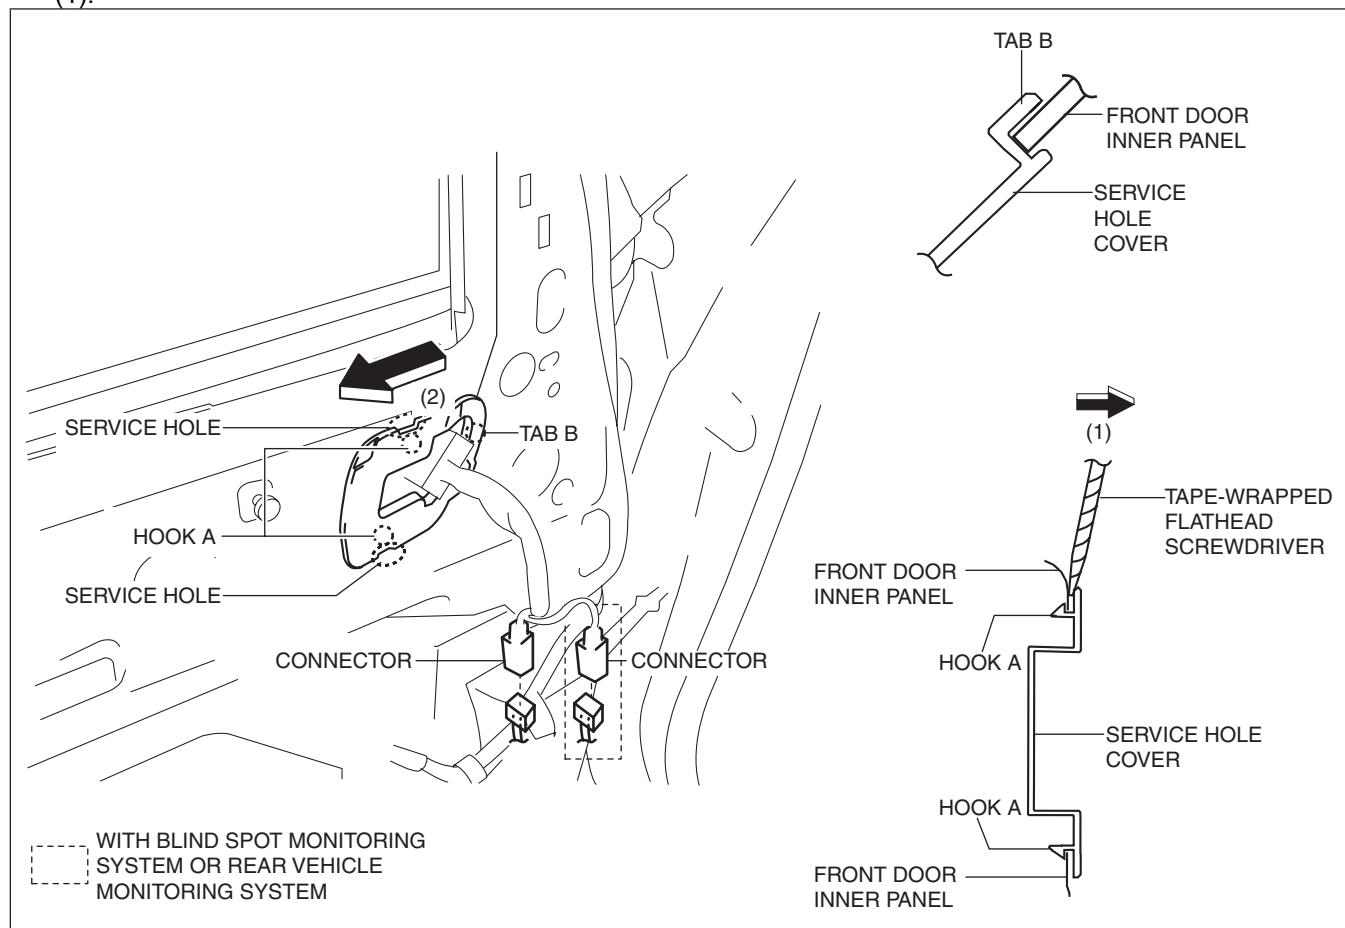

5. Slide the service hole cover in the direction of the arrow (2) shown in the figure and remove tabs B.
6. Disconnect the connector.
7. Remove nuts C.

ac5wzw00002545

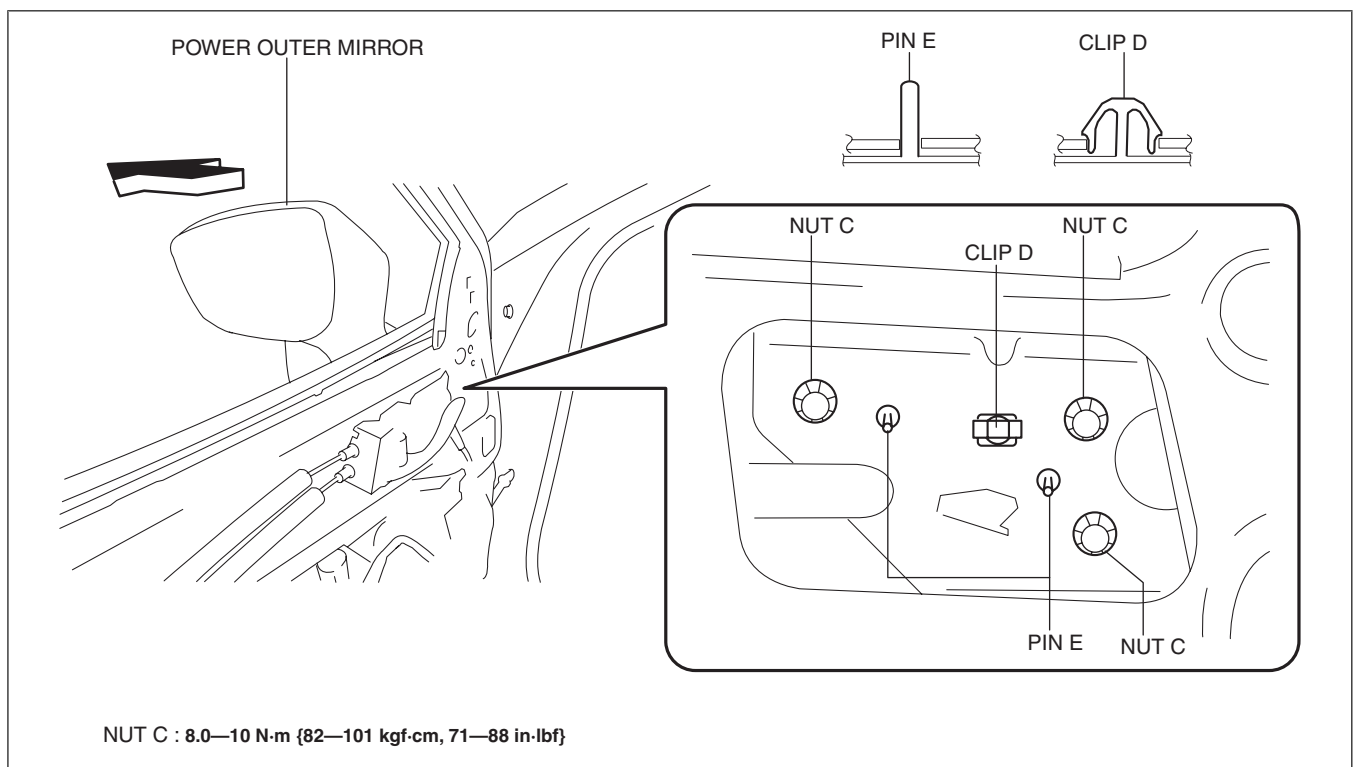

8. Pull the power outer mirror in the direction of the arrow while remove clips D, pin E.

**Caution**

- If the clip D of the power outer mirror is detached, the power outer mirror may fall off and be damaged. When detaching clip D of the power outer mirror, hold the power outer mirror by hand during the servicing.

9. Install in the reverse order of removal.