


FRONT SCUFF PLATE REMOVAL/INSTALLATION

id091700801400

1. Take the shaded area shown in the figure, detach tab A while pulling the front scuff plate in the direction of the arrow (1) shown in the figure, then detach the hook B, clip C, and pin D while pulling in the direction of the arrow (2).
2. Take the shaded area shown in the figure, detach tab E while pulling the front scuff plate in the direction of the arrow (3) shown in the figure, then detach the hook F, clip G and pin H while pulling in the direction of the arrow (4).

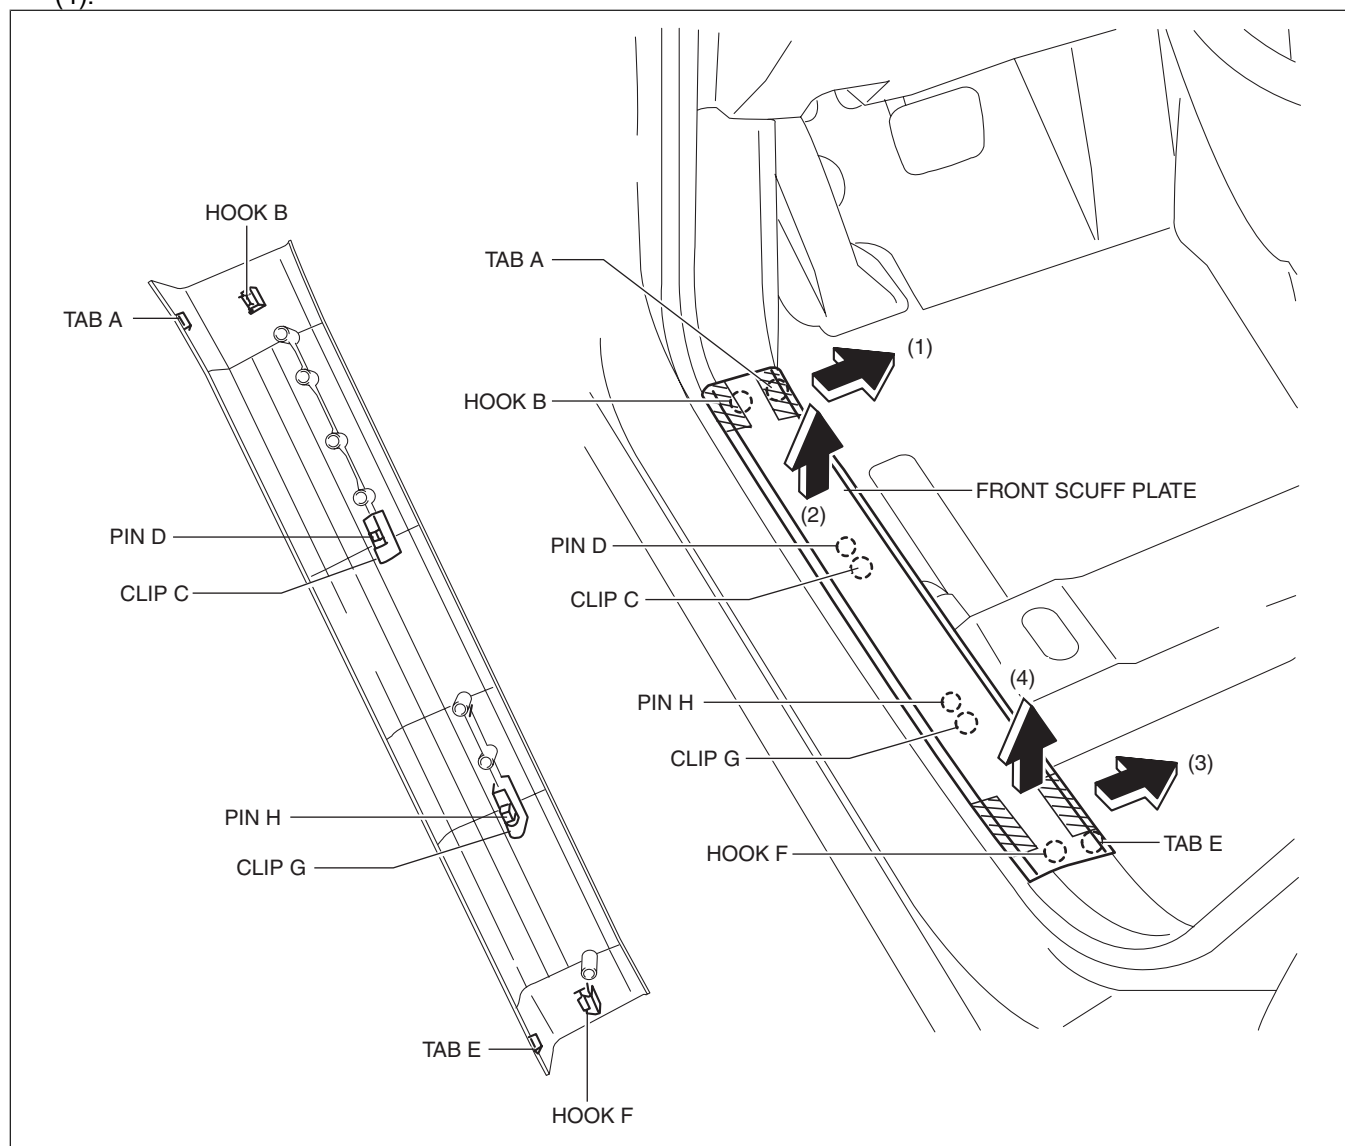

3. Install in the reverse order of removal.

ac5uuw00001760