


## HEATER CORE TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER]

id0740a1808100

### Note


- The heater core temperature sensor is installed to the A/C unit by engaging the tab.

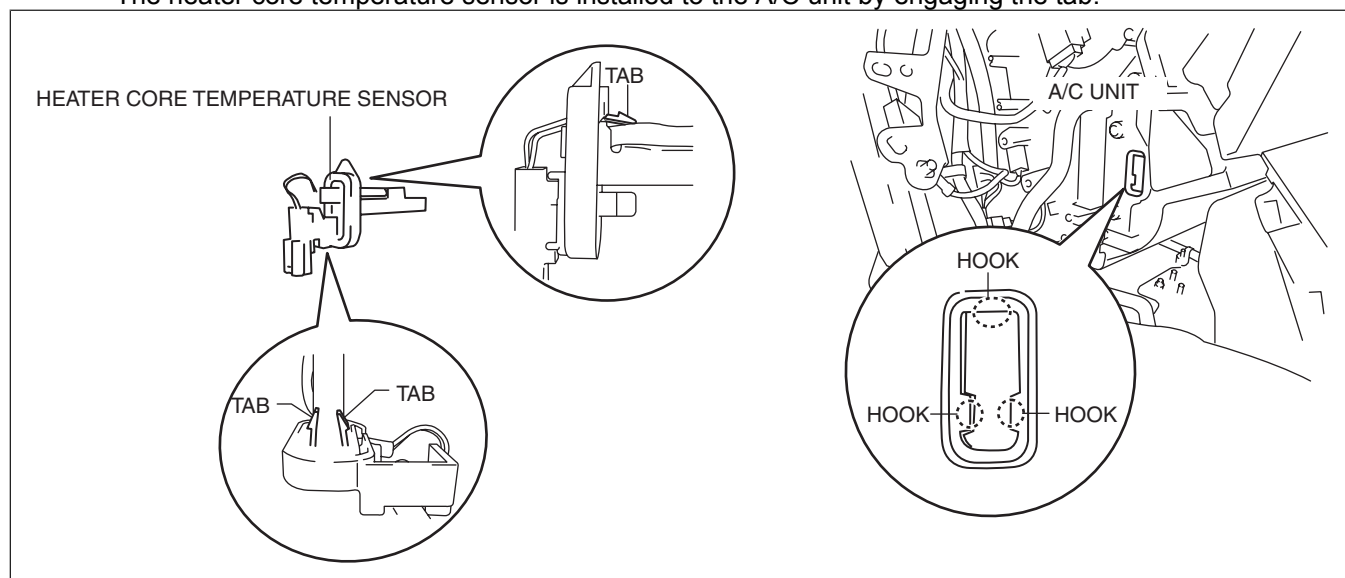

ac5wzw00001884

### L.H.D.

- Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
- Remove the following parts:
  - (1) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
  - (2) Front heat duct (driver-side) (See FRONT HEAT DUCT REMOVAL/INSTALLATION.)
- Disconnect the connector.
- Remove the heater core temperature sensor.
- Install in the reverse order of the removal.

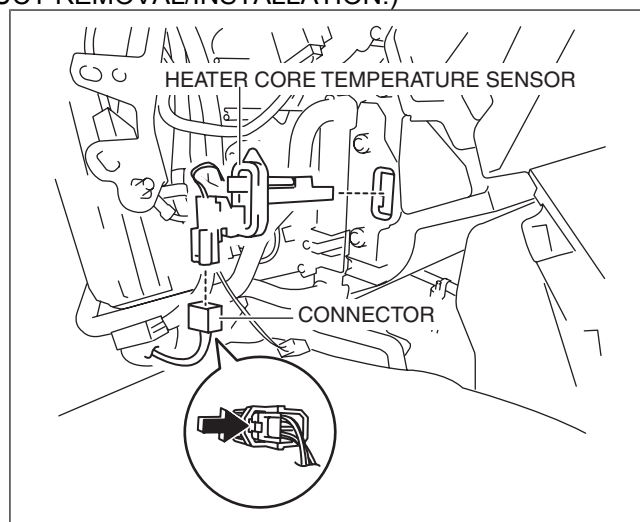


ac5wzw00001885

### R.H.D.

- Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
- Remove the following parts:
  - (1) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
  - (2) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
  - (3) Front heat duct (passenger-side) (See FRONT HEAT DUCT REMOVAL/INSTALLATION.)

3. Disconnect the connector.
4. Remove the heater core temperature sensor.
5. Install in the reverse order of the removal.

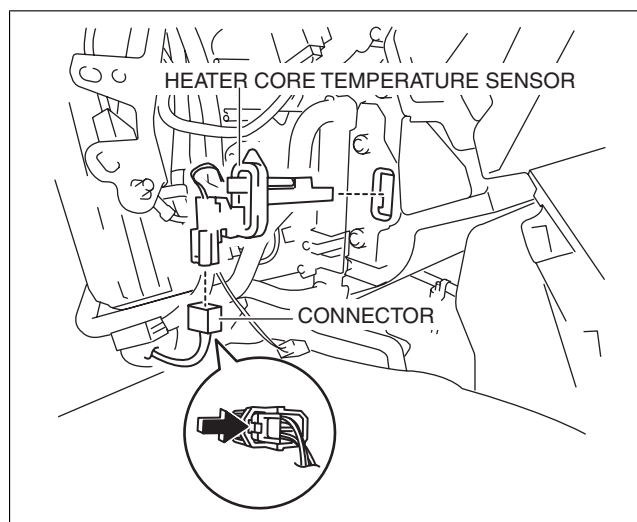

ac5wzw00001885