

## LIFTGATE LATCH SWITCH INSPECTION


id091400512200

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
  - (2) Liftgate side trim (See LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.)
  - (3) Liftgate lower trim (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
  - (4) Liftgate latch and lock actuator (See LIFTGATE LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)
3. Verify that the continuity is as indicated in the table.

○—○: CONTINUITY

LIFTGATE LATCH SWITCH	TERMINAL	
	A	C
LATCH (LIFTGATE CLOSE)		
UNLATCH (LIFTGATE OPEN)	○—○	○—○

ac5jjw00000225

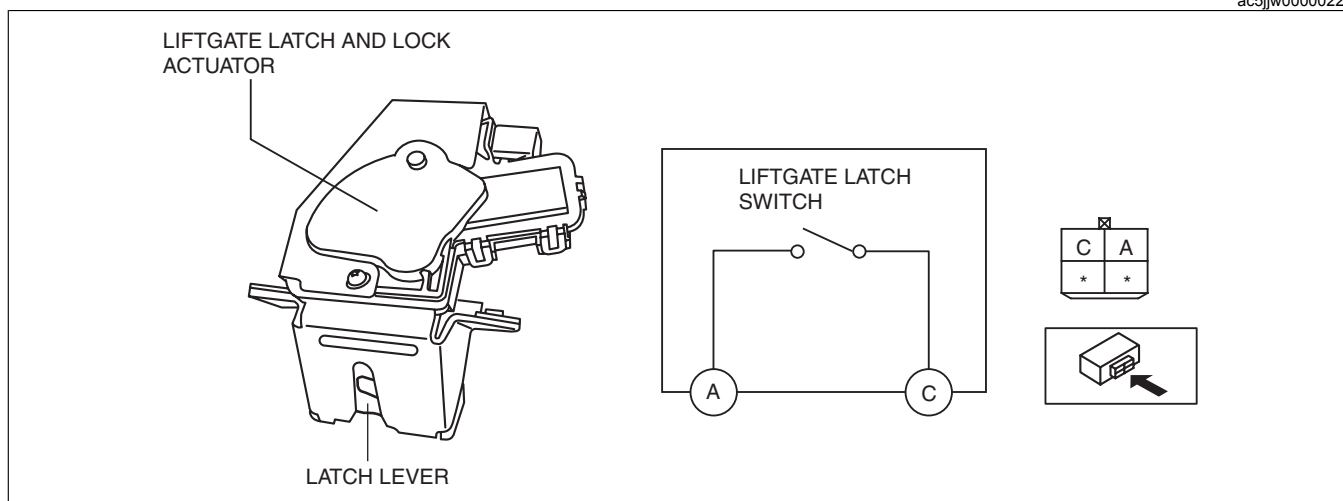


ac5jjw00000226

- If not as indicated in the table, replace the liftgate latch and lock actuator.

### Note

- When inspecting the latch condition of the liftgate latch switch, press in the latch lever using a flathead screwdriver and set it to the latched position.

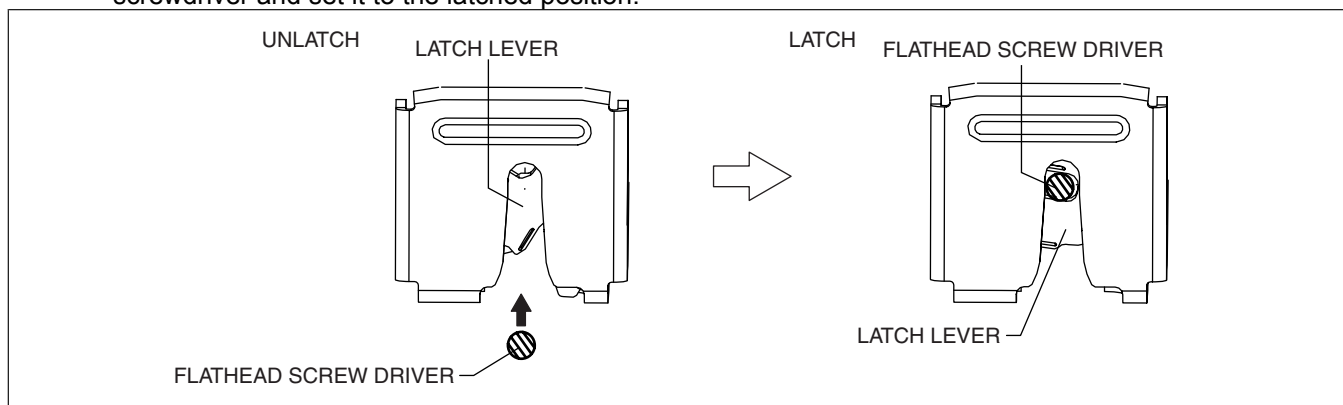

ac5jjw00000227