


THRUST NEEDLE BEARING INSPECTION

id051700661900


1. Point the flat surface of the thrust needle bearing downward and place it on the surface plate.

A : Surface plate

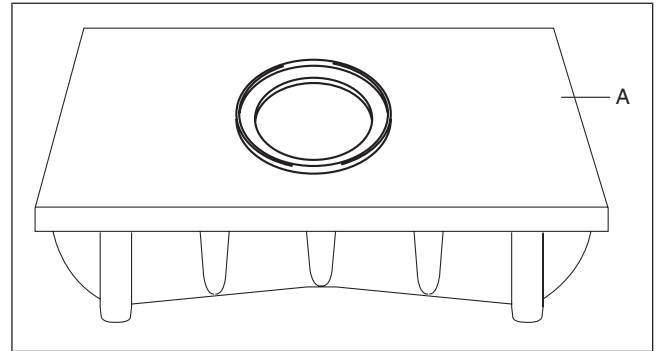

azzjw00001073

2. With a load applied by hand to the thrust needle bearing, rotate the thrust needle bearing and verify that there is no malfunction (rotation sticking).
 - If there is a malfunction, replace the thrust needle bearing with a new one.

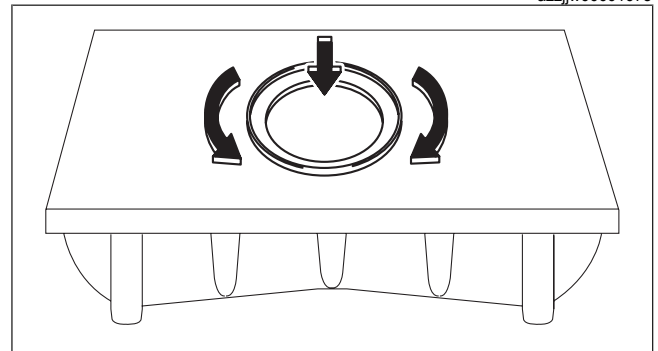

azzjw00001074