


OIL SEAL (COUPLING COMPONENT) REPLACEMENT

id031400802000

1. Drain the differential oil into a container.
2. Remove the coupling component. (See COUPLING COMPONENT REMOVAL/INSTALLATION.)
3. Remove the oil seal from the differential carrier using a screwdriver or similar tool.
4. Apply differential oil to the new oil seal lip.
5. Install the new oil seal to the differential carrier using the **SST**.
6. Install the coupling component. (See COUPLING COMPONENT REMOVAL/INSTALLATION.)
7. Add the specified differential oil from the filler plug. (See DIFFERENTIAL OIL REPLACEMENT.)

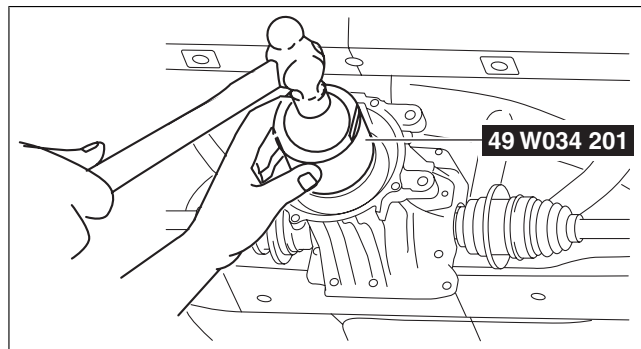

ac5uuw00000306