


FRONT BRAKE (DISC) REMOVAL/INSTALLATION

id041100800900

1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.
3. After installation, add brake fluid, bleed the air, and inspect for fluid leakage. (See BRAKE FLUID AIR BLEEDING.)
4. Depress the brake pedal a few times, rotate the wheel by hand, and verify that the brake does not drag.

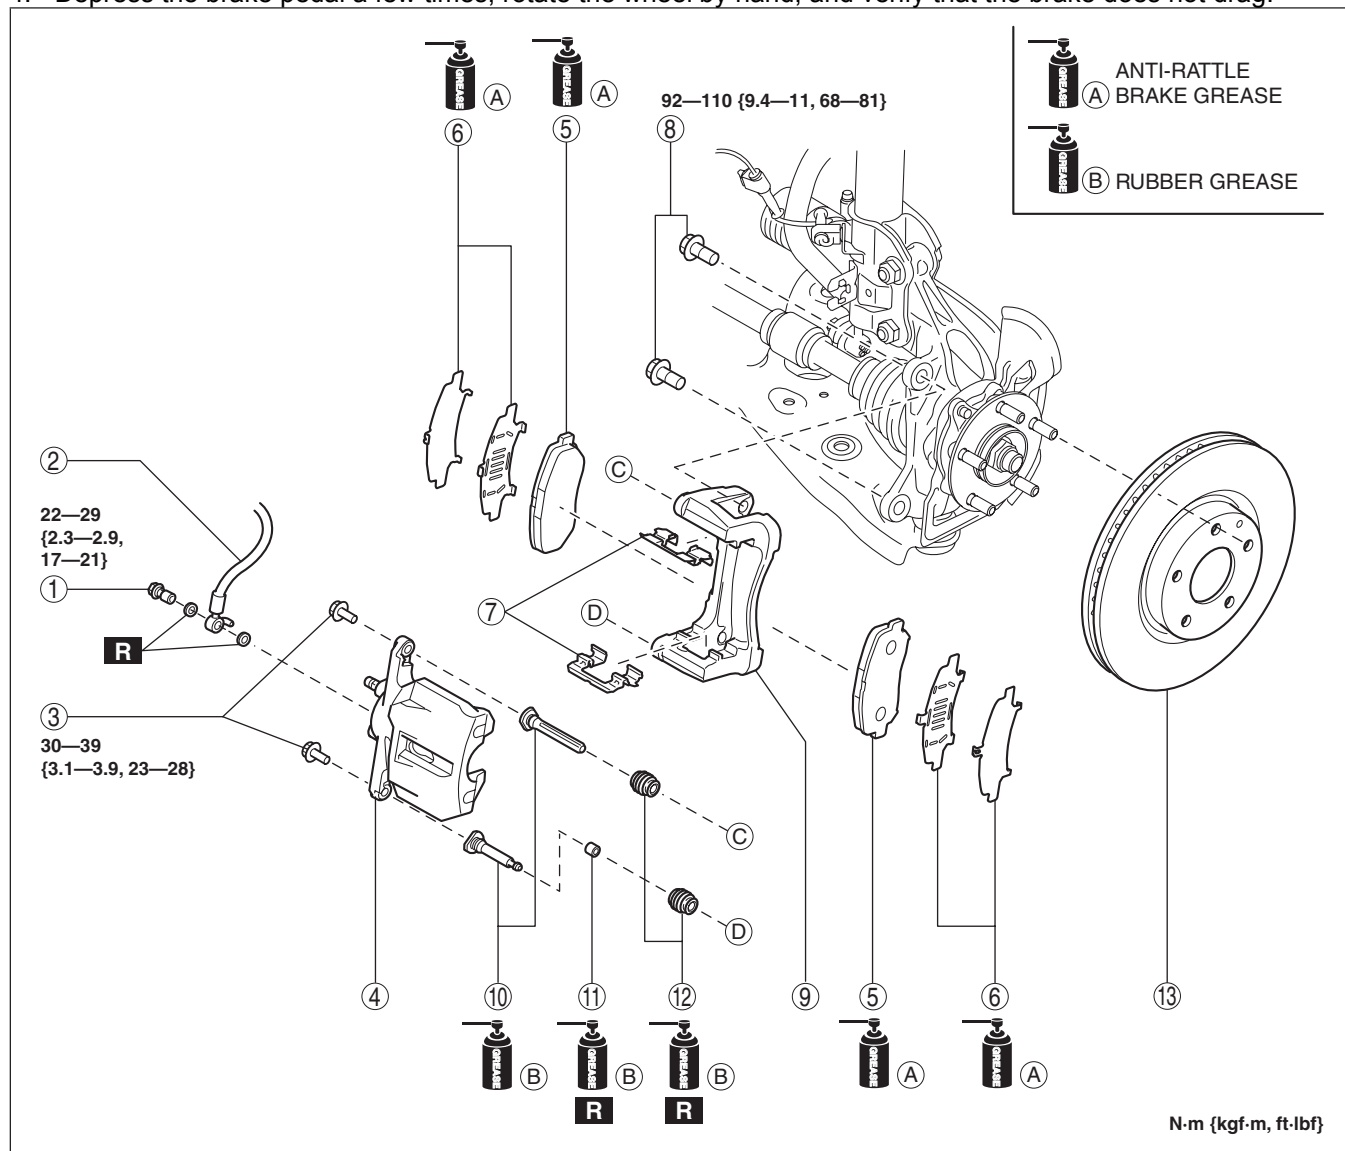

1	Bolt
2	Brake hose
3	Bolt
4	Caliper (See Disc Pad Installation Note.)
5	Disc pad (See Disc Pad Installation Note.)
6	Shim


7	Guide plate
8	Bolt
9	Mounting support
10	Slide pin
11	Bushing
12	Dust boot
13	Disc plate

Disc Pad Installation Note

1. Clean the exposed area of the piston.

ac5wzw00002524

-
2. Push the piston in using the commercially available disc brake expand tool.
 3. Install the disc pads to the mounting support.

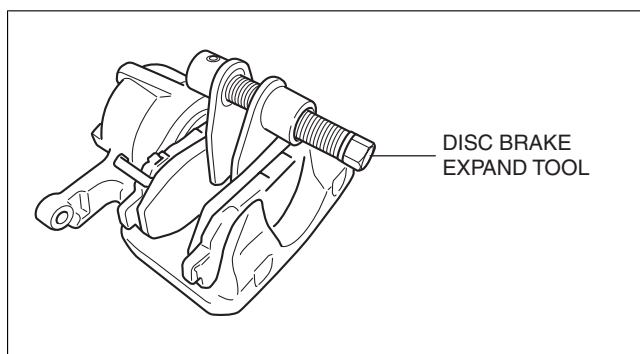

ac5wzw00002525