


SUNVISOR REMOVAL/INSTALLATION


id091700801700

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the screw A.
3. Rotate the sunvisor in the direction of the arrow.

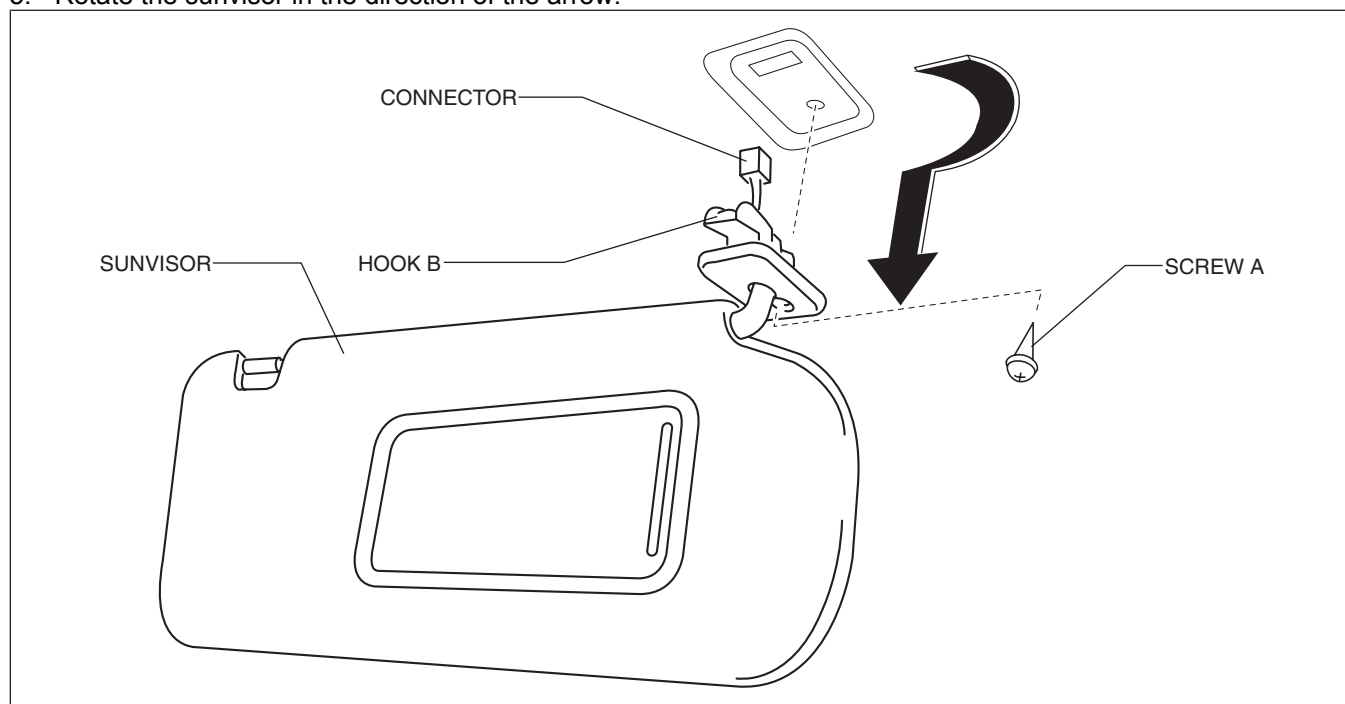

ac5wzw00001667

4. Unhook and remove the sunvisor.
5. Disconnect the vanity mirror illumination connector. (with vanity mirror illumination)
6. Press the center adaptor tabs as shown in the figure using two tape-wrapped flathead screwdrivers, and remove the center adaptor.

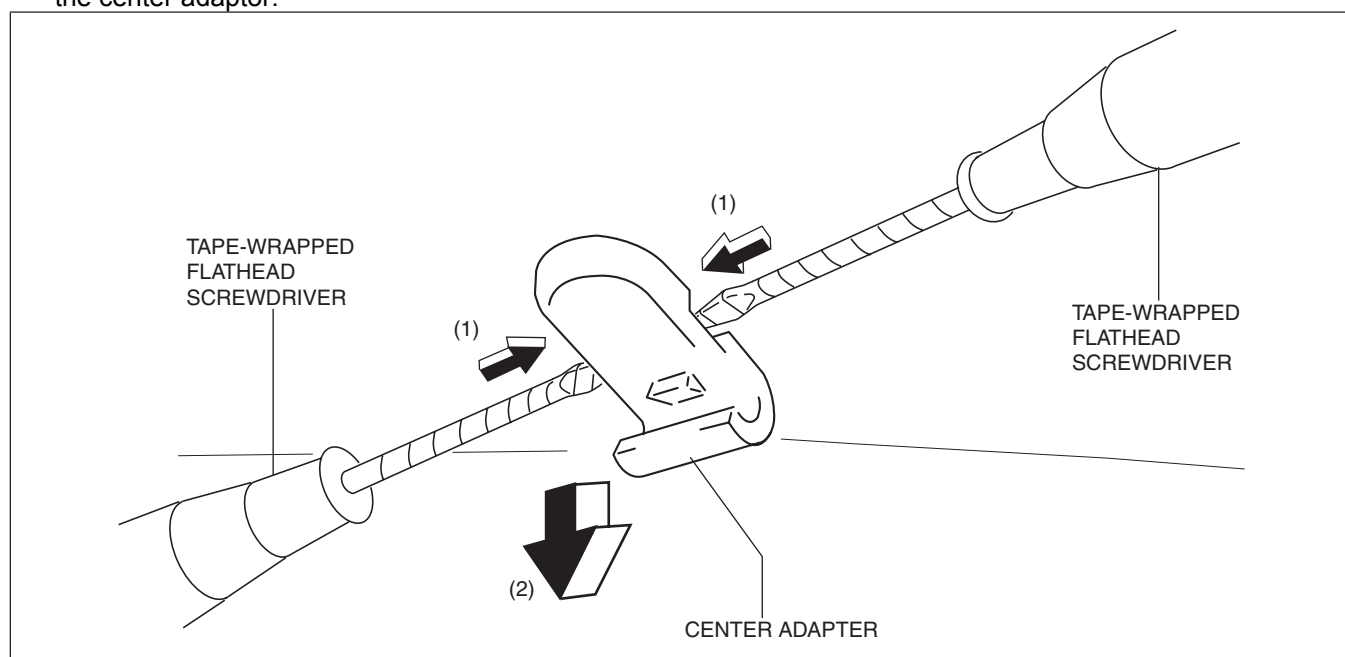

ac5uuw00002062

7. Install in the reverse order of removal.