


i-stop OFF SWITCH INSPECTION [SKYACTIV-G 2.0]

id0140f4888900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0].)
2. Remove the switch panel. (See SWITCH PANEL REMOVAL/INSTALLATION.)
3. Verify that the resistance between cluster switch terminals B and C is as indicated in the table.

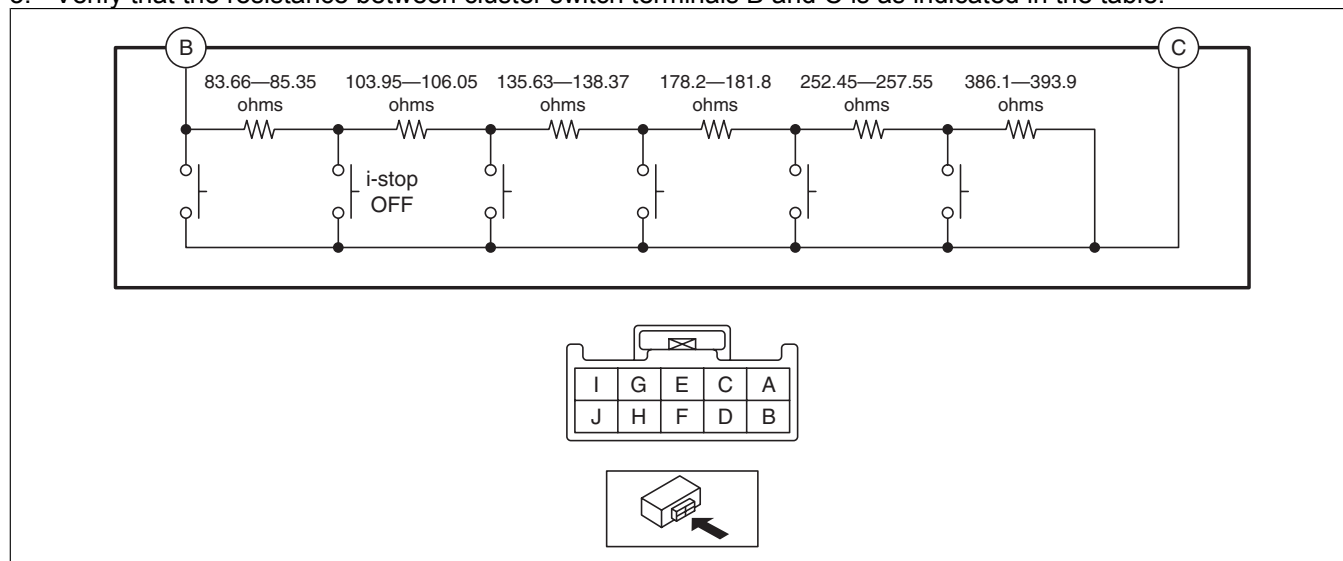


ac5wzw00004598

- If the resistance can be verified as indicated in the table, go to the next step.
- If not as indicated in the table, replace the cluster switch.

Test condition	Resistance (ohms)
i-stop OFF switch pressed	83.66—85.35
All switches released	1,139.99—1,163.02

ac5wzw00004599

4. Apply battery positive voltage to cluster switch terminal J, and connect terminal I to ground.
5. Verify that the LED illuminates.
 - If the LED does not illuminate, replace the cluster switch.

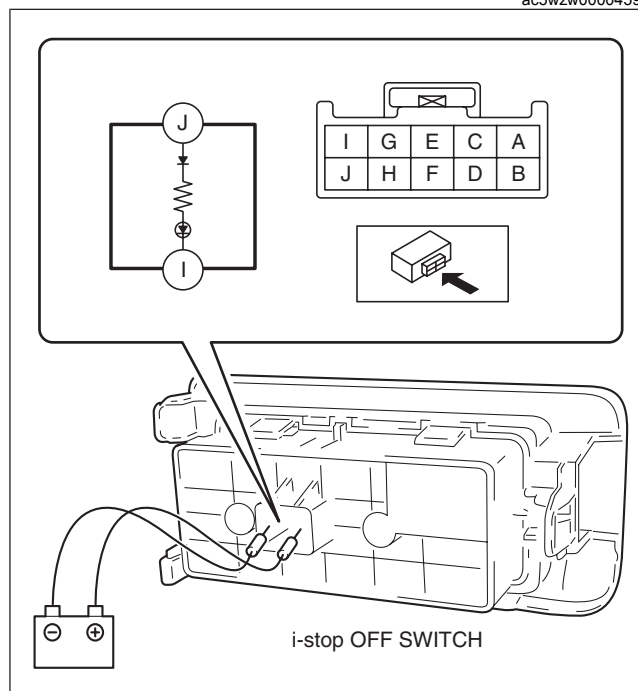

ac5wzw00004600