


TIRE PRESSURE MONITORING SYSTEM SET SWITCH INSPECTION

id021200206000

1. Remove the TPMS set switch. (See TIRE PRESSURE MONITORING SYSTEM SET SWITCH REMOVAL/ INSTALLATION.)
2. Verify that the resistance between the TPMS set switch terminals B and C is as indicated in the table.
 - If not as indicated in the table, replace the TPMS set switch.

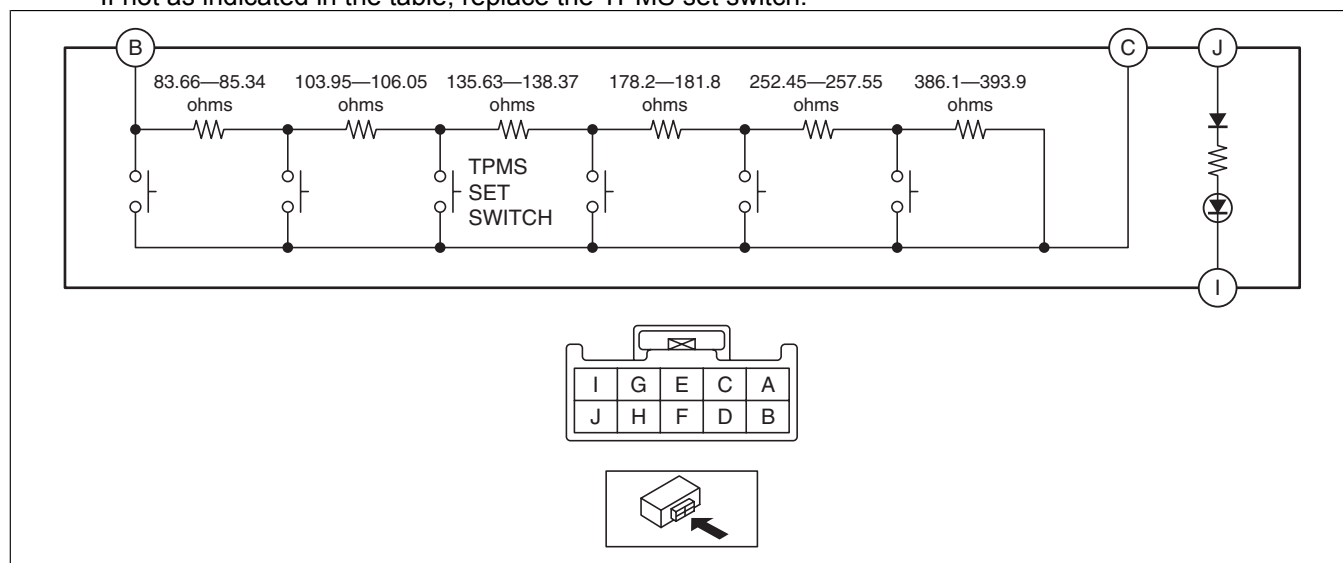

ac5wzw00000249

TPMS set switch specification

Terminal	Test condition	Resistance (ohms)
B—C	TPMS set switch pressed	187.61—191.39
	All switches released	1139.99—1163.01

3. Apply battery voltage to TPMS set switch terminal J, and connect terminal I to ground.
4. Verify that the LED illuminates.
 - If there is any malfunction, replace the TPMS set switch.