


CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0116zb189700

1. Remove the floor under cover. (See FLOOR UNDER COVER REMOVAL/INSTALLATION.)
2. Remove in the order indicated in the table.

1	Evaporative hose
2	Check valve

3. Install in the reverse order of removal.

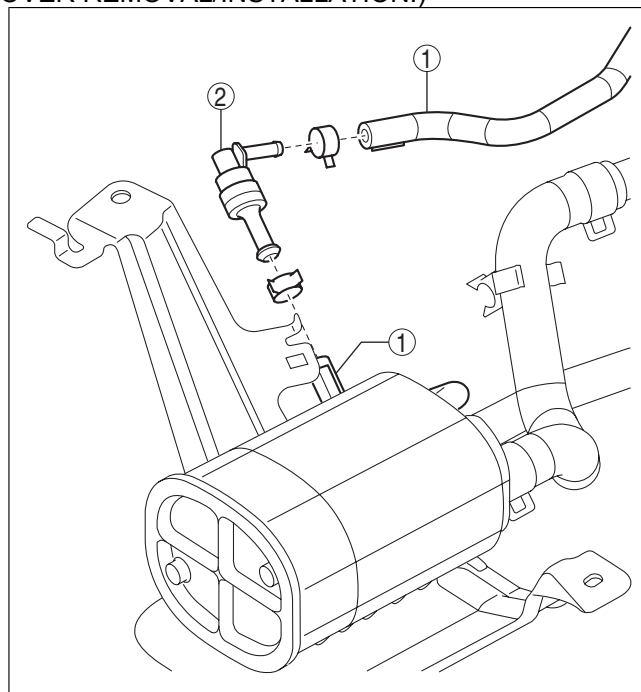

ac5wzw00001381