

RECEIVER/DRIER


id071100290400

Purpose

- The receiver/drier supplies a stable amount of purified, complete liquid refrigerant to the expansion valve.

Function

- The receiver/drier temporarily stores refrigerant and extracts only liquid refrigerant. As a result, outflow to the expansion valve of refrigerant, which could not be liquefied completely by the condenser, is prevented, and the discharge pulsation of the A/C compressor is stopped.
- The refrigerant is purified and moisture is eliminated by desiccant in the receiver/drier and strainer.

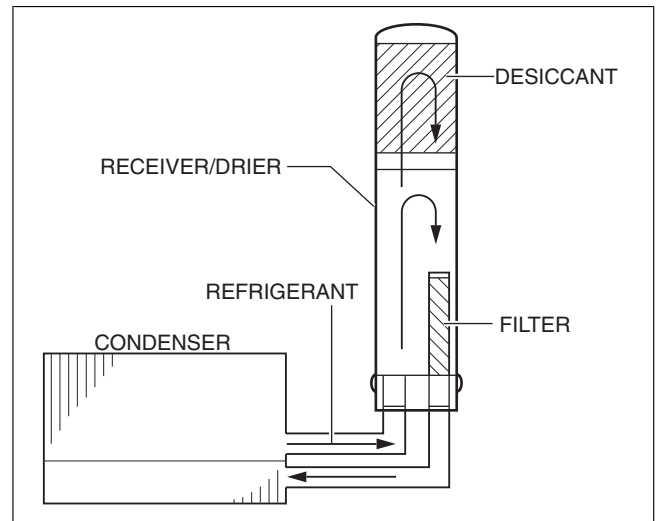

ac5wzn00000772

Fail-safe

- Function not equipped.