


FLYWHEEL INSPECTION

id011000510200


1. Perform the following procedures to inspect the flywheel.
 - If there is any malfunction or it exceeds the maximum specification, replace the flywheel.
 - (1) Inspect the surface that contacts the clutch disc for scratches, nicks, and discoloration.
 - Correct slight scratches and discoloration using sandpaper.
 - (2) Inspect the ring gear teeth for damage and wear.

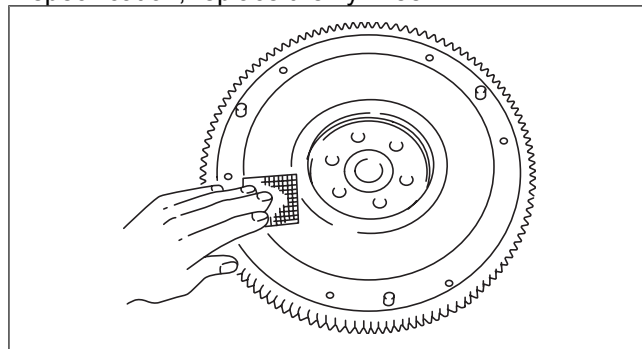

am3uuw00002076

- (3) Measure the runout of the surface that contacts the clutch disc using a dial gauge.

Flywheel maximum runout
0.10 mm {0.0039 in}

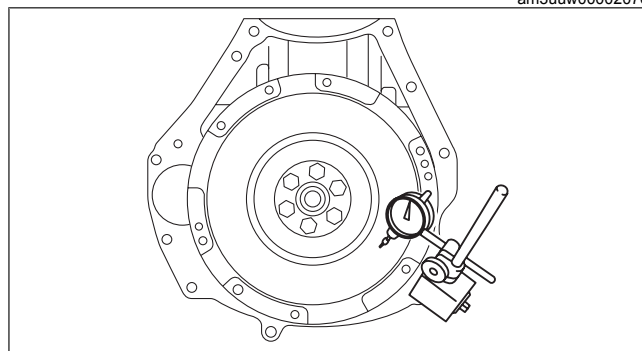

am3uuw00008268