


FORWARD SENSING CAMERA (FSC) COVER REMOVAL/INSTALLATION


id092200033800

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the cover. (See FORWARD SENSING CAMERA (FSC) REMOVAL/INSTALLATION.)
3. Remove the forward sensing camera (FSC). (See FORWARD SENSING CAMERA (FSC) REMOVAL/INSTALLATION.)
4. Pull the FSC cover in the direction of the arrow shown in the figure and detach tab of FSC cover.

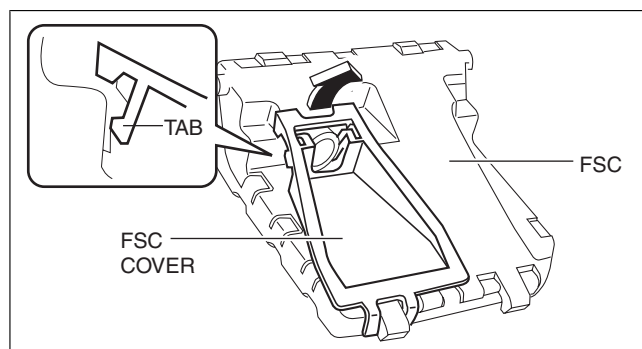

ac5wzw00002496

5. Rotate the FSC cover in the direction of the arrow shown in the figure, remove the FSC cover from FSC hook, and remove the FSC cover.
6. Install in the reverse order of removal.

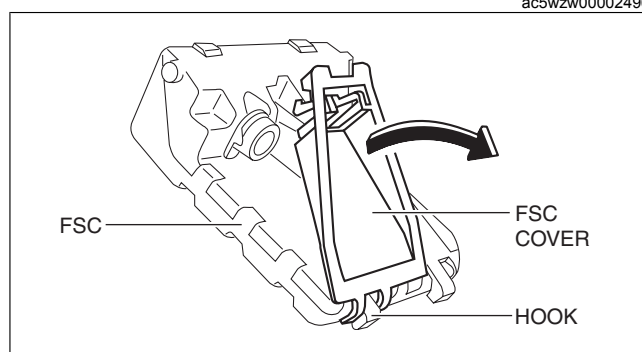

ac5wzw00002497