


LIFTGATE LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION


id091400516900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
 - (2) Liftgate side trim (See LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Liftgate lower trim (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
3. Remove the fastener. (With liftgate latch and lock actuator cover)
4. Remove the liftgate latch and lock actuator cover. (With liftgate latch and lock actuator cover)

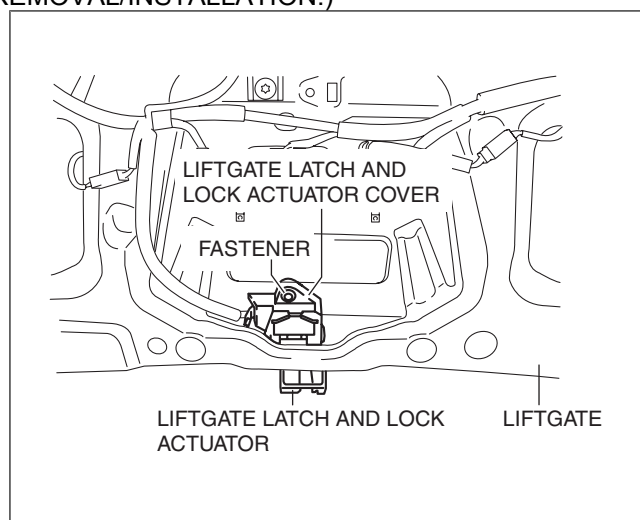


ac5wzw00000940

5. Disconnect the connector.

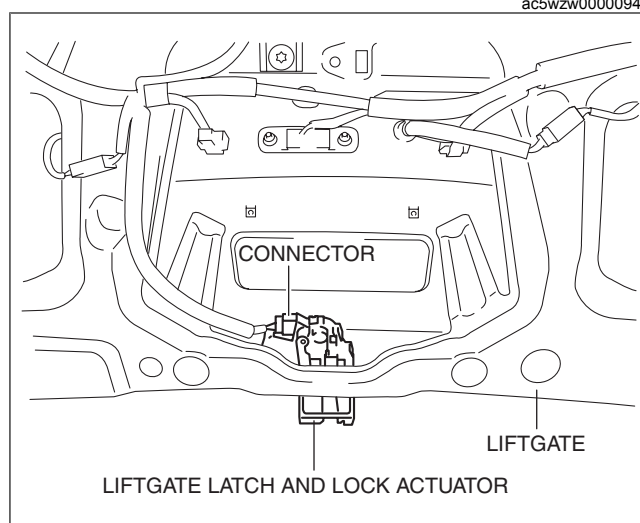

ac5jjw00000059

6. Remove the bolts.
7. Remove the liftgate latch and lock actuator from the liftgate.
8. Install in the reverse order of removal.

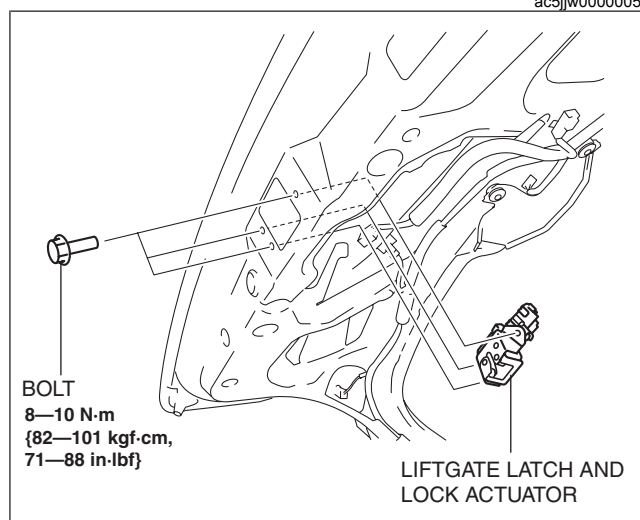

ac5jjw00000060