


## LIFTGATE LOCK STRIKER REMOVAL/INSTALLATION

id091400513000

1. Remove the trunk end trim. (See TRUNK END TRIM REMOVAL/INSTALLATION.)
2. Remove the bolts, then remove the liftgate lock striker.
3. Install in the reverse order of removal.
4. Adjust the liftgate. (See LIFTGATE ADJUSTMENT.)

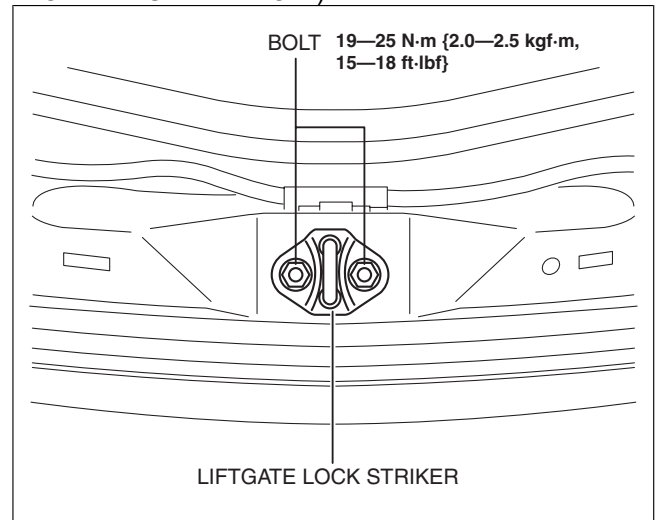

ac5wzw00000268